

ROXIO EASY

VHS TO DVD³ PLUS

ROXIO®

Save Your Treasured VHS Tapes as DVD Movies

Create DVD movies from your VHS tapes and Hi8 or V8 home videos **plus** a whole lot more



Transfer video from VHS, Hi8 and Video8 movies to DVD and preserve your precious memories.

It's a sad fact that your treasured home movies shot on VHS, Hi8 and V8 tapes will degrade over time; and the devices to play these tapes may eventually disappear. Roxio® Easy VHS to DVD 3 Plus makes it easy to digitally preserve your irreplaceable memories for years to come. Take your videos to the next level and enhance them with video noise reduction, colour correction, transition effects and stabilisation of shaky videos.



1 Connect VHS player or camcorder via RCA out to the included USB capture device using RCA cables*. (SCART adapter included)



2 Connect the capture device to your PC's USB port



3 Capture and share on DVD or portable devices

- Make DVDs from your VHS, Hi8 and V8 movies and home videos
- Capture from most analogue camcorders, VCRs or even DVD players
- Capture video at full DVD-quality resolution
- Reduce video noise common to old VHS tapes
- Stabilise shaky home videos
- Improve colour balance and lighting
- Add transitions between videos, trim unwanted content
- Add rolling text credits to movies
- Include 'Hollywood-style' menus on DVDs
- Transfer your videos to portable devices
- Automatically split large movies across multiple discs



BONUS
TRANSFER LPs AND
AUDIO TAPES TO CDs



- Transfer your collection of LPs and tapes to CDs or transfer them to portable players
- Label the songs automatically with title, artist and genre information

Minimum System Requirements:

- Microsoft® Windows 7 Home Premium, Windows Vista® Home Basic (SP1), Windows® XP (SP3 for 32-bit, SP2 for 64-bit)
- Processor and RAM, 1.6 GHz processor and 512 MB RAM or more, or the minimum system requirements of the OS, whichever is higher
- DirectX 9 compatible graphics card or higher, sound card, DVD-ROM drive
- 2 GB free hard drive space for installation
- Windows Media Player 10, 11 or 12
- DVD Writer for DVD
- Internet Explorer 7, 8 or 9
- One available USB 2.0 port
- Minimum screen resolution 1024x768

Specifications:

- High speed connection via USB 2.0 port
- Video inputs: composite video (RCA) and S-Video (mini-DIN)
- Audio inputs: stereo audio (RCA x2)
- Automatic NTSC/PAL detection

**RCA cables not included*

Copyright © 1994 – 2012 Rovi Corporation or its subsidiaries. All rights reserved. Roxio, the DivX logo, and Sonic Solutions are trademarks or registered trademarks owned by Rovi Corporation or its subsidiaries in the United States and other jurisdictions. Microsoft, Windows, Windows 7, Windows XP, Windows Vista and the Windows 7 logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. All other trademarks used are owned by their respective owners. Use of this product is subject to the acceptance of the license agreements included in this package. This product may be protected by one or more US and/or foreign patents owned by Sonic Solutions, LLC, a wholly owned subsidiary of Rovi Corporation.

SKU Code	Product Description	UPC Number	Software Languages	Pack Languages
25100EU	Easy VHS to DVD 3 Plus	6 8796713279 3	E / F / G / I / S / Du	E / F / G / I / S / Du



Windows® 7
Windows Vista®
Windows® XP