


CONTROL PRODUCTS

Start/Stop Push Buttons


| METAL BODIED | PLASTIC BODIED | STYLE |
|--------------|----------------|-------------|
| CCTTRSTWH | - | White Start |
| CCTTRSPBK | - | Black Stop |
| CCTTRONWH | - | White On |
| CCTTROFBK | - | Black Off |

Black Button - Extended Height

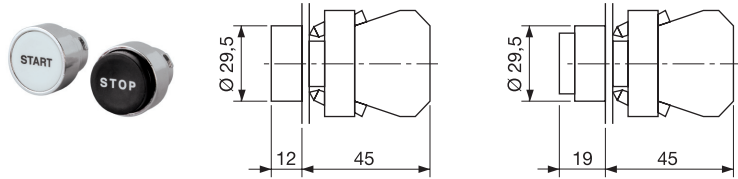


40mm E-stop Key Release

| METAL BODIED | PLASTIC BODIED | COLOUR |
|--------------|----------------|--------|
| CCTTM41LB | CCTPM41LB | Black |
| CCTTM41LR | CCTPM41LR | Red |

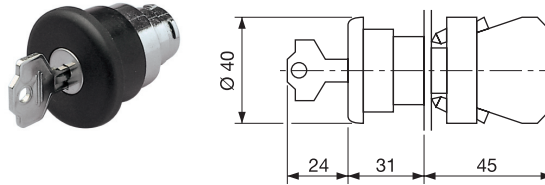


40mm E-stop Twist Release

| METAL BODIED | PLASTIC BODIED | COLOUR |
|--------------|----------------|--------|
| CCTTM40LB | CCTPM40LB | Black |
| CCTTM40LR | CCTPM40LR | Red |

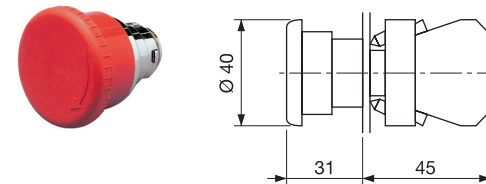


60mm E-stop Twist Release

| METAL BODIED | PLASTIC BODIED | COLOUR |
|--------------|----------------|--------|
| CCTTM60LB | CCTPM60LB | Black |
| CCTTM60LR | CCTPM60LR | Red |

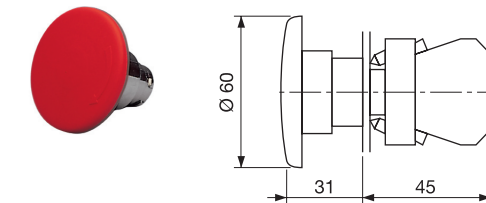

Selector Switch

- Black short lever, 2 and 3 position selector switch
- Maintain & spring return options

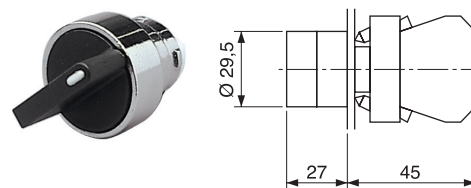

| METAL BODIED | PLASTIC BODIED | POSITIONS | STYLE |
|--------------|----------------|-----------|--|
| CCTTSS211 | CCTPSS211 | 2 | Maintained left & right |
| CCTTSS210 | CCTPSS210 | 2 | Return left |
| CCTTSS311 | CCTPSS311 | 3 | Maintained left, centre & right |
| CCTTSS300 | CCTPSS300 | 3 | Return to centre from left & right |
| CCTTSS301 | CCTPSS301 | 3 | Return to centre from left, maintained right |
| CCTTSS310 | CCTPSS310 | 3 | Return to centre from right, maintained left |