

TYPE 2020 I.R. ILLUMUNATOR REPLACEMENT SEALED BEAM UNIT

Part Number: SR02883



Electrical Specifications

Voltage Rating: 240 VPower Rating: 500 W

Replacement

To open the I.R enclosure, unclip the two toggle latches, release the front cover to expose the bulb. Withdraw the old bulb, if necessary by pressing a coin between the bulb seal and the outer case.

Pull off the two connection from the spade terminals on the rear of the bulb. Connect the new bulb (the connections can be made to either terminal) and push it firmly into the mail case, checking that the filament is horizontal.

Replace the front end and close the toggle latches.

N.B. The bulb filament must be positioned in the horizontal plane, this will ensure the beam pattern is correct and the bulb will survive for its full life.

Periodic Maintenance

I.R filter glass can be cleaned with a mild detergent solution or propriety glass cleaner. Check that all electrical connections are sound and that cable insulation is in good condition. Check that all the cable glands are undamaged and secure. Check that all mechanical fixings are tight. Check the interior of the enclosure for any evidence of water ingress which could necessitate the fitting of replacement seals.