

#### ISL68144

Digital Dual Output, 4-Phase Configurable, PWM Controller with PMBus for Cavium

FN8888 Rev.2.00 Jul 7, 2017

The **ISL68144** is a digital dual output, flexible multiphase  $(X+Y \le 4)$  PWM controller developed to support the latest Cavium CN99xx server class processors. The ISL68144 supports the PMBUS 1.3 specification and is designed to meet the latest Intel server-class transient performance specifications. Either output can be configured to support any desired phase assignments up to a maximum of four phases across the two outputs (X+Y), such as 3+1, 2+2, 2+1, or even a single output operation as a 4+0 configuration. With full digital control, this new generation of controllers ushers in design flexibility by supporting any microprocessor, FPGA, or Digital ASIC rail requirements that include adjustable load setting. The ISL68144 uses Intersil's proprietary linear synthetic digital current modulation scheme to achieve the industry's best combination of transient response and ease of tuning while addressing the challenges of modern multiphase designs.

Device configuration and telemetry monitoring is accomplished using Intersil's intuitive PowerNavigator™ GUI. The ISL68144 device supports on-chip, nonvolatile memory to store various configuration settings that are user-selectable through pin-strap, giving system designers increased power density to configure and deploy multiple configurations. The device supports an automatic phase add/drop feature to allow maximum efficiency across all load ranges. Thresholds for automatic phase add/drop are user-programmable using PowerNavigator.

The ISL68144 supports a comprehensive fault management system to enable the design of highly reliable systems. From a multitiered overcurrent protection scheme to the configurable power-good and output overvoltage/undervoltage fault thresholds and temperature monitoring, almost any need is accommodated.

With minimal external components, easy configuration, robust fault management, and highly accurate regulation capability, implementing a high-performance, multiphase regulator has never been easier.

## **Applications**

- · Networking equipment
- · Telecom and datacom equipment
- · Server and storage equipment
- · Point-of-load power supply (Memory, DSP, ASIC, FPGA)

#### **Features**

- · Advanced linear digital modulation scheme
- Zero latency synthetic current control for excellent HF current balance
- Dual-edge modulation for fastest transient response
- · Auto phase add/drop for excellent load vs efficiency profile
- PMBus 1.3 support
  - Telemetry V<sub>IN</sub>, V<sub>OUT</sub>, I<sub>OUT</sub>, power IN/OUT, temperature, and various fault status registers
  - Up to 2MHz bus interface
- · Flexible phase configuration
  - 4+0, 3+1, 2+2 phase operation
  - Operation using less than four phases between two outputs is also supported
- · Diode braking for overshoot reduction
- Differential remote voltage sensing supports ±0.5% closed loop system accuracy over load, line, and temperature
- Highly accurate current sensing for excellent load line regulation and accurate OCP
  - Supports ISL99227 60A smart power stages
  - Supports DCR sense with integrated temperature compensation
- Comprehensive fault management enables high reliability systems
  - Pulse-by-pulse phase current limiting
  - Total output current protection
  - Output and input OV/UV
  - Open voltage sense detect
  - Black box recording capability for faults
- Intuitive configuration using PowerNavigator
  - NVM to store up to eight configurations
- Pb-Free (RoHS compliant)

## **Related Literature**

- · For a full list of related documents, visit our website
  - ISL68144 product page

# **Table of Contents**

Ordering Information	3
Pin Configuration	3
Functional Pin Descriptions	4
Driver, DrMOS, and Smart Power Stage Recommendations	4
Internal Block Diagram	
Typical Application: 3+1 Configuration with ISL99227 SPS	
Typical Application: 2+2 Configuration with ISL99227 SPS	
Typical Application: 2+2 Configuration with DCR Sensing	
Absolute Maximum Ratings	
Thermal Information	9
Recommended Operating Conditions	9
Electrical Specifications	9
Typical Performance Curves	11
Functional Description	
Overview	
PWM Modulation Scheme	
PMBus Address Selection.	
Phase Configuration	
Automatic Phase Add and Drop	12
Output Voltage Configuration	
Switching Frequency	
Current Sensing	
Temperature Sensing	
Lossless Input Current and Power Sensing	
Voltage Regulation	
Current Feedback	
Power-On Reset (POR)	16
Soft-Start Delay and Ramp Times	
Stored Configuration Selection	
Fault Monitoring and Protection	16
Power-Good Signals	16
Output Voltage Protection	16
Output Current Protection.	
Smart Power Stage OC Fault Detect	
Thermal Monitoring (TWARN) and Protection	
Layout and Design Considerations	
PMBus Operation	20
PMBus Protocol	21
PMBus Command Summary	22
PMBus Use GuidelinesPMBus Data Formats	
PMBus Command Detail	_
Revision History.	
About Intersil	
Package Outline Drawing	47



## **Ordering Information**

PART NUMBER	PART	TEMP. RANGE	PACKAGE	PKG.
(Notes 1, 2, 3)	MARKING	(°C)	(RoHS COMPLIANT)	DWG.#
ISL68144IRAZ	ISL68144 IRZ	-40 to +85	40 Ld 5x5 TQFN	

#### NOTES:


- 1. Add "-T" suffix for 6k unit or "-T7A" suffix for 250 unit tape and reel options. Refer to TB347 for details on reel specifications.
- These Intersil Pb-free plastic packaged products employ special Pb-free material sets, molding compounds/die attach materials and 100% matte tin
  plate plus anneal (e3 termination finish, which is RoHS compliant and compatible with both SnPb and Pb-free soldering operations). Intersil Pb-free
  products are MSL classified at Pb-free peak reflow temperatures that meet or exceed the Pb-free requirements of IPC/JEDEC J STD-020.
- 3. For Moisture Sensitivity Level (MSL), see the product information page for ISL68144. For more information on MSL, see TB363.

**TABLE 1. KEY DIFFERENCES BETWEEN FAMILY OF PARTS** 

PART NUMBER	PHASE CONFIGURATION OUTPUT X/OUTPUT Y	SPECIFICATION SUPPORTED	PACKAGE
ISL68147	X+Y ≤ 7	PMBus	QFN 48 Ld, 6x6mm
ISL68144	X+Y ≤ 4	PMBus	TQFN 40 Ld, 5x5mm
ISL68137	X+Y ≤ 7	PMBus/AVSBus	QFN 48 Ld, 6x6mm
ISL68134	X+Y ≤ <b>4</b>	PMBus/AVSBus	TQFN 40 Ld, 5x5mm
ISL68127	X+Y ≤ 7	PMBus	QFN 48 Ld, 6x6mm
ISL68124	X+Y ≤ 4	PMBus	TQFN 40 Ld, 5x5mm

## **Pin Configuration**

ISL68144 (40 LD TQFN) TOP VIEW

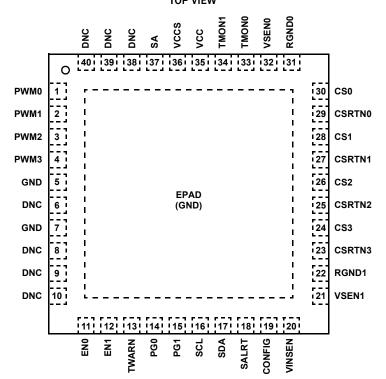

# Functional Pin Descriptions Refer to Table 4 on page 19 for design layout considerations.

PIN NUMBER	PIN NAME	DESCRIPTION
4, 3, 2, 1	PWM[3:0]	Pulse width modulation outputs. Connect these pins to the PWM input pins of 3.3V logic-compatible, Intersil smart power stages, driver IC(s), or power stages.
5, 7	GND	Ground pins. Connect directly to system GND plane.
6, 8, 9, 10, 38, 39, 40	DNC	Do not connect any signals to these pins.
11	ENO	Input pin used for enable control of Output 0. Active high. Connect to ground if not used.
12	EN1	Input pin used for enable control of Output 1. Active high. Connect to ground if not used.
13	TWARN	Thermal warning flag. This open-drain output will be pulled low in the event of a sensed over-temperature at TMON pins without disabling the outputs. Maximum pull-up voltage is $V_{CC}$ .
14	PG0	Open-drain, power-good indicator for Output O. Maximum pull-up voltage is V <sub>CC</sub> .
15	PG1	Open-drain, power-good indicator for Output 1. Maximum pull-up voltage is V <sub>CC</sub> .
16	SCL	Serial clock signal pin for SMBus interface. Maximum pull-up voltage is V <sub>CC</sub> .
17	SDA	Serial data signal pin for SMBus interface. Maximum pull-up voltage is V <sub>CC</sub> .
18	SALRT	Serial alert signal pin for SMBus interface. Maximum pull-up voltage is V <sub>CC</sub> .
19	CONFIG	Configuration ID selection pin. See <u>Table 3 on page 16</u> for more details.
20	VINSEN	Input voltage sense pin. Connect to VIN through a resistor divider (typically 40.2k/10k) with a 10nF decoupling capacitor.
21	VSEN1	Positive differential voltage sense input for Output 1. Connect to positive remote sensing point. Connect to ground if not used.
22	RGND1	Negative differential voltage sense input for Output 1. Connect to negative remote sensing point. Connect to ground if not used.
23, 25, 27, 29	CSRTN[3:0]	The CS and CSRTN pins are current sense inputs to individual phase differential amplifiers. Unused phases
24, 26, 28, 30	CS[3:0]	should have their respective current sense inputs grounded. The ISL68144 supports smart power stage, DCR, and resistor sensing. Connection details depend on the current sense method chosen.
31	RGND0	Negative differential voltage sense input for Output 0. Connect to negative remote sensing point. Connect to ground if not used.
32	VSEN0	Positive differential voltage sense input for Output 0. Connect to positive remote sensing point. Connect to ground if not used.
33	TMONO	Input pin for external temperature measurement at Output O. Supports diode based temperature sensing as well as smart power stage sensing. Refer to <u>"Temperature Compensation" on page 14</u> for more information.
34	TMON1	Input pin for external temperature measurement at Output 1. Supports diode based temperature sensing as well as smart power stage sensing. Refer to <u>"Temperature Compensation" on page 14</u> for more information.
35	vcc	Chip primary bias input. Connect this pin directly to a +3.3V supply with a high quality MLCC bypass capacitor.
36	vccs	Internally generated 1.2V LDO logic supply from VCC. Decouple with 4.7µF or greater MLCC (X5R or better).
37	SA	PMBus address selection pin. See <u>Table 2</u> for more details.
EPAD	GND	Package pad serves as GND return for all chip functions. Connect directly to system GND plane with multiple thermal vias.

# **Driver, DrMOS, and Smart Power Stage Recommendations**

INTERSIL PART NUMBER	QUIESCENT CURRENT (mA)	GATE DRIVE VOLTAGE (V)	NUMBER OF DRIVERS	COMMENTS
ISL99227	4.85	5	Single	60A, 5x5 smart power stage
ISL99140	0.19	5	Single	40A, 6x6 DrMOS
ISL6596	0.19	5	Single	Connect ISL6596 VCTRL to 3.3V



# **Internal Block Diagram**

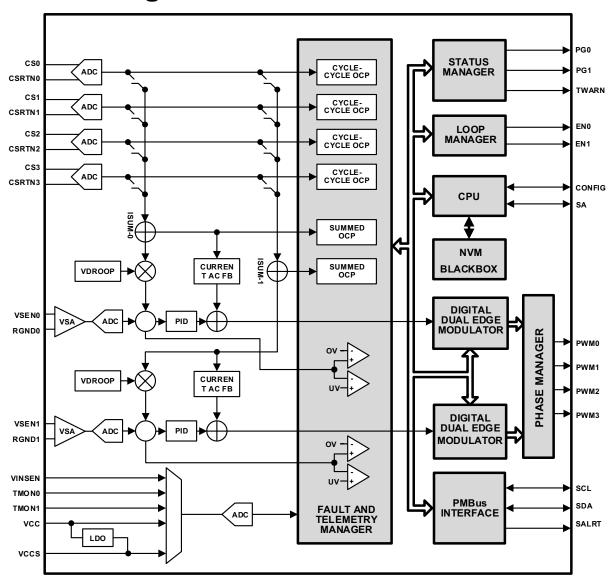


FIGURE 1. INTERNAL BLOCK DIAGRAM

# Typical Application: 3+1 Configuration with ISL99227 SPS

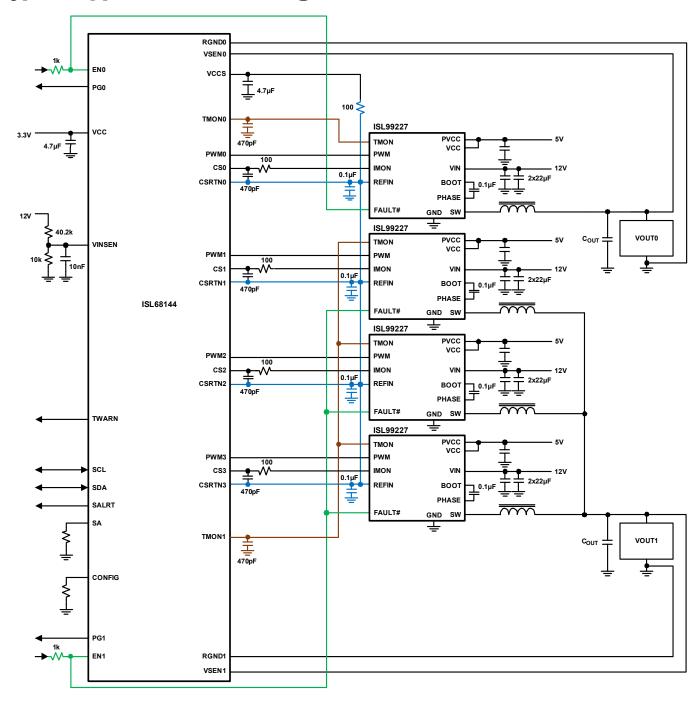


FIGURE 2. TYPICAL APPLICATION: 3+1 CONFIGURATION WITH ISL99227 SPS

Page 6 of 47

# Typical Application: 2+2 Configuration with ISL99227 SPS

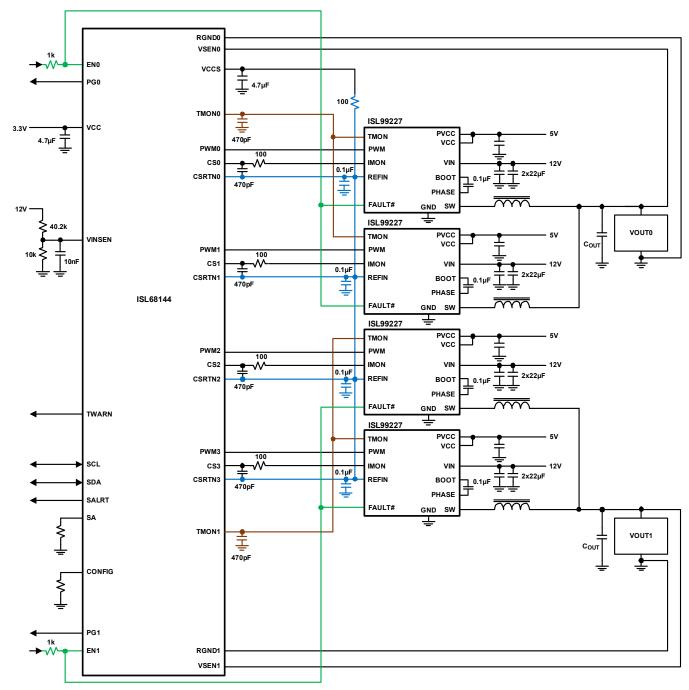


FIGURE 3. TYPICAL APPLICATION: 2+2 CONFIGURATION WITH ISL99227 SPS

# **Typical Application: 2+2 Configuration with DCR Sensing**

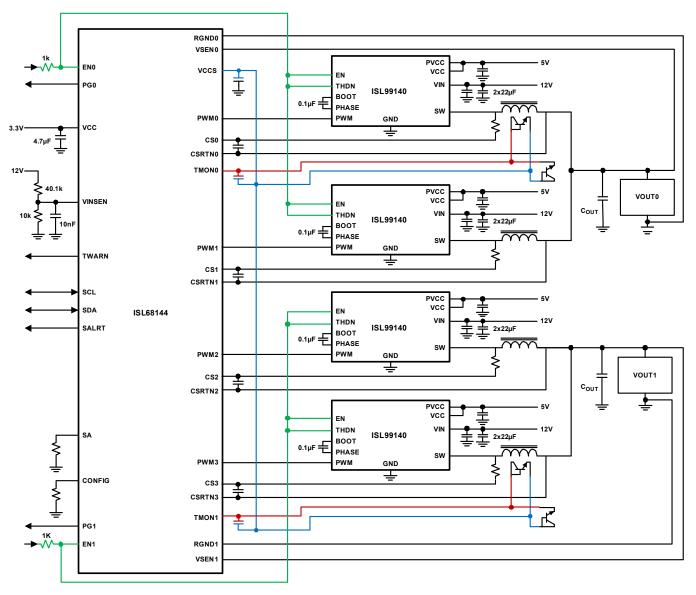


FIGURE 4. TYPICAL APPLICATION: 2+2 CONFIGURATION WITH DCR SENSING

### **Absolute Maximum Ratings**

VCC	+4.3V
VCCS	+1.6V
All Other Pins(GND - 0.3V) to	o VCC + 0.3V
ESD Rating:	
Human Body Model (Tested per JS-001-2014)	2kV
Charged Device Model (Tested per JS-001-2014)	1kV
Latch-lin (Tested per IESD-78D: Class 2 Level A)	100mA

#### **Thermal Information**

Thermal Resistance (Notes 4, 5)	$\theta_{JA}$ (°C/W)	$\theta_{JC}$ (°C/W)
40 Ld 5x5 TQFN Package	30	1.2
Maximum Junction Temperature		+150°C
Maximum Storage Temperature Range	6	5°C to +150°C
Pb-Free Reflow Profile		see <u>TB493</u>

## **Recommended Operating Conditions**

Supply Voltage, V <sub>CC</sub>	. +3.3V ±5%
Ambient Temperature40°	°C to +85°C
Output Voltage	0V to 3.05V

CAUTION: Do not operate at or near the maximum ratings listed for extended periods of time. Exposure to such conditions may adversely impact product reliability and result in failures not covered by warranty.

#### NOTES:

- 4. θ<sub>JA</sub> is measured in free air with the component mounted on a high-effective thermal conductivity test board with "direct attach" features. See <u>TB379</u>.
- 5. For  $\theta_{\mbox{\scriptsize JC}}$  the "case temp" location is the center of the exposed metal pad on the package underside.

**Electrical Specifications** Recommended operating conditions, V<sub>CC</sub> = 3.3V, unless otherwise specified. **Boldface limits apply across the operating temperature range -40°C to +85°C.** 

PARAMETER	TEST CONDITIONS	MIN (Note 7)	TYP	MAX (Note 7)	UNIT
V <sub>CC</sub> SUPPLY CURRENT		1	•		
Nominal Supply Current	$V_{CC} = 3.3 \text{VDC}$ ; EN1/2 = $V_{IH}$ , $f_{SW} = 400 \text{kHz}$		63		mA
Shutdown Supply Current	V <sub>CC</sub> = 3.3VDC; EN1/2 = 0V, no switching		11.5		mA
VCCS LDO SUPPLY				1	
Output Voltage		1.20	1.25	1.30	٧
Maximum Current Capability	Excluding internal load	50			mA
POWER-ON RESET AND INPUT VOLTAGE LOCKOUT		<u> </u>			
V <sub>CC</sub> Rising POR Threshold			2.7	2.9	٧
V <sub>CC</sub> Falling POR Threshold		1.0			٧
Enable (ENO and EN1) Input High Level		2.55			٧
Enable (ENO and EN1) Input Low Level				0.8	
Enable (ENO and EN1) Input LOW to HIGH Ramp Delay (TON_DELAY)		200			μs
POR to Initialization Complete Time			30	40	ms
V <sub>CC</sub> Rising POR Threshold			2.7	2.9	٧
OUTPUT VOLTAGE CHARACTERISTICS (Note 6)					
Output Voltage Adjustment Range		0.25		3.05	٧
Output Voltage Set-Point Accuracy	Set-point 0.8V to 3.05V	-0.5		0.5	%
	Set-point 0.25V to <0.8V	-5		5	m۷
VOLTAGE SENSE AMPLIFIER				1	
Open Sense Current	Only during open pin check of initialization		22		μΑ
Input Impedance (VSEN - RGND)			200		kΩ
Maximum Common-Mode Input			V <sub>CC</sub> - 0.2		V
Maximum Differential Input (VSEN - RGND)				3.05	٧



**Electrical Specifications** Recommended operating conditions,  $V_{CC} = 3.3V$ , unless otherwise specified. Boldface limits apply across the operating temperature range -40 °C to +85 °C. (Continued)

PARAMETER	TEST CONDITIONS	MIN (Note 7)	ТҮР	MAX (Note 7)	UNIT
CURRENT SENSE AND OVERCURRENT PROTECTION		"	'		ı
Maximum Common-Mode Input (SPS mode)	CSRTNx - GND		1.6		V
Maximum Common-Mode Input (DCR mode)	CSRTNx - GND		3.3		V
Current Sense Accuracy	ISEN to ADC accuracy	-2		2	%
Average Overcurrent Threshold Resolution			0.1		Α
DIGITAL DROOP		-1			
Droop Resolution			0.01		mV/A
OSCILLATORS					
Accuracy of Switching Frequency Setting	When set to 500kHz	480	500	520	kHz
Accuracy of Switching Frequency Setting		-4		+4	%
Switching Frequency Range		200		1000	kHz
SOFT-START RATE AND VOLTAGE TRANSITION RATE		-	1		1
Minimum Soft-Start Ramp Rate	Programmable minimum rate		20		μs
Maximum Soft-Start Ramp Rate	Programmable maximum rate		10		ms
Soft-Start Ramp Rate Accuracy		-4		4	%
Minimum Transition Rate	Programmable minimum rate		0.1		mV/μs
Maximum Transition Rate	Programmable maximum rate		100		mV/μs
Transition Rate Accuracy		-4		4	%
РWM ОИТРИТ					
PWMx Output High Level	I <sub>OUT</sub> = 4mA	V <sub>CC</sub> - 0.4			V
PWMx Output Low Level	I <sub>OUT</sub> = 4mA			0.4	V
PWMx Output Tri-State I <sub>OL</sub>	V <sub>OH</sub> = V <sub>CC</sub>			1	μΑ
PWMx Output Tri-State I <sub>OH</sub>	V <sub>OL</sub> = 0V	-1			μΑ
THERMAL MONITORING AND PROTECTION					
Temperature Sensor Range		-50		150	°C
Temperature Sensor Accuracy	TMON to ADC accuracy	-4.5		4.5	%
TWARN Output Low Impedance		4	9	13	Ω
TWARN Hysteresis			3		°C
POWER-GOOD AND PROTECTION MONITORS			'		
PG Output Low Voltage	I <sub>OUT</sub> = 8mA load			0.4	V
PG Leakage Current	With pull-up resistor externally connected to VCC		0.5	1	μΑ
Overvoltage Protection Threshold Resolution			1		mV
Undervoltage Protection Threshold Resolution			1		mV
Overvoltage Protection Threshold When Disabled			V <sub>CC</sub> - 0.2		V
INPUT VOLTAGE SENSE		•			•
Input Voltage Accuracy	VINSEN to ADC accuracy	-2.5		2.5	%
Input Voltage Protection Threshold Resolution			1		mV



**Electrical Specifications** Recommended operating conditions,  $V_{CC} = 3.3V$ , unless otherwise specified. Boldface limits apply across the operating temperature range -40 °C to +85 °C. (Continued)

PARAMETER	TEST CONDITIONS	MIN (Note 7)	TYP	MAX (Note 7)	UNIT
SMBus/PMBus					
SALERT, SDA Output Low Level	I <sub>OUT</sub> = 4mA			0.4	V
SCL, SDA Input High Level		1.55			V
SCL, SDA Input Low Level				0.8	
SCL, SDA Input Hysteresis			2		mV
SCL Frequency Range		0.05		2	MHz

#### NOTES:

- 6. These parts are designed and adjusted for accuracy with all errors in the voltage loop included.
- 7. Compliance to datasheet limits is assured by one or more methods: production test, characterization, and/or design.

# **Typical Performance Curves**

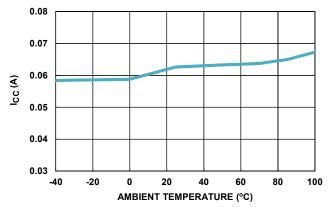


FIGURE 5. NOMINAL SUPPLY CURRENT vs TEMPERATURE

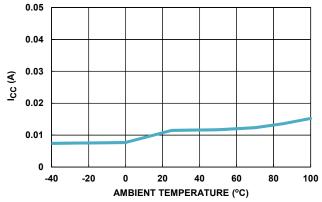


FIGURE 6. SHUTDOWN SUPPLY CURRENT vs TEMPERATURE

## **Functional Description**

#### **Overview**

The ISL68144 is a digital dual output, 4-phase PWM controller that can be programmed for a single output 4+0, dual output 3+1, or 2+2 phase operation. Operation using less than four phases between two outputs is also supported. Existing digital multiphase solutions use analog comparator-based schemes (nonlinear) to bolster the inadequate transient response common to many digital multiphase solutions. The ISL68144 uses a linear voltage regulation scheme to address transient loads. As a result, it is much easier for users to configure and validate their designs when compared with nonlinear schemes. By combining a proprietary low noise and zero latency digital current sense scheme with cutting edge digital design techniques, Intersil is able to meet transient demands without resorting to nonlinear schemes. In addition, the ISL68144 can store up to eight user configurations in NVM and allows the user to select the desired configuration through pin-strap (CONFIG). The result is a system that is easy to configure and deploy.

A number of performance enhancing features are supported in the ISL68144. These include diode braking, automatic phase dropping, DCR/resistor/smart power stage current sense support, load line regulation, and multiple temperature sensing options.

To facilitate configuration development, PowerNavigator provides a step-by-step arrangement for setup and parametric adjustment. After a configuration has been set, the user can employ PowerNavigator to monitor telemetry or use a direct PMBus interface based on the supported command set.

#### PWM Modulation Scheme

The ISL68144 uses Intersil's proprietary linear synthetic current modulation scheme to improve transient performance. This is a unique, constant frequency, dual-edge PWM modulation scheme with both PWM leading and trailing edges being independently moved to give the best response to transient loads. Current balance is an inherent part of the regulation scheme. The modulation scheme is capable of overlapping pulses if the load profile demands such operation. In addition, the modulator is capable of adding or removing pulses from a given cycle in response to regulation demands while still managing maximum average frequency to safe levels. For DC load conditions, the operating frequency is constant.

#### **PMBus Address Selection**

When communicating with multiple PMBus devices on a single bus, each device must have its own unique address so the host can distinguish between the devices. The device address can be set using a 1% resistor on the SA pin according to the pin-strap options listed in Table 2.

TABLE 2. RESISTOR VALUES TO ADDRESS MAPPING

R SA (Ω)	PMBus ADDRESS	R SA (Ω)	PMBus ADDRESS
0	60h	1500	52h
180	63h	1800	53h
330	66h	2200	56h

TABLE 2. RESISTOR VALUES TO ADDRESS MAPPING (Continued)

R SA (Ω)	PMBus ADDRESS	R SA (Ω)	PMBus ADDRESS
470	67h	2700	57h
680	42h	3300	5Ah
820	43h	3900	5Bh
1000	46h	4700	5Eh
1200	47h	5600	5Fh

#### **Phase Configuration**

The ISL68144 supports up to two regulated outputs through seven configurable phases. Either output is capable of controlling up to seven phases in any arbitrary mix. Phase assignments are accomplished using PowerNavigator.

Although the device supports arbitrary phase assignment, it is good practice to assign phases to Output 1 in descending sequential numerical order starting from Phase 3. For example, a 3-phase rail could consist of Phases 3, 2, and 1. For Output 0, phases should be assigned starting from Phase 0 in ascending sequential numerical order.

#### **Automatic Phase Add and Drop**

To produce the most optimal efficiency across a wide range of output loading, the modulator supports automatic dropping or adding of phases. Use of automatic phase dropping is optional. If automatic phase dropping is enabled, the number of active phases at any time is determined solely by load current. During operation, phases of Output 1 will drop beginning with the lowest phase number assigned. Phase dropping begins with the highest assigned phase number. Figure 7 illustrates the typical characteristic of efficiency vs load current vs phase count.

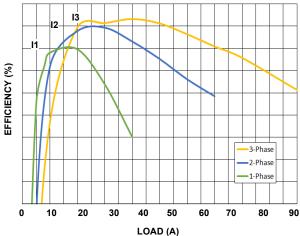


FIGURE 7. EFFICIENCY vs PHASE NUMBER

Phases are dropped one at a time with a user-programmed drop delay between drop events. As an example, suppose the delay is set to 1ms and three phases are active. If the load suddenly drops to a level needing only one phase, the ISL68144 will begin by dropping a phase after 1ms. An additional phase will be dropped each 1ms thereafter until only one phase remains.



In addition to the described load current add/drop thresholds, the fast phase add function provides a very rapid response to transient load conditions. This feature continuously monitors the system regulation error and if it exceeds the user set threshold, all dropped phases will be readied for use. In this way, there is no delay if all phases are needed to support a load transient. The fast phase add threshold is set in PowerNavigator. The output current threshold for adding and dropping phases can also be configured.

To ensure dropped phases have sufficient boot capacitor charge to turn on the high-side MOSFET after a long disable period, a boot refresh circuit turns on the low-side MOSFET of each dropped phase to refresh the boot capacitor. The frequency of the boot refresh is programmable using PowerNavigator.

#### **Output Voltage Configuration**

Output voltage set points and thresholds for each output can be configured using PowerNavigator. Parameters such as output voltage, V<sub>OUT</sub> margin high/low and V<sub>OUT</sub> OV/UV fault thresholds can be configured with GUI. Additionally, output voltage and margin high/low can be adjusted during regulation through the PMBus commands VOUT\_COMMAND, VOUT\_MARGIN\_HIGH, and VOUT\_MARGIN\_LOW for further tuning. The following V<sub>OUT</sub> relationships must be maintained for correct operation: VOUT\_OV\_FAULT\_LIMIT > VOUT\_COMMAND (VOUT\_MARGIN\_HIGH and VOUT\_MARGIN\_LOW, if used) > VOUT\_UV\_FAULT\_LIMIT. Additionally, the V<sub>OUT</sub> commands are bounded by VOUT\_MAX and VOUT\_MIN to provide protection against incorrect set points being sent to the device.

#### **Switching Frequency**

The switching frequency is user-configurable over a range of  $200 \, \text{kHz}$  to  $1 \, \text{MHz}$ .

### **Current Sensing**

The ISL68144 supports DCR, resistor, and smart power stage current sensing. Connection to the various sense elements is accomplished through the CS and CSRTN pins. Current sensing inputs are high impedance differential inputs to reject noise and ground related inaccuracies.

To accommodate a wide range of effective sense resistance, information about the effective sense resistance and required, per-phase current capability is used by the GUI to properly configure the current sense circuitry.

#### **INDUCTOR DCR SENSING**

DCR sensing takes advantage of the fact that an inductor winding has a resistive component (DCR) that will drop a voltage proportional to the inductor current. Figure 8 shows that the DCR is treated as a lumped element with one terminal inaccessible for measurement. Fortunately, a simple R-C network as shown in Figure 9 is capable of reproducing the hidden DCR voltage. By simply matching the R-C time constant to the L/DCR time constant, it is possible to precisely recreate the DCR voltage across the capacitor. This means that  $V_{DCR}(t) = V_{C}(t)$ , thus preserving even the high frequency characteristic of the DCR voltage.

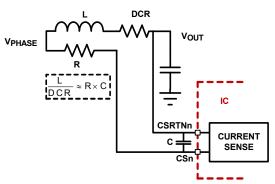


FIGURE 8. DCR SENSING CONFIGURATION

Modern inductors often have such low DCR values that the resulting signal is <10mV. To avoid noise problems, care must be taken in the PCB layout to properly place the R-C components and route the differential lines between controller and inductor. Figure 8 shows one PCB design method that places the R component near the inductor V<sub>PHASE</sub> and the C component very close to the IC pins. This minimizes routing of the noisy V<sub>PHASE</sub> and maximizes filtering near the IC. The lines between the inductor and IC should be routed as a pair on a single layer directly to the controller. Care must be taken to avoid routing the pair near any switching signals such as Phase or PWM. This is the method used by Intersil on evaluation board designs.

This method senses the resistance of a metal winding where the DCR value will increase with temperature. This must be compensated or the sensed (and reported) current will increase with temperature. To compensate for the temperature effect, the ISL68144 provides temperature sensing options and an internal methodology to apply the correction.

#### **RESISTIVE SENSING**

For more accurate current sensing, a dedicated current sense resistor, R<sub>SENSE</sub>, in series with each output inductor can serve as the current sense element. However, this technique reduces the overall converter efficiency due to the additional power loss on the current sense element, R<sub>SENSE</sub>.

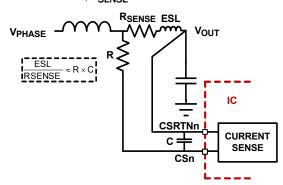


FIGURE 9. SENSE RESISTOR IN SERIES WITH INDUCTOR

A current sensing resistor has a distributed parasitic inductance, known as Equivalent Series Inductance (ESL), typically less than 4nH. Consider the ESL as a separate lumped quantity, as shown in Figure 9. The phase current  $I_L$ , flowing through the inductor, will also pass through the ESL. Similar to DCR sensing described previously, a simple R-C network across the current sense



resistor extracts the  $R_{SENSE}$  voltage. Simply match the ESL/ $R_{SENSE}$  time constant to the R-C time constant.

Figure 10 shows the sensed waveforms with and without matching RC when using resistive sense. The PCB layout should be treated similarly to that described for DCR sense.

 


FIGURE 10. VOLTAGE ACROSS R WITH AND WITHOUT RC

#### L/DCR OR ESL/R<sub>SEN</sub> MATCHING

Assuming the compensator design is correct, Figure 11 shows the expected load transient response waveforms if L/DCR or ESL/R<sub>SEN</sub> is matching the R-C time constant. When the load current  $I_{OUT}$  has a square change, the output voltage  $V_{OUT}$  also has a square response, except for the potential overshoot at load release. However, there is always some uncertainty in the true parameter values involved in the time constant matching and therefore fine-tuning is generally required.

If the R-C time constant is too large or too small,  $V_C(t)$  will not accurately represent real-time  $I_{OUT}(t)$  and will worsen the transient response. Figure 12 shows the load transient response when the R-C timing constant is too small. In this condition,  $V_{OUT}$  will sag excessively upon load insertion and might create a system failure or early overcurrent trip. Figure 13 shows the transient response when the R-C time constant is too large.  $V_{OUT}$  is sluggish in drooping to its final value. Use these general guides if fine-tuning is needed.

 


FIGURE 11. DESIRED LOAD TRANSIENT RESPONSE WAVEFORMS

 


FIGURE 12. LOAD TRANSIENT RESPONSE WHEN R-C TIME CONSTANT IS TOO SMALL

 


FIGURE 13. LOAD TRANSIENT RESPONSE WHEN R-C TIME CONSTANT IS TOO LARGE

#### **SPS CURRENT SENSING**

SPS current sense is accomplished by sensing each SPS IMON output individually using VCCS as a common reference. Connect all SPS IREF input pins and all ISL68144 CSRTNx input pins together and tie them to VCCS, then connect the SPS IMONx output pins to the corresponding ISL68144 CSx input pins. The signals should be run as differential pairs from the SPS back to the ISL68144.

#### **Temperature Sensing**

The ISL68144 supports temperature sensing through BJT or smart power stage sense elements. Support for BJT sense elements uses the well known delta Vbe method and allows up to two sensors (MMBT3906 or similar) on each temperature sense input, TMON0 and TMON1. Support for smart power stage uses a linear conversion algorithm and allows one sensor reading per pin. The conversion from voltage to temperature for smart power stage sensing is user-programmable using PowerNavigator.

The SPS temperature sensing measures the temperature dependent voltage output on the SPS TMON pin. All of the SPS devices attached to the Output 0 rail have their TMON pins connected to the ISL68144 TMON0 pin. All of the SPS devices attached to the Output 1 rail have their TMON pins connected to the ISL68144 TMON1 pin. The reported temperature is that of the highest temperature SPS of the group.

In addition to the external temperature sense, the IC senses its own die temperature, which can be monitored using PowerNavigator.

Sensed temperature is used in the system for faults, telemetry, and temperature compensation of sensed current.

#### **Temperature Compensation**

The ISL68144 supports inductor DCR sensing, which generally requires temperature compensation due to the copper wire used to form inductors. Copper has a positive temperature coefficient of approximately 0.39%/°C. Because the voltage across the inductor is sensed for the output current information, the sensed current has the same positive temperature coefficient as the inductor DCR.

Compensating current sense for temperature variation generally requires that the current-sensing element temperature and its temperature coefficient be known. Although the temperature coefficient is generally obtained easily, actual current sense element temperature is nearly impossible to measure directly. Instead, a temperature sensor (a BJT for the ISL68144) placed near the inductors is measured and the current sense element (DCR) temperature is calculated from that measurement. Calculating current sense element temperature is equivalent to applying gain and offset corrections to the temperature sensor measurement. The ISL68144 supports both corrections.

Figure 14 depicts the block diagram of temperature compensation. A BJT placed near the inductors used for DCR sensing is monitored by the IC using the well known delta Vbe method of temperature sensing. T<sub>SENSE</sub> is the direct measured temperature of the BJT. Because the BJT is not directly sensing the DCR, corrections must be made so that T<sub>DCR</sub> reflects the true



DCR temperature. Corrections are applied according to the relationship shown in <u>Equation 1</u>, where  $k_{SLOPE}$  represents a gain scaling and  $T_{OFFSET}$  represents an offset correction. The designer can use PowerNavigator to provide the parameters:

$$T_{DCR} = k_{SLOPE} \cdot T_{SENSE} + T_{OFFSET}$$
 (EQ. 1)

After  $T_{DCR}$  has been determined, the compensated DCR value can be determined according to Equation 2, where DCR<sub>25</sub> is the DCR at +25°C and  $T_C$  is the temperature coefficient of copper (3900 ppm/°C).  $T_{DCR} = T_{ACTUAL}$  here:

$$DCR_{CORR} = DCR_{25} \bullet (1 + T_C \bullet (T_{ACTUAL} - 25))$$
 (EQ. 2)

Thus, the temperature compensated DCR is now used to determine the actual value of current in the DCR sense element.

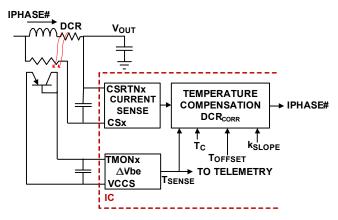


FIGURE 14. BLOCK DIAGRAM OF TEMPERATURE COMPENSATION

In the physical PCB design, the temperature sense diode (BJT) is placed close to the inductor of the phase that is never dropped during automatic phase drop operation. Additionally, a filter capacitor no larger than 500pF should be added near the IC between each TEMPx pin and VCCS as shown in Figure 15.

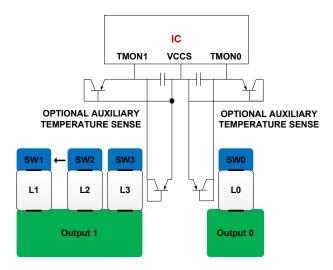


FIGURE 15. RECOMMENDED PLACEMENT OF TEMPERATURE SENSORS

### **Lossless Input Current and Power Sensing**

Input current telemetry is provided through an input current synthesizer. By using the IC's ability to precisely determine its operational conditions, input current can be synthesized to a high degree of accuracy without the need for a lossy sense resistor. Fine-tuning of offset and gain are provided for in the GUI. Note that input current sense fine-tuning must be done after output current sense setup is finalized. With a precise knowledge of input current and voltage, input power can be computed.

Input current and power telemetry is accessed through PMBus and easily monitored in PowerNavigator.

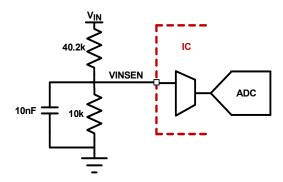


FIGURE 16. INPUT VOLTAGE SENSE CONFIGURATION

#### **Voltage Regulation**

Output voltage is sensed through the remote sense differential amplifier and digitized. From this point, the regulation loop is entirely digital. Traditional PID controls are used in conjunction with several enhanced methods to compensate the voltage regulation loop and tune the transient response.



#### **Current Feedback**

Current feedback in a voltage regulator is often used to ease the stability design of the voltage feedback path. Additionally, many microprocessors require the voltage regulator to have a controlled output resistance (known as load line or droop regulation) and this is accomplished using current feedback.

For applications requiring droop regulation, the designer simply specifies the output resistance desired using PowerNavigator.

Current feedback stability benefits are available for rails that do not specify droop regulation such as system agent. For these applications, the designer can enable the AC current feedback in the GUI. With this configuration, the DC output voltage will be steady regardless of load current.

#### **Power-On Reset (POR)**

Initialization of the ISL68144 begins after  $V_{CC}$  crosses its rising POR threshold. When POR conditions are met, the internal 1.2V LDO is enabled and basic digital subsystem integrity checks begin. During this process, the controller will load the selected user configuration from NVM as indicated by the CONFIG pin resistor value, read  $V_{IN}$  UVLO thresholds from memory, and start the telemetry subsystem. With telemetry enabled,  $V_{IN}$  can be monitored to determine when it exceeds its user-programmable, rising UVLO threshold. After  $V_{CC}$  and  $V_{IN}$  satisfy their respective voltage conditions, the controller is in its shutdown state. It will transition to its active state and begin soft-start when the state of the ENO/EN1 command is at start-up. While in shutdown mode, the PWM outputs are held in a high-impedance state to ensure the drivers remain off.

#### **Soft-Start Delay and Ramp Times**

It might be necessary to set a delay from when an enable signal is received until the output voltage starts to ramp to its target value. In addition, the designer might want to precisely set the time required for an output to ramp to its target value after the delay period has expired. These features can be used as part of an overall inrush current management strategy or to precisely control how fast a load IC is turned on. The ISL68144 gives the system designer several options for precisely and independently controlling both the delay and ramp time periods. The soft-start delay period begins when the EN pin is asserted and ends when the delay time expires.

The soft-start delay and ramp-up/down times can be configured using PowerNavigator. The device needs approximately  $200\mu s$  after enable to initialize before starting to ramp up. When the soft-start ramp period is set to 0ms, the output ramps up as quickly as the output load capacitance and loop settings allow. It is recommended to set the ramps to a non-zero value to prevent inadvertent fault conditions due to excessive inrush current.

#### **Stored Configuration Selection**

As many as eight configurations can be stored and used at any time using the on-board nonvolatile memory. Configurations are assigned an identifier number between 0 and 7 at power-up. The device loads the configuration indicated by the 1% resistor value detected on the CONFIG pin. Resistor values are used to indicate one of the eight possible configurations.

<u>Table 3</u> provides the resistor value corresponding to each configuration identifier.

**TABLE 3. RESISTOR VALUES TO CONFIGURATION MAPPING** 

R CONFIG (Ω)	CONFIG ID
6800	0
1800	1
2200	2
2700	3
3300	4
3900	5
4700	6
5600	7

Only the most recent configuration with a given number can be loaded. The device supports a total of eight stored operations. As an example, a configuration with the identifier 0 could be saved eight times or configurations with all eight identifiers could be stored one time each for a total of eight save operations.

PowerNavigator provides a simple interface to save and load configurations.

## **Fault Monitoring and Protection**

The ISL68144 actively monitors temperature, input voltage, output voltage, and output current to detect and report fault conditions. Fault monitors trigger configurable protective measures to prevent damage to a load. The power-good indicators, PG0/PG1, are provided for linking to external system monitors.

A high level of flexibility is provided in the ISL68144 fault logic. Faults can be enabled or disabled individually. Each fault type can also be configured to either latch off or retry indefinitely.

#### **Power-Good Signals**

The PGO/PG1 pins are open-drain, power-good outputs that indicate completion of the soft-start sequence and output voltage of the associated rail within the expected regulation range.

The PG pins can be associated or disassociated with a number of the available fault types. This allows a system design to be tailored for almost any condition. In addition, these power-good indicators will be pulled low when a fault (OCP or OVP) condition or UV condition is detected on the associated rail.

#### **Output Voltage Protection**

Output voltage is measured at the load sensing points differentially for regulation and the same measurement is used for OVP and UVP. The fault thresholds are set using PMBus commands. Figure 17 on page 17 shows a simplified OVP/UVP block diagram. The output voltage comparisons are done in the digital domain.

The device responds to an output overvoltage condition by disabling the output, declaring a fault, setting the SALRT pin,



setting the PG pin, and then pulsing the LFET until the output voltage has dropped below the threshold. Similarly, the device responds to an output undervoltage condition by disabling the output, declaring a fault, setting the SALRT pin, and setting the PG pin. The output will not restart until the EN pin is cycled (unless the device is configured to retry).

In addition, the ISL68144 features open pin sensing protection to detect an open of the output voltage sensing circuit. This open is detected as an OVP condition, which suspends the controller operation.

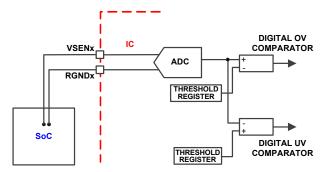


FIGURE 17. OVP, UVP COMPARATORS

#### **Output Current Protection**

The ISL68144 offers a comprehensive overcurrent protection scheme. Each phase is protected from both excessive peak current and sustained current. In addition, the system is protected from sustained total output overcurrent.

Figure 18 shows a block diagram of the system total output current protection scheme. In this scheme, the phase currents are summed to form ISUM. ISUM is then fed to dual response paths allowing the user to program separate LPF, threshold, and response time. One path is intended to allow response more quickly than the other path. With this system, the user can allow high peak total current for a short time and a lower level of current for a sustained time. Note that neither of these paths affect PWM activity on a cycle-by-cycle basis. The characteristics of each path are easily set in PowerNavigator.

In addition to total output current, the ISL68144 provides an individual phase peak current limit that will act on PWM in a cycle-by-cycle manner. This means that if a phase current is detected to exceed the OC threshold, the phase PWM signal will be inverted to move current away from the threshold. In addition to limiting positive or negative peak current on a cycle-by-cycle basis, individual phase OC can be configured to limit current indefinitely or to declare a fault after a programmable number of consecutive OC cycles. This feature is useful for applications where a fault shutdown of the system would not be acceptable but some ability to limit phase currents is desired. Figures 21 and 22 show this operation. If configured for indefinite current limit, the converter will act as a current source and VOUT will not remain at its regulation point. It should be noted that in this case, VOLIT OV or UV protection action might occur, which could shut the regulator down.

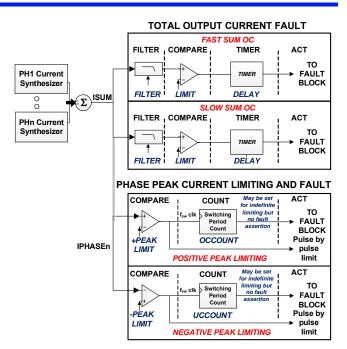


FIGURE 18. OCP FUNCTIONAL DIAGRAM

Examples of OCP\_Fast and OCP\_Slow waveforms are shown in Figures 19 and 20.

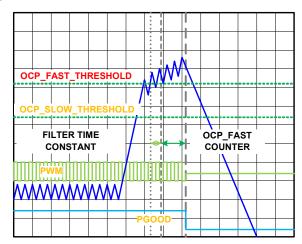


FIGURE 19. OCP FAST

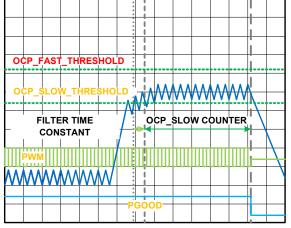


FIGURE 20. OCP\_SLOW



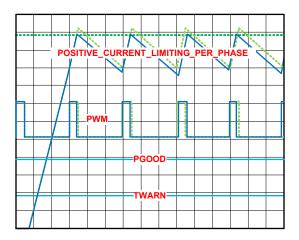


FIGURE 21. POSITIVE PEAK PHASE CURRENT LIMITING

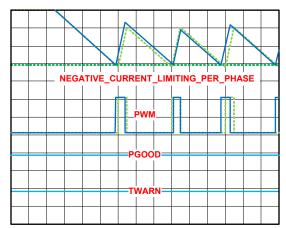


FIGURE 22. NEGATIVE PEAK PHASE CURRENT LIMITING

#### **Smart Power Stage OC Fault Detect**

Intersil Smart Power Stage (SPS) devices will output a large signal on their IMON lines if peak current exceeds their preprogrammed threshold. (For more detail about this functionality, refer to the relevant SPS datasheet.) The ISL68144 is equipped to detect this fault flag and immediately shut down. This detector is enabled on the GUI Overcurrent Fault setup screen.

This feature functions by detecting signals that exceed the current sense ADC full scale range. If this detector is disabled while using an Intersil SPS, the SPS Fault# signal must be connected to the controller Enable pin of the associated rail. This will ensure that an SPS OC event will be detected and the converter will shut down.

## **Thermal Monitoring (TWARN) and Protection**

The TWARN pin indicates the temperature status of the voltage regulator. The TWARN pin is an open-drain output and an external pull-up resistor is required. This signal is valid only after the controller is enabled.

The TWARN signal can be used to inform the system that the temperature of the voltage regulator is too high and the load should reduce its power consumption. TWARN only indicates a thermal warning, not a fault.

The thermal monitoring function block diagram is shown in Figure 23. The ISL68144 has two over-temperature thresholds, which allow both warning and fault indications. Each temperature sensor threshold can be independently programmed in the PowerNavigator GUI. Figure 24 shows the thermal warning to TWARN and Figure 25 shows the over-temperature fault to shutdown. PGOOD and TWARN can be configured in PowerNavigator to indicate these warning and fault thresholds.

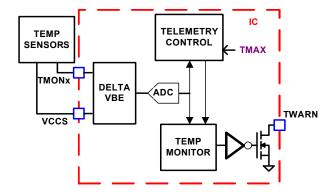


FIGURE 23. BLOCK DIAGRAM OF THERMAL MONITORING FUNCTION

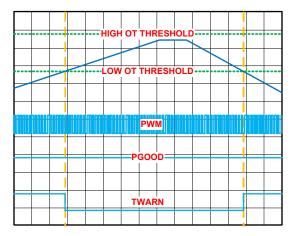


FIGURE 24. THERMAL WARNING TO TWARN

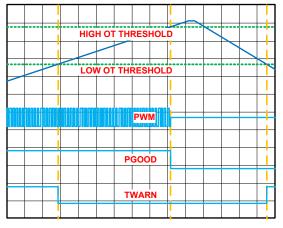


FIGURE 25. OVER-TEMPERATURE FAULT



# **Layout and Design Considerations**

In addition to TB379, the following PCB layout and design strategies are intended to minimize noise coupling and the impact of board parasitic impedances on converter performance. In addition, these strategies optimize the heat dissipating capabilities of the printed circuit board. This section highlights some important practices, which should be followed during the layout process.

<u>Table 4</u> provides general guidance on best practices related to pin noise sensitivity. Good engineering judgment is required to implement designs based on criteria specific to the situation.

TABLE 4. PIN DESIGN AND/OR LAYOUT CONSIDERATION

PIN NAME	NOISE SENSITIVE	DESCRIPTION
VINSEN	Yes	Connects to the resistor divider between VIN and GND (see Figure 16 on page 15). Filter VINSEN with 10nF to GND.
RGNDx VSENx	Yes	Treat each of the remote voltage sense pairs as differential signals in the PCB layout. They should be routed side by side on the same layer. They should not be routed in proximity to noisy signals like PWM or Phase. Tie to ground when not used.
PGx	No	Open-drain. 3.3V maximum pull-up voltage. Tie to ground when not used.
SCL, SDA, SALRT	Yes	50kHz to 2MHz signal during communication, pair up with SALRT and route carefully. 20 mils spacing within SDA, SALRT, and SCL, and more than 30 mils to all other signals. Refer to the SMBus design guidelines and place proper termination resistance for impedance matching. Tie to ground when not used.
TMONx	Yes	When diode sensing is used, VCCS is the return path for the delta Vbe currents. Use a separate VCCS route specifically for diode temp sense. A filter capacitor no greater than 500pF should be placed between each TEMP pin and the VCCS pin near the IC. Tie to ground when not used.
TWARN	No	Open-drain. 3.3V maximum pull-up voltage.
vcc	Yes	Place at least 2.2µF MLCC decoupling capacitor directly at the pin.
vccs	Yes	Place 4.7µF MLCC decoupling capacitor directly at the pin.
PWMx	NO	Avoid routing near noise sensitive analog lines such as current sense or voltage sense.

TABLE 4. PIN DESIGN AND/OR LAYOUT CONSIDERATION (Continued)

PIN NAME	NOISE SENSITIVE	DESCRIPTION					
CSx CSRTNx	Yes	Treat each of the current sense pairs as differential signals in the PCB layout. They should be routed side by side on the same layer. They should not be routed in proximity to noisy signals like PWM or Phase. Proper routing of current sense is perhaps the most critical of all the layout tasks. Tie to ground when not used.					
GND	Yes	This EPAD is the return of PWM output drivers. Use four or more vias to directly connect the EPAD to the power ground plane.					
General Comments		The layer next to the top or bottom layer is preferred to be ground layers, although the signal layers can be sandwiched in the ground layers if possible.					



## **PMBus Operation**

The ISL68144 PMBus slave address is pin selectable, using the ADDRESS pin and resistor value described in <a href="Table 2 on page 12">Table 2 on page 12</a>. For proper operation, users should follow the PMBus protocol, as shown in <a href="#PMBus Protocol" on page 21</a>. The supported PMBus addresses are in 8-bit format (including write and read bit), see <a href="Table 5">Table 5</a>. The least significant bit of the 8-bit address is for write (0h) and read (1h). PMBus commands are in the range from 0x00h to 0xFFh. For the ISL68144, Page 0 corresponds to Output 0 and Page 1 to Output 1. For reference purposes, the 7-bit format addresses are also summarized in <a href="Table 5">Table 5</a>.

TABLE 5. PMBus 8-BIT AND 7-BIT FORMAT ADDRESS (HEX)

8-BIT	7-BIT	8-BIT	7-BIT	8-BIT	7-BIT	8-BIT	7-BIT
80/81	40	A0/A1	50	B0/B1	58	CO/C1	60

TABLE 5. PMBus 8-BIT AND 7-BIT FORMAT ADDRESS (HEX)

8-BIT	7-BIT	8-BIT	7-BIT	8-BIT	7-BIT	8-BIT	7-BIT
82/83	41	A2/A3	51	B2/B3	59	C2/C3	61
84/85	42	A4/A5	52	B4/B5	5A	C4/C5	62
86/87	43	A6/A7	53	B6/B7	5B	C6/C7	63
88/89	44	A8/A9	54	B8/B9	5C	C8/C9	64
8A/8B	45	AA/AB	55	BA/BB	5D	CA/CB	65
8C/8D	46	AC/AD	56	BC/BD	5E	CC/CD	66
8E/8F	47	AE/AF	57	BE/BF	5F	CE/CF	67

The PMBus data formats follow PMBus Specification version 1.3 and SMBus version 2.0.

Basic PMBus telemetry commands are summarized in <u>"PMBus Command Summary" on page 22</u>.

Page 20 of 47


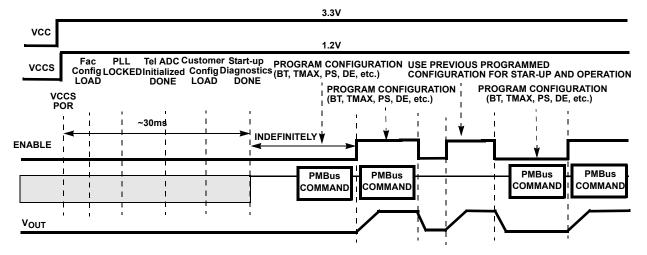


FIGURE 26. SIMPLIFIED PMBus INITIALIZATION TIMING DIAGRAM

## **PMBus Protocol**


1. Send Byte Protocol

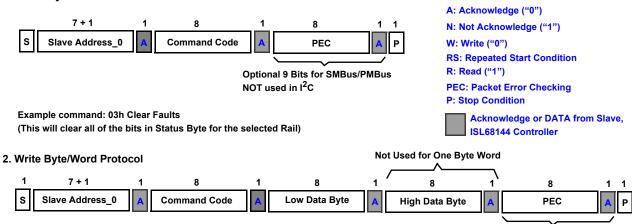

S: Start Condition

Example command: 21h VOUT\_COMMAND


#### 3. Read Byte/Word Protocol

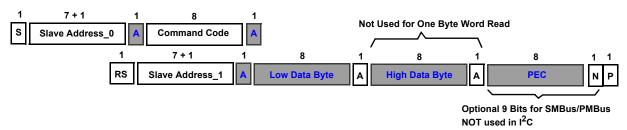

Example command: 8B READ\_VOUT (Two words, read voltage of the selected rail).

STOP (P) bit is NOT allowed before the repeated START condition when "reading" contents of a register.

4. Group Command Protocol - No more than one command can be sent to the same Address

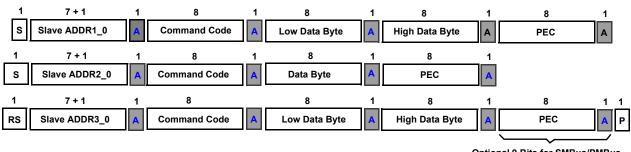


Optional 9 Bits for SMBus/PMBus NOT used in I<sup>2</sup>C

Optional 9 Bits for SMBus/PMBus

NOT used in I<sup>2</sup>C

 5. Alert Response Address (ARA, 0001\_1001, 25h) for SMBus and PMBus, not used for I<sup>2</sup>C



# **PMBus Command Summary**

CODE	COMMAND NAME	DESCRIPTION	TYPE	DATA FORMAT	DEFAULT VALUE	DEFAULT SETTING
00h	PAGE	Selects Output 0, 1, or both	R/W	Bit	00h	Page 0
01h	OPERATION	Enable/disable, margin settings	R/W	Bit	08h	Off
02h	ON_OFF_CONFIG	On/off configuration settings	R/W	Bit	16h	ENABLE pin control
03h	CLEAR_FAULTS	Clears all fault bits in all registers and releases the SALRT pin	Write	N/A	N/A	
<b>1</b> 0h	WRITE_PROTECT	Write protection to sets of commands	R/W	Bit	00h	No write protection
20h	VOUT_MODE	Defines format for output voltage related commands	Read	Bit	40h	Direct format
21h	VOUT_COMMAND	Sets the nominal V <sub>OUT</sub> target	R/W	Direct	0384h	900mV
22h	VOUT_TRIM	Applies trim voltage to V <sub>OUT</sub> set-point	R/W	Direct	0000h	0mV
24h	VOUT_MAX	Absolute maximum voltage setting	R/W	Direct	08FCh	2300mV
25h	VOUT_MARGIN_HIGH	Sets V <sub>OUT</sub> target during margin high	R/W	Direct	0640h	1600mV
26h	VOUT_MARGIN_LOW	Sets V <sub>OUT</sub> target during margin low	R/W	Direct	00FAh	250mV
27h	VOUT_TRANSITION_RATE	Slew rate setting for V <sub>OUT</sub> changes	R/W	Direct	0064h	10mV/μs
28h	VOUT_DROOP	Sets the load line (V/I slope) resistance for the output	R/W	Direct	0000h	ΟμV/Α
2Bh	VOUT_MIN	Absolute minimum target voltage setting	R/W	Direct	0000h	ov
40h	VOUT_OV_FAULT_LIMIT	Sets the V <sub>OUT</sub> overvoltage fault threshold	R/W	Direct	076Ch	1900mV
44h	VOUT_UV_FAULT_LIMIT	Sets the V <sub>OUT</sub> undervoltage fault threshold	R/W	Direct	0000h	0mV
4Fh	OT_FAULT_LIMIT	Sets the over-temperature fault threshold	R/W	Direct	007Dh	+125°C
5 <b>1</b> h	OT_WARN_LIMIT	Sets the over-temperature warn threshold	R/W	Direct	07D0h	+2000°C
55h	VIN_OV_FAULT_LIMIT	Sets the V <sub>IN</sub> overvoltage fault threshold	R/W	Direct	36B0h	14,000mV
59h	VIN_UV_FAULT_LIMIT	Sets the V <sub>IN</sub> undervoltage fault threshold	R/W	Direct	1F40h	8,000mV
5Bh	IIN_OC_FAULT_LIMIT	Sets the I <sub>IN</sub> overcurrent fault threshold	R/W	Direct	0032h	50A
60h	TON_DELAY	Sets the delay time from enable to V <sub>OUT</sub> rise	R/W	Direct	0014h	200µs
61h	TON_RISE	Turn-on rise time	R/W	Direct	01F4h	500µs
64h	TOFF_DELAY	Turn-off delay time	R/W	Direct	0000h	0μs
65h	TOFF_FALL	Turn-off fall time	R/W	Direct	01F4h	500µs
78h	STATUS_BYTE	First byte of STATUS_WORD	Read	Bit	N/A	N/A
79h	STATUS_WORD	Summary of critical faults	Read	Bit	N/A	N/A
7Ah	STATUS_VOUT	Reports V <sub>OUT</sub> faults	Read	Bit	N/A	N/A
7Bh	STATUS_IOUT	Reports I <sub>OUT</sub> faults	Read	Bit	N/A	N/A
7Ch	STATUS_INPUT	Reports input faults	Read	Bit	N/A	N/A
7Dh	STATUS_TEMPERATURE	Reports temperature warnings/faults	Read	Bit	N/A	N/A
7Eh	STATUS_CML	Reports communication, memory, logic errors	Read	Bit	N/A	N/A
80h	STATUS_MFR_SPECIFIC	Reports specific events	Read	Bit	N/A	N/A
88h	READ_VIN	Reports input voltage measurement	Read	Direct	N/A	N/A
89h	READ_IIN	Reports input current measurement	Read	Direct	N/A	N/A
8Bh	READ_VOUT	Reports output voltage measurement	Read	Direct	N/A	N/A
8Ch	READ_IOUT	Reports output current measurement	Read	Direct	N/A	N/A



# PMBus Command Summary (Continued)

CODE	COMMAND NAME	DESCRIPTION	TYPE	DATA FORMAT	DEFAULT VALUE	DEFAULT SETTING
8Dh	READ_TEMPERATURE_1	Reports internal temperature measurement	Read	Direct	N/A	N/A
8Eh	READ_TEMPERATURE_2	Reports TMON0 temperature measurement	Read	Direct	N/A	N/A
8Fh	READ_TEMPERATURE_3	Reports TMON1 temperature measurement	Read	Direct	N/A	N/A
96h	READ_POUT	Reports output power	Read	Direct	N/A	N/A
97h	READ_PIN	Reports input power	Read	Direct	N/A	N/A
98h	PMBUS_REVISION	Reports specific events	Read	Bit	33h	Revision 1.3
ADh	IC_DEVICE_ID	Reports device identification information	Block Read	Bit	49D22200h	ISL68144
AEh	IC_DEVICE_REV	Reports device revision information	Block Read	Bit	N/A	N/A
E7h	APPLY_SETTINGS	Instructs device to apply PMBus setting changes	Write	Bit	01h	N/A
F2h	RESTORE_CONFIG	Allows selection of configurations from NVM	Write	Bit	N/A	N/A

#### **PMBus Use Guidelines**

All commands can be read at any time.

Always disable the outputs when writing commands that change device settings. Exceptions to this rule are commands intended to be written while the device is enabled, for example, OPERATION.

#### **PMBus Data Formats**

#### Direct (D)

The Direct data format is a 2-byte two's complement binary integer.

#### Bit Field (BIT)

A breakdown of the Bit Field format is provided in "PMBus Command Detail" on page 24.



## **PMBus Command Detail**

## PAGE (00h)

**Definition:** Selects Controller 0, Controller 1, or both Controllers 0 and 1 to receive commands. All commands following this command will be received and acted on by the selected controller or controllers.

Data Length in Bytes: 1 Data Format: Bit Field

Type: R/W
Default Value: 00h
Units: N/A

COMMAND	PAGE (00h)							
Format		Bit Field						
Bit Position	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function	See Following Table							
Default Value	0	0	0	0	0	0	0	0

BITS 7:4	BITS 3:0	PAGE
0000	0000	0
0000	0001	1
1111	1111	Both

#### **OPERATION (01h)**

**Definition:** Sets enable state when configured for PMBus enable. Sets output voltage margin settings. The device always acts on faults during margin. The following table reflects the valid settings for the device.

Paged or Global: Paged Data Length in Bytes: 1 Data Format: Bit Field

Type: R/W

Default Value: 08h

COMMAND		OPERATION (01h)							
Format		Bit Field							
Bit Position	7	6	5	4	3	2	1	0	
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	
Function		See Following Table							
Default Value	0	0	0	0	1	0	0	0	

BIT NUMBER	PURPOSE	BIT VALUE	MEANING
Bits 7:6	Enable/Disable	00	Immediate off (decay)
		01	Soft-off (Use TOFF_DELAY and TOFF_FALL)
		10	On
Bits 5:4	V <sub>OUT</sub> Source	00	VOUT_COMMAND
		01	VOUT_MARGIN_LOW
		10	VOUT_MARGIN_HIGH
		11	Not used
Bits 3:2	Margin Response	10	Act on faults
Bit 1:0	Not Used	0	Not used



## ON\_OFF\_CONFIG (02h)

**Definition:** Configures the interpretation of the OPERATION command and the ENABLE pin (EN).

Paged or Global: Global Data Length in Bytes: 1 Data Format: Bit Field

Type: R/W

**Default Value: 16h (ENABLE pin control)** 

COMMAND				ON_OFF_C	ONFIG (02h)										
Format				Bit I	ield										
Bit Position	7	7 6 5 4 3 2 1 0													
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W							
Function			•	See Follow	wing Table	*	!	*							
Default Value	0	0	0	0	0	0	0	0							

BIT NUMBER	PURPOSE	BIT VALUE	MEANING
7:5	Not Used	000	Not Used
4:2	Sets the Source of Enable	000	Device always enabled regardless of pin or OPERATION command state
		101	Device starts from Enable pin only
		110	Device starts from OPERATION command only
		111	Device starts from OPERATION command AND Enable pin
1	Enable Pin Polarity	1	Active high only
0	Enable Pin Turn-Off Action	1	Turn off immediately with decay
		0	Use programmed TOFF_DELAY and TOFF_FALL settings

### **CLEAR\_FAULTS (03h)**

**Definition:** Clears all fault bits in all registers and releases the SALRT pin (if asserted) simultaneously. If a fault condition still exits, the bit will reassert immediately. This command will not restart a device if it is shut down, it will only clear the faults.

Paged or Global: Global
Data Length in Bytes: 0
Data Format: N/A
Type: Write Only
Default Value: N/A
Units: N/A



#### WRITE\_PROTECT (10h)

**Definition:** Sets the write protection of certain configuration commands.

Paged or Global: Global Data Length in Bytes: 1 Data Format: Bit Field

Type: R/W

**Default Value: 00h (Enable all writes)** 

Units: N/A

COMMAND				WRITE_PRO	OTECT (10h)										
Format				Bit I	ield										
Bit Position	7	7 6 5 4 3:0 2 1 0													
Access	7 6 R/W R/W		R/W	R/W	R/W	R/W	R/W	R/W							
Function															
Default Value	0	0	0	0	0	0	0	0							

SETTINGS	PROTECTION
40h	Disables all writes except to WRITE_PROTECT, OPERATION, CLEAR_FAULTS, PAGE
20h	Disables all writes except all above plus ON_OFF_CONFIG and VOUT_COMMAND, VOUT_TRIM
00h	Enables all writes

NOTE: Any settings other than the three shown in the table will result in an invalid data fault.

#### VOUT\_MODE (20h)

 $\textbf{Definition:} \ \ \textbf{Returns the supported V}_{\textbf{OUT}} \ \ \textbf{mode.} \ \ \textbf{This device supports only absolute direct mode.}$ 

Paged or Global: Global
Data Length in Bytes: 1
Data Format: Bit Field
Type: Read Only
Default Value: 40h

Units: N/A Equation: N/A Range: N/A

#### VOUT\_COMMAND (21h)

**Definition:** Sets the value of V<sub>OUT</sub> when the OPERATION command is configured for nominal operation.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 0384h (900mV)

Units: mV

**Equation:** VOUT\_COMMAND = (Direct value)

Range: VOUT\_MIN to VOUT\_MAX

COMMAND							VOL	JT_COM	MAND (2	21h)						
Format								Dir	ect							
Bit Position	15	14     13     12     11     10     9     8     7     6     5     4     3     2     1     0														
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function		•	•	•	•			Unsigne	d Intege	r	•	•		•	•	
Default Value	0	0	0	0	0	0	1	1	1	0	0	0	0	1	0	0



## VOUT\_TRIM (22h)

**Definition:** Sets a fixed trim voltage to the output voltage command value. This command is typically used to calibrate a device in the application circuit.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 0000h (0mV)

Units: mV

**Equation:** VOUT\_TRIM = (Direct value)

Range: ±250mV

COMMAND							1	/OUT_TF	IM (22h	1)						
Format								Dir	ect							
Bit Position	15	14         13         12         11         10         9         8         7         6         5         4         3         2         1         0														0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function					•		Two's	Comple	ement Ir	nteger		•	•		•	
Default Value	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

## VOUT\_MAX (24h)

**Definition:** Sets the maximum allowed V<sub>OUT</sub> target regardless of any other commands or combinations.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 08FCh (2300mV)

Units: mV

**Equation:** VOUT\_MAX = (Direct value)

Range: 0mV to 3300mV

COMMAND							1	VOUT_M	AX (24h	)						
Format								Dir	ect							
Bit Position	15	14         13         12         11         10         9         8         7         6         5         4         3         2         1         0														
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function								Unsigne	d Intege	r			•		•	
Default Value	0	0	0	0	1	0	0	0	1	1	1	1	1	1	0	0



## **VOUT\_MARGIN\_HIGH (25h)**

**Definition:** Sets the value of V<sub>OUT</sub> when the OPERATION command is configured for margin high.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 0640h (1600mV)

Units: mV

**Equation:** VOUT\_MARGIN\_HIGH = (Direct value)

Range: VOUT\_MIN to VOUT\_MAX

COMMAND							VOUT	_MARGI	N_HIGH	(25h)						
Format								Dir	ect							
Bit Position	15	14         13         12         11         10         9         8         7         6         5         4         3         2         1         0														0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function								Unsigne	d Intege	r						
Default Value	0	0	0	0	0	1	1	0	0	1	0	0	0	0	0	0

## VOUT\_MARGIN\_LOW (26h)

**Definition:** Sets the value of V<sub>OUT</sub> when the OPERATION command is configured for margin low.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 00FAh (250mV)

Units: mV

**Equation:** VOUT\_MARGIN\_LOW = (Direct value)

Range: VOUT\_MIN to VOUT\_MAX

COMMAND							VOUT	_MARGI	N_LOW	(26h)						
Format								Dir	ect							
Bit Position	15	14         13         12         11         10         9         8         7         6         5         4         3         2         1         0														
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function								Unsigne	d Intege	r		I.				
Default Value	0	0	0	0	0	0	0	0	1	1	1	1	1	0	1	0

## **VOUT\_TRANSITION\_RATE (27h)**

**Definition:** Sets the output voltage rate of change during regulation. Changes to this setting require a write to the APPLY\_SETTINGS command before the change will take effect.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 0064h (10mV/µs)

Units: μV/μs

**Equation:** VOUT\_TRANSITION\_RATE = (Direct value)\*100

**Range**:  $100\mu V/\mu s$  to  $100m V/\mu s$ 

COMMAND							VOUT_1	RANSIT	ION_RA	ΓE (27h)						
Format								Dir	ect							
Bit Position	15	14         13         12         11         10         9         8         7         6         5         4         3         2         1         0														0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function								Unsigne	d Intege	r		I.				
Default Value	0	0	0	0	0	0	0	0	0	1	1	0	0	1	0	0

## VOUT\_DROOP (28h)

**Definition:** Sets the output voltage rate of change during regulation. Changes to this setting require a write to the APPLY\_SETTINGS command before the change will take effect.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value:  $0000h (0\mu V/A)$ 

Units:  $\mu V/A$ 

**Equation:** VOUT\_DROOP = (Direct value)\*10

Range: 0mV/A to 16mV/A

COMMAND							V	OUT_DR	00P (28	Sh)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W							
Function					•			Unsigne	d Intege	r		•			•	
Default Value	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0



## VOUT\_MIN (2Bh)

 $\textbf{Definition:} \ \textbf{Sets the minimum allowed V}_{\textbf{OUT}} \ \textbf{target regardless of any other commands or combinations}.$ 

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 0000h (0mV)

Units: mV

**Equation:** VOUT\_MIN = (Direct value)

Range: OV to VOUT\_MAX

COMMAND								VOUT_M	IN (2Bh)	)						
Format								Dir	ect							
Bit Position	15	14         13         12         11         10         9         8         7         6         5         4         3         2         1         0														0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function		•			•			Unsigne	d Intege	r			•		•	
Default Value	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

## VOUT\_OV\_FAULT\_LIMIT (40h)

**Definition:** Sets the output overvoltage fault threshold. Changes to this setting require a write to the APPLY\_SETTINGS command before the change will take effect.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 076Ch (1900mV)

Units: mV

**Equation:** VOUT\_OV\_FAULT\_LIMIT = (Direct value)

Range: OV to VOUT\_MAX

COMMAND							VOUT_	OV_FAU	LT_LIMI	Γ (40h)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W						
Function								Unsigne	d Intege	r						•
Default Value	0	0	0	0	0	1	1	1	0	1	1	0	1	1	0	0



#### VOUT\_UV\_FAULT\_LIMIT (44h)

**Definition:** Sets the V<sub>OUT</sub> undervoltage fault threshold. This fault is masked during ramp or when disabled.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct Type: R/W

Default Value: 0000h (0mV)

Units: mV

**Equation:** VOUT\_UV\_FAULT\_LIMIT = (Direct value)

Range: OV to VOUT\_MAX

COMMAND							VOUT_	UV_FAU	LT_LIMI	T (44h)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W						
Function								Unsigne	d Intege	r						
Default Value	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

## OT\_FAULT\_LIMIT (4Fh)

**Definition:** Sets the power stage over-temperature fault limit.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 007Dh (+125°C)

Units: °C

**Equation:** OT\_FAULT\_LIMIT = (Direct value)

Range: 0°C to +2000°C

COMMAND							ОТ	_FAULT_	LIMIT (4	Fh)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W						
Function							Two's	Comple	ement Ir	iteger						
Default Value	0	0	0	0	0	0	0	0	0	1	1	1	1	1	0	1



## OT\_WARN\_LIMIT (51h)

Definition: Sets the system over-temperature warn limit. If any measured temperature exceeds this value, the device will:

Set the TEMPERATURE bit in STATUS\_BYTE and STATUS\_WORD

• Set the OT\_WARNING bit in STATUS\_TEMPERATURE

Set the SALRT pinSet the TWARN pinPaged or Global: Paged

Paged or Global: Paged
Data Length in Bytes: 2
Data Format: Direct

Type: R/W

Default Value: 07D0h (+2000°C)

Units: °C

**Equation:** OT\_WARN\_LIMIT = (Direct value)

Range: 0°C to +2000°C

COMMAND							ОТ_	_WARN_	LIMIT (5	5 <b>1</b> h)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W						
Function							Two's	Comple	ement Ir	nteger			•		•	
Default Value	0	0	0	0	0	1	1	1	1	1	0	1	0	0	0	0

#### VIN\_OV\_FAULT\_LIMIT (55h)

**Definition:** Sets the  $V_{IN}$  overvoltage fault threshold. Changes to this setting require a write to the APPLY\_SETTINGS command before the change will take effect.

Paged or Global: Global Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 36B0h (14,000mV)

Units: mV

**Equation:** VIN\_OV\_FAULT\_LIMIT = (Direct value)

Range: 0mV to 16,000mV

COMMAND							VIN_C	OV_FAUL	T_LIMIT	(55h)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W						
Function			•		•			Unsigne	d Intege	r				•	•	
Default Value	0	0	1	1	0	1	1	0	1	0	1	1	0	0	0	0



#### VIN\_UV\_FAULT\_LIMIT (59h)

**Definition:** Sets the V<sub>IN</sub> undervoltage fault threshold. Also referred to as Undervoltage Lockout (UVLO). Changes to this setting require a write to the APPLY\_SETTINGS command before the change will take effect.

Paged or Global: Global Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 1F40h (8,000mV)

Units: mV

**Equation:** VIN\_UV\_FAULT\_LIMIT = (Direct value)

Range: 0mV to 16,000mV

COMMAND							VIN_U	JV_FAUL	T_LIMIT	(59h)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W						
Function			•	•	•			Unsigne	d Intege	r		•		•	•	
Default Value	0	0	0	1	1	1	1	1	0	1	0	0	0	0	0	0

## IIN\_OC\_FAULT\_LIMIT (5Bh)

**Definition:** Sets the I<sub>IN</sub> overcurrent fault threshold. Changes to this setting require a write to the APPLY\_SETTINGS command before the change will take effect.

Paged or Global: Global
Data Length in Bytes: 2
Data Format: Direct

Type: R/W

Default Value: 0032h (50A)

Units: A

**Equation:** IIN\_OC\_FAULT\_LIMIT = (Direct value)

Range: 0A to 50A

COMMAND							IIN_C	C_FAUL	T_LIMIT	(5Bh)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W						
Function				•	•		•	Unsigne	d Intege	r	•			•		
Default Value	0	0	0	0	0	0	0	0	0	0	1	1	0	0	1	0



## TON\_DELAY (60h)

**Definition:** Sets the delay time of V<sub>OUT</sub> during enable.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 0014h (200µs)

Units: µs

**Equation:** TON\_DELAY = (Direct value)\*10

Range: 200µs to 655,340µs

COMMAND							1	TON_DEI	.AY (60h	1)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W							
Function			!	!	!			Unsigne	d Intege	r	!	!	!		!	
Default Value	0	0	0	0	0	0	0	0	0	0	0	1	0	1	0	0

#### TON\_RISE (61h)

**Definition:** Sets the rise time of  $V_{OUT}$  during enable. Changes to this setting require a write to the APPLY\_SETTINGS command before the change will take effect. This function uses the value of  $V_{OUT}$  to calculate rise time, so APPLY\_SETTINGS must be sent after any change to the  $V_{OUT}$  target for accurate rise time.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 01F4h (500µs)

Units: µs

**Equation:** TON\_RISE = (Direct value)

Range:  $0\mu s$  to  $10{,}000\mu s$ 

COMMAND								TON_RI	SE (61h)	)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W							
Function						•		Unsigne	d Intege	r	•			•	•	
Default Value	0	0	0	0	0	0	0	1	1	1	1	1	0	1	0	0



#### TOFF\_DELAY (64h)

**Definition:** Sets the delay time of VOUT during disable.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 0000h (0µs)

Units: µs

**Equation:** TOFF\_DELAY = (Direct value)\*10

Range: 0µs to 100,000µs

COMMAND							Т	OFF_DE	LAY (641	h)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W							
Function								Unsigne	d Intege	r			•			
Default Value	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

## TOFF\_FALL (65h)

**Definition:** Sets the fall time of  $V_{OUT}$  during disable. Changes to this setting require a write to the APPLY\_SETTINGS command before the change will take effect. This function uses the value of  $V_{OUT}$  to calculate fall time, so APPLY\_SETTINGS must be sent after any change to the  $V_{OUT}$  target for accurate fall time.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct

Type: R/W

Default Value: 01F4h (500µs)

Units: µs

**Equation:** TOFF\_FALL = (Direct value)

Range: 0µs to 10,000µs

COMMAND								TOFF_FA	LL (65h	)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W							
Function		•		•	•	•	-	Unsigne	d Intege	r	•	•		•		
Default Value	0	0	0	0	0	0	0	1	1	1	1	1	0	1	0	0



## STATUS\_BYTE (78h)

**Definition:** Returns a summary of the unit's fault status. Based on the information in this byte, the host can get more information by reading the appropriate status registers. A fault in either output will be reported here.

Paged or Global: Global Data Length in Bytes: 2 Data Format: Bit Field Type: Read Only Default Value: N/A

Units: N/A

COMMAND				STATUS_B	YTE (78h)			
Format				Bit F	ield			
Bit Position	7	6	5	4	3	2	1	0
Access	R	R	R	R	R	R	R	R
Function				See Follov	ving Table	-	*	

BIT NUMBER	STATUS BIT NAME	MEANING
7	Not Used	Not used
6	OFF	This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled.
5	VOUT_OV_FAULT	An output overvoltage fault has occurred.
4	IOUT_OC_FAULT	An output overcurrent fault has occurred.
3	VIN_UV_FAULT	An input undervoltage fault has occurred.
2	TEMPERATURE	A temperature fault or warning has occurred.
1	CML	A communications, memory, or logic fault has occurred.
0	None of the Above	A status change other than those listed above has occurred.

#### STATUS\_WORD (79h)

**Definition:** Returns a summary of the device's fault status. Based on the information in these bytes, the host can get more information by reading the appropriate status registers. A fault in either output will be reported here. The low byte of the STATUS\_WORD contains the same information as the STATUS\_BYTE (78h) command.

Paged or Global: Global Data Length in Bytes: 2 Data Format: Bit Field Type: Read Only Default Value: N/A

Units: N/A

COMMAND		STATUS_WORD (79h)														
Format		Bit Field														
Bit Position	15	15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0														
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function		•	•	•	•	•	S	ee Follo	wing Tab	le		•		•	•	•

BIT NUMBER	STATUS BIT NAME	MEANING
15	V <sub>OUT</sub>	An output voltage fault has occurred.
14	IOUT	An output current fault has occurred.
13	INPUT	An input voltage fault has occurred.
12	MFR_SPECIFIC	A manufacturer specific event has occurred.
11	POWER_GOOD #	The POWER_GOOD signal, if present, is negated. (Note 8)
10:7	Not Used	Not used
6	OFF	This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled.
5	VOUT_OV_FAULT	An output overvoltage fault has occurred.
4	IOUT_OC_FAULT	An output overcurrent fault has occurred.
3	VIN_UV_FAULT	An input undervoltage fault has occurred.
2	TEMPERATURE	A temperature fault or warning has occurred.
1	CML	A communications, memory, or logic fault has occurred.
0	None of the Above	A status change other than those listed above has occurred.

#### NOTE:



<sup>8.</sup> If the POWER\_GOOD# bit is set, this indicates that the POWER\_GOOD signal, if present, is signaling that the output power is not good.

Units: N/A

## STATUS\_VOUT (7Ah)

**Definition:** Returns a summary of output voltage faults.

Paged or Global: Paged Data Length in Bytes: 1 Data Format: Bit Field Type: Read Only Default Value: N/A

COMMAND		STATUS_VOUT (7Ah)								
Format		Bit Field								
Bit Position	7	7 6 5 4 3 2 1 0								
Access	R	R R R R R R								
Function				See Follov	ving Table					

BIT NUMBER	STATUS BIT NAME	MEANING
7	VOUT_OV_FAULT	Indicates an output overvoltage fault.
6:5	Not Used	Not used
4	VOUT_UV_FAULT	Indicates an output undervoltage fault.
3	VOUT_MAX Warning	Indicates an output voltage maximum warning.
2:0	Not Used	Not used

## STATUS\_IOUT (7Bh)

**Definition:** Returns a summary of output current faults.

Paged or Global: Paged Data Length in Bytes: 1 Data Format: Bit Field Type: Read Only Default Value: N/A Units: N/A

COMMAND		STATUS_IOUT (7Bh)							
Format		Bit Field							
Bit Position	7	7 6 5 4 3 2 1 0							
Access	R	R R R R R R							
Function		See Following Table							

BIT NUMBER	MEANING						
7	An output overcurrent fault has occurred.						
6	output overcurrent and undervoltage fault has occurred.						
5:4	ot used						
3	A current share fault has occurred.						
2:0	Not used						



Units: N/A

## STATUS\_INPUT (7Ch)

**Definition:** Returns a summary of input voltage faults.

Paged or Global: Global
Data Length in Bytes: 1
Data Format: Bit Field
Type: Read Only
Default Value: N/A

COMMAND		STATUS_INPUT (7Ch)							
Format		Bit Field							
Bit Position	7	7 6 5 4 3 2 1 0							
Access	R	R R R R R R							
Function		See Following Table							

BIT NUMBER	MEANING
7	An input overvoltage fault has occurred.
6:5	Not used
4	An input undervoltage fault has occurred. This fault is initially masked until V <sub>IN</sub> exceeds the UV threshold.
3	Not used
2	An input overcurrent fault has occurred.
1:0	Not used

## **STATUS\_TEMPERATURE (7Dh)**

**Definition:** Returns a summary of temperature related faults.

Paged or Global: Global Data Length in Bytes: 1 Data Format: Bit Field Type: Read Only Default Value: N/A

Units: N/A

COMMAND		STATUS_TEMPERATURE (7Dh)							
Format		Bit Field							
Bit Position	7	7 6 5 4 3 2 1 0							
Access	R	R R R R R R							
Function		See Following Table							

BIT NUMBER	MEANING
7	An over-temperature fault has occurred.
6	An over-temperature warning has occurred.
5	Not used
4	An under-temperature fault has occurred.
3:0	Not used



## STATUS\_CML (7Eh)

**Definition:** Returns a summary of any communications, logic, and/or memory errors.

Paged or Global: Global Data Length in Bytes: 1 Data Format: Bit Field Type: Read Only Default Value: N/A

Units: N/A

COMMAND		STATUS_CML (7Eh)								
Format		Bit Field								
Bit Position	7	7 6 5 4 3 2 1 0								
Access	R	R R R R R R								
Function				See Follow	ving Table		·			

BIT NUMBER	MEANING
7	Invalid or unsupported PMBus Command was received.
6	The PMBus command was sent with invalid or unsupported data.
5	A packet error was detected in the PMBus command.
4	Memory fault detected.
3	Processor fault detected.
2	Not used
1	A communication fault other than the ones listed in this table has occurred.
0	A memory or logic fault not listed above was detected.

## STATUS\_MFR\_SPECIFIC (80h)

**Definition:** Returns the status of specific information detailed below.

Paged or Global: Global Data Length in Bytes: 1 Data Format: Bit Field Type: Read Only Default Value: N/A

Units: N/A

COMMAND				STATUS_MFR_	SPECIFIC (80h)										
Format				Bit I	Field										
Bit Position	7	7 6 5 4 3 2 1 0													
Access	R	R	R	R	R	R	R	R							
Function				See Follov	wing Table										

BIT NUMBER	MEANING
7:2	Not used
1	OTP NVM memory is full.
0	Not used



#### READ\_VIN (88h)

**Definition:** Returns the input voltage reading.

Paged or Global: Global
Data Length in Bytes: 2
Data Format: Direct
Type: Read Only
Default Value: N/A

Units: mV

**Equation:** READ\_VIN = (Direct value)

COMMAND								READ_V	'IN (88h)	)						
Format								Dir	ect							
Bit Position	15	14 13 12 11 10 9 8 7 6 5 4 3 2 1 0														
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function					•	•	Two's	Comple	ement Ir	iteger	•	•	•		•	

### READ\_IIN (89h)

**Definition:** Returns the input current reading.

Paged or Global: Global Data Length in Bytes: 2 Data Format: Direct Type: Read Only Default Value: N/A

Units: A

Equation: READ\_IIN = (Direct value)/100

COMMAND								READ_I	IN (89h)	)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function			•				Two's	Comple	ement Ir	nteger						

## READ\_VOUT (8Bh)

**Definition:** Returns the output voltage reading.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct Type: Read Only Default Value: N/A

Units: V

**Equation:** READ\_VOUT = (Direct value)

COMMAND							F	READ_VC	OUT (8BI	1)						
Format								Dir	ect							
Bit Position	15	14 13 12 11 10 9 8 7 6 5 4 3 2 1 0														
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function			•	•			Two's	Comple	ement In	iteger				•		



#### READ\_IOUT (8Ch)

**Definition:** Returns the output current reading.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct Type: Read Only Default Value: N/A

Units: A

**Equation:** READ\_IOUT = (Direct value)/10

COMMAND							ı	READ_IC	UT (8Ch	1)						
Format								Dir	ect							
Bit Position	15	14 13 12 11 10 9 8 7 6 5 4 3 2 1 0														
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function			•	•			Two's	Comple	ement Ir	iteger				•		

#### READ\_TEMPERATURE\_1 (8Dh)

**Definition:** Returns the temperature reading of the power stage.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct Type: Read Only Default Value: N/A

Units: °C

**Equation:** READ\_TEMPERATURE\_1 = (Direct value)

COMMAND							READ_	TEMPER	ATURE_	1 (8Dh)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function							Two's	Comple	ement Ir	nteger		•				

### **READ\_TEMPERATURE\_2 (8Eh)**

Definition: Returns the temperature reading from a remote diode connected to TMONO when configured for diode sensing.

Paged or Global: Global
Data Length in Bytes: 2
Data Format: Direct
Type: Read Only
Default Value: N/A

Units: °C

**Equation:** READ\_TEMPERATURE\_2 = (Direct value)

COMMAND							READ_	TEMPER	ATURE_	2 (8Eh)						
Format								Dir	ect							
Bit Position	15	14 13 12 11 10 9 8 7 6 5 4 3 2 1 0														
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function			•	•			Two's	Comple	ement Ir	iteger						



## **READ\_TEMPERATURE\_3 (8Fh)**

**Definition:** Returns the temperature reading from a remote diode connected to TMON1 when configured for diode sensing.

Paged or Global: Global
Data Length in Bytes: 2
Data Format: Direct
Type: Read Only
Default Value: N/A

Units: °C

**Equation:** READ\_TEMPERATURE\_3 = (Direct value)

COMMAND							READ_	TEMPER	ATURE_	3 (8Fh)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function			•	•			Two's	Comple	ement In	iteger				•		

#### READ\_POUT (96h)

**Definition:** Returns the output power.

Paged or Global: Paged Data Length in Bytes: 2 Data Format: Direct Type: Read Only Default Value: N/A

Units: W

**Equation:** READ\_POUT = (Direct value)

COMMAND							F	READ_PO	OUT (961	1)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function							Two's	Comple	ement Ir	iteger		•		•		

### READ\_PIN (97h)

**Definition:** Returns the input power.

Paged or Global: Global Data Length in Bytes: 2 Data Format: Direct Type: Read Only Default Value: N/A

Units: W

**Equation:** READ\_PIN = (Direct value)

COMMAND								READ_P	IN (97h)	)						
Format								Dir	ect							
Bit Position	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Access	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Function		•			•	•	Two's	Comple	ement In	iteger	•	•	•		•	



## PMBUS\_REVISION (98h)

**Definition:** Returns the revision of the PMBus Specification to which the device is compliant.

Data Length in Bytes: 1
Data Format: Bit Field
Type: Read Only

Default Value: 33h (Part 1 Revision 1.3, Part 2 Revision 1.3)

Units: N/A

COMMAND	PMBUS_REVISION (98h)							
Format		Bit Field						
Bit Position	7	6	5	4	3	2	1	0
Access	R	R	R	R	R	R	R	R
Function	See Following Table							
Default Value	0	0	1	1	0	0	1	1

BITS 7:4	PART 1 REVISION	BITS 3:0	PART 2 REVISION
0000	1.0	0000	1.0
0001	1.1	0001	1.1
0010	1.2	0010	1.2
0011	1.3	0011	1.3

### IC\_DEVICE\_ID (ADh)

**Definition:** Returns device identification information.

Paged or Global: Global Data Length in Bytes: 4 Data Format: Bit Field Type: Block Read

Default Value: 49D22200h

Units: N/A

COMMAND	IC_DEVICE_ID (ADh)					
Format		Block Read				
Byte Position	3	2	1	0		
Function	MFR code	ID High Byte	ID Low Byte	Reserved		
Default Value	49h	D2h	22h	00h		

## IC\_DEVICE\_REV (AEh)

**Definition:** Returns device revision information.

Paged or Global: Global
Data Length in Bytes: 4
Data Format: Bit Field
Type: Block Read
Default Value: N/A
Units: N/A

COMMAND	IC_DEVICE_REV (AEh)					
Format	Block Read					
Bit Position	23:16 15:8 7:4		3:0			
Function	Firmware Revision Factory Configuration		Chip Foundry Site	IC Revision		
Default Value	N/A	N/A	N/A	N/A		



#### **APPLY\_SETTINGS (E7h)**

**Definition:** Instructs the controller to use new PMBus parameters. Send 01h to this command after making one or more changes to certain PMBus threshold commands that require rescaling of operational values. The commands that require this are VOUT\_TRANSITION\_RATE, VOUT\_DROOP, VOUT\_OV\_FAULT\_LIMIT, VIN\_OV\_FAULT\_LIMIT, VIN\_UV\_FAULT\_LIMIT, IIN\_OC\_FAULT\_LIMIT, TON\_RISE, and TOFF\_FALL.

Paged or Global: Global Data Length in Bytes: 2 Data Format: Bit Field Type: Write Only Default Value: 01h

#### RESTORE\_CONFIG (F2h)

**Definition**: Identifies the configuration to be restored from NVM and loads the store's settings into the device's active memory. This command must be sent only while the outputs are disabled.

Paged or Global: Global Data Length in Bytes: 1 Data Format: Bit Field Type: Write Only Default Value: N/A

COMMAND	RESTORE_CONFIG (F2h)							
Format	Bit Field							
Bit Position	7	6	5	4	3	2	1	0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Function	See Following Table							
Default Value	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

BIT NUMBER	STATUS BIT NAME	MEANING
7:4	Reserved	Reserved
3:0	CONFIG	Selected configuration to restore



**Revision History** The revision history provided is for informational purposes only and is believed to be accurate, but not warranted. Please visit our website to make sure you have the latest revision.

DATE	REVISION	CHANGE
Jul 7, 2017	FN8888.2	Applied new header/footer. Removed mention of the ISL99226A part throughout the document. Updated Figures 2 and 3. Updated "Enable (ENO and EN1) Input High Level" spec on page 9, removed typical and added a min spec of 2.55V. Added "Enable (ENO and EN1) Input Low Level" spec on page 9. On page 11, changed from "SCL, SDA Input High/Low Threshold" to "SCL, SDA Input High Level", removed typical, and added Min spec of 1.55V. Added "SCL, SDA Input Low Level" spec on page 11. On pages 26 through 35, Updated the tables in the PMBus Command Detail section for the following commands, changed from "Two's Complement Integer" to "Unsigned Integer" VOUT_COMMAND, VOUT_MAX, VOUT_MARGIN_HIGH, VOUT_MARGIN_LOW, VOUT_TRANSITION_RATE, VOUT_DROOP, VOUT_MIN, VOUT_OV_FAULT_LIMIT, VOUT_UV_FAULT_LIMIT, VIN_OV_FAULT_LIMIT, VIN_UV_FAULT_LIMIT, IIN_OC_FAULT_LIMIT, TON_DELAY, TON_RISE, TOFF_DELAY, and TOFF_FALL Updated "STATUS_CML (7Eh)" on page 40, changed Bit 1 meaning to "A communication fault other than the ones listed in this table has occurred." Updated "READ_PIN (97h)" on page 43 from Paged to Global.
February 13, 2017	FN8888.1	Updated description to reflect processor name change. Corrected errors in RGNDO and VSENO pin descriptions.
September 28, 2016	FN8888.0	Initial release

## **About Intersil**

Intersil Corporation is a leading provider of innovative power management and precision analog solutions. The company's products address some of the largest markets within the industrial and infrastructure, mobile computing, and high-end consumer markets.

For the most updated datasheet, application notes, related documentation, and related parts, see the respective product information page found at <a href="https://www.intersil.com">www.intersil.com</a>.

For a listing of definitions and abbreviations of common terms used in our documents, visit: www.intersil.com/glossary.

You can report errors or suggestions for improving this datasheet by visiting www.intersil.com/ask.

Reliability reports are also available from our website at www.intersil.com/support.

© Copyright Intersil Americas LLC 2016-2017. All Rights Reserved.

All trademarks and registered trademarks are the property of their respective owners.

For additional products, see <a href="https://www.intersil.com/en/products.html">www.intersil.com/en/products.html</a>

Intersil products are manufactured, assembled and tested utilizing ISO9001 quality systems as noted in the quality certifications found at <a href="https://www.intersil.com/en/support/qualandreliability.html">www.intersil.com/en/support/qualandreliability.html</a>

Intersil products are sold by description only. Intersil may modify the circuit design and/or specifications of products at any time without notice, provided that such modification does not, in Intersil's sole judgment, affect the form, fit or function of the product. Accordingly, the reader is cautioned to verify that datasheets are current before placing orders. Information furnished by Intersil is believed to be accurate and reliable. However, no responsibility is assumed by Intersil or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Intersil or its subsidiaries.

For information regarding Intersil Corporation and its products, see <a href="https://www.intersil.com">www.intersil.com</a>





# **Package Outline Drawing**


L40.5x5D

40 LEAD THIN QUAD FLAT NO-LEAD PLASTIC PACKAGE Rev 0,9/10

For the most recent package outline drawing, see  $\underline{\text{L40.5x5D}}$ .

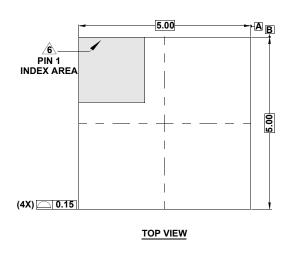

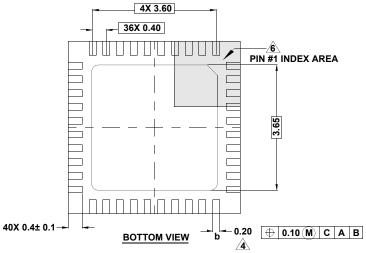

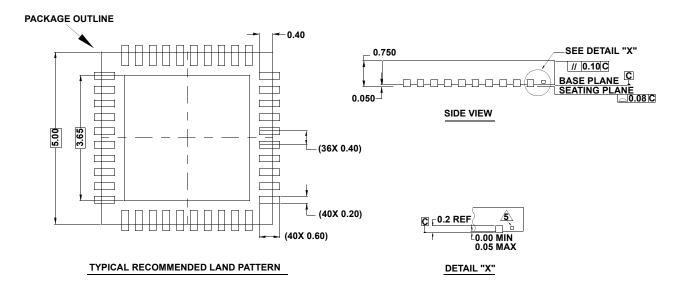

#### NOTES:

- Dimensions are in millimeters.
   Dimensions in ( ) for Reference Only.
- 2. Dimensioning and tolerancing conform to ASME Y14.5m-1994.
- 3. Unless otherwise specified, tolerance : Decimal  $\pm 0.05$
- <u>4.</u> Dimension b applies to the metallized terminal and is measured between 0.15mm and 0.27mm from the terminal tip.
- 5. Tiebar shown (if present) is a non-functional feature.
- 6. The configuration of the pin #1 identifier is optional, but must be located within the zone indicated. The pin #1 identifier may be either a mold or mark feature.
- 7. JEDEC reference drawing: MO-220WHHE-1

