

PEREL®

VTBAL403



USER MANUAL	3
HANDLEIDING	7
MODE D'EMPLOI	11
MANUAL DEL USUARIO	15
BEDIENUNGSANLEITUNG	19
INSTRUKCJA OBSŁUGI	23
MANUAL DO UTILIZADOR	27





USER MANUAL

1. Introduction



To all residents of the European Union

Important environmental information about this product

This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

2. Safety Instructions



Read and understand this manual and all safety signs before using this appliance.

- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- Protect this device from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- Do not remove the cover under any conditions. There are no user-serviceable parts inside. Never operate this device when its cover is removed.
- Familiarise yourself with the functions of the device before actually using it.

3. General Guidelines

- Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Nor Velleman nv nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.
- Keep this manual for future reference.

4. Batteries



WARNING

Do not puncture batteries or throw them in fire as they may explode. Do not attempt to recharge non-rechargeable batteries (alkaline). Dispose of batteries in accordance with local regulations. Keep batteries away from children.

- Open the battery compartment and insert the batteries according to the correct polarity.
- Replace the batteries as soon as the display turns dark.
- Remove the batteries after use.

5. Overview

Refer to the illustrations on page 2 of this manual.

1	piece counting
2	unit

3	on-off
4	tare

6. Operation

6.1 General Operation

1. Place the scale on a solid, level and non-slippery surface.
2. Switch on the scale. The scale is ready-to-use when the display shows 0.
3. Place the item to be weighed or the tare item in the middle of the weighing platform.
4. To tare an item, tap the tare button. Place the item to be weighed on the scale.
5. The weight is displayed.

6.2 Unit Conversion

Press the unit button until the desired weighing unit is displayed.

6.3 Piece Counting

1. Hold the piece-counting button pressed.
2. Press the unit button until the display shows the sample amount (25, 50, 60, 75 or 100). Place the same amount of items in the middle of the weighing platform. Press the piece-counting button to confirm.
3. To count the amount of pieces, press the piece-counting button, place the items in the middle of the weighing platform and read the results from the display.

6.4 Calibration

1. Hold the unit button pressed until the scale enters the calibration mode.
2. Briefly press the unit button. The required weight appears on the display.
3. Place the required weight in the middle of the weighing platform.
4. The scale will calibrate automatically and return to the normal weighing mode.

6.5 Error Indications



Overloaded. Remove excess weight.



Unstable scale. Please re-position the scale.

7. Cleaning and Maintenance

- Occasionally wipe with a damp cloth to keep it looking new. Do not use harsh chemicals, cleaning solvents or strong detergents.
- Do not immerse the device in any liquid.

8. Technical Specifications

power supply.....	2 x 1.5 V AAA batteries (incl.)
material.....	ABS + stainless steel
capacity.....	500 g/17.64 oz.
graduation	0.1 g/0.003 oz.
units	g/oz./ozt /dwt/ct/gn
dimensions	85 x 85 x 22 mm
display	27 x 12 mm
weight.....	125 g

Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website www.perel.eu. The information in this manual is subject to change without prior notice.

© COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.