

524360

FlukeView®

ScopeMeter®

Software for Windows®

FlukeView software adds PC power to your Fluke 190 ScopeMeter Test Tool.

FlukeView ScopeMeter software helps you get more out of your ScopeMeter:

- Store instrument's screen copies on the PC, in color (with Fluke 190C-Series only) or in black&white
- Copy color screen images into your reports and documentation (color screen images with Fluke 190C-Series only)
- Capture and store waveform data from your ScopeMeter on your PC
- Includes waveform analysis, e.g. FFT spectrum analysis
- Copy waveform data into your spreadsheet for detailed analysis
- Use cursors for parameter measurement
- Extended recording of up to four user-selected measurements help you monitor and analyze slow moving signals and related events
- Capture complete Replay sequence into the PC for further analysis and documentation
- English, French and German versions included on a single CD-ROM

System requirements

- Pentium 90 or better
- CD-ROM drive
- Windows® 95 / 98 / Me / NT 4.0 / 2000
- One free RS 232 port
- PM9080 Optically isolated RS232 adapter/cable, available separately or included in SCC190 kit and in ScopeMeter 'S' versions

Supported Instruments

Full Support for Fluke 199C, 199, 196C, 196, 192 and 123.

Starting from FlukeView ScopeMeter release V4.0 onwards, color screens of the Fluke 190C Series are fully supported.