



OPERATION INSTRUCTIONS

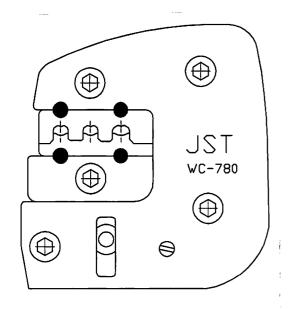

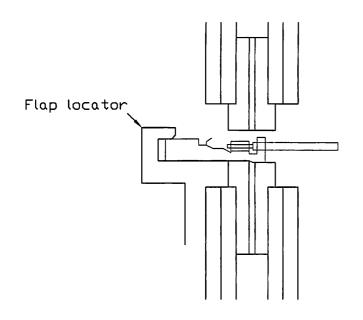

- 1. Open flap locator and insert contact up to stop.
- 2. Close flap locator.
- 3. Close handtool until first ratchet.
- 4. Insert wire.
- 5. Close handtool until the ratchet releases.
- 6. Open flap locator and carefully remove the wire.

DWG: JUKCT-014-02-00