


TMCM-1111 StepRocker Hardware Manual

Hardware Version V1.10 | Document Revision V1.02 • 2021-MAR-26

The TMCM-1111 StepRocker is a single axis motor controller/driver board for 2-phase bipolar stepper motors. It supports S-shaped ramps in addition to linear ramps and closed-loop operation together with an external encoder.

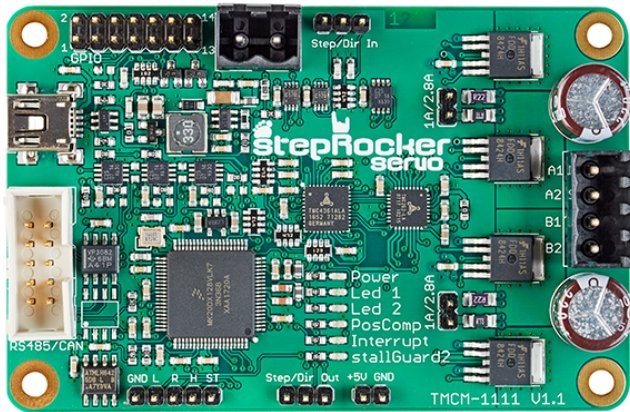


Features

- Single axis controller/driver for 2-phase bipolar stepper motor
- S-shaped ramps + linear ramps
- Closed-loop operation with external encoder
- +10...30V DC supply voltage
- Up to 2.8A RMS motor current
- RS485 & USB interface
- multi-purpose inputs and outputs

Applications

- Laboratory Automation
- Manufacturing
- Robotics
- Factory Automation
- Test & Measurement
- Technology evaluation
- First experiences with stepper motors
- Hobby applications

Simplified Block Diagram

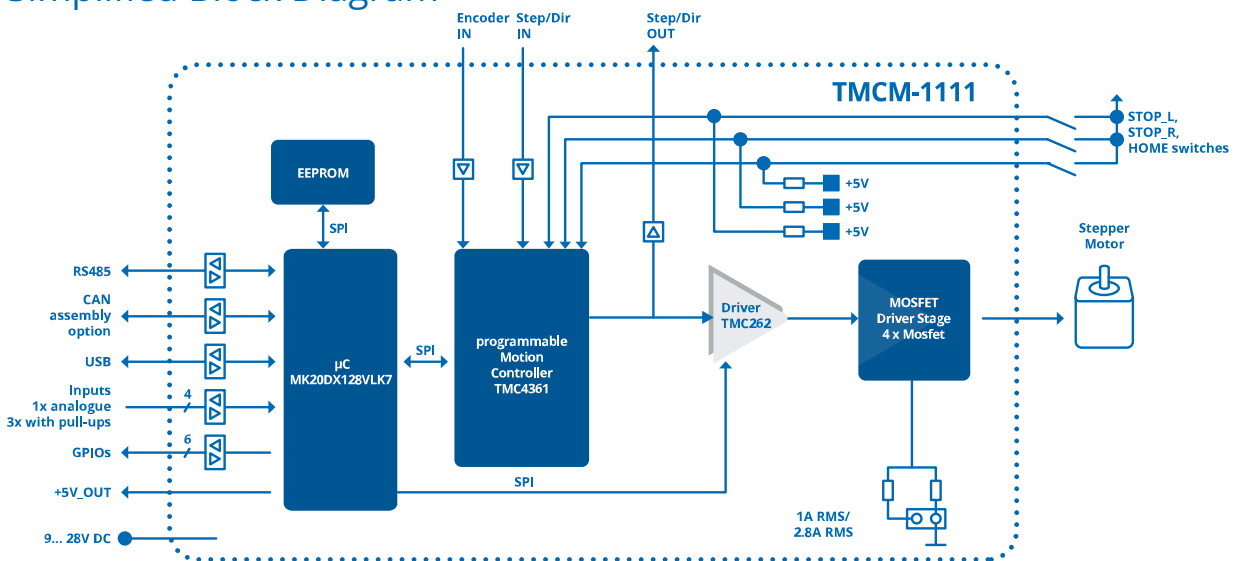

Contents

1 Features	3
2 Order Codes	4
3 Mechanical and Electrical Interfacing	5
3.1 Size of board	5
4 Connectors	6
4.1 Power Connector	8
4.2 I/O Connector (Microcontroller)	8
4.3 Motor Connector	9
4.4 STOP_L, STOP_R and HOME Switch Connector	9
4.5 RS485 and CAN Connector	10
4.5.1 Upgrade the TMC-1111 StepRocker for CAN communication	10
4.6 USB Connector	11
4.7 Step/Dir Input Connector	11
4.8 Step/Dir Output Connector	11
4.9 +5V Output Connector	12
4.10 Microcontroller Programming Interface	12
5 Reset to Factory Default	13
6 Jumper Settings	14
7 LEDs	15
8 Communication	16
8.1 RS485	16
8.2 USB	17
8.3 CAN (Retro-fit Option)	17
9 Functional Description	19
10 Operational Ratings and Characteristics	20
11 Abbreviations used in this Manual	21
12 Figures Index	22
13 Tables Index	23
14 Supplemental Directives	24
14.1 Producer Information	24
14.2 Copyright	24
14.3 Trademark Designations and Symbols	24
14.4 Target User	24
14.5 Disclaimer: Life Support Systems	24
14.6 Disclaimer: Intended Use	24
14.7 Collateral Documents & Tools	25
15 Revision History	26
15.1 Hardware Revision	26
15.2 Document Revision	26



1 Features

The TMCM-1111 StepRocker is a single axis motor controller/driver board for 2-phase bipolar stepper motors. It supports S-shaped ramps in addition to linear ramps and closed-loop operation together with an external encoder.

Applications

- Highly compact single axis stepper motor controller/driver board for 2-phase bipolar stepper motors
- Linear and S-shaped ramps
- Closed-loop operation together with external encoder

Electrical data

- Supply voltage: +24V DC (+10... +30V DC)
- Motor current: up to 1A RMS or 2.8A RMS (can be selected with jumpers)

Mechanical data

- Board size: 85mm x 55mm, height 15mm max. without mating connectors
- 4 mounting holes for M3 screws

Interfaces

- RS485 host interface
- USB 2.0 host interface (mini-USB connector)
- Step/Dir input (TTL level)
- Step/Dir output (+5V TTL level) for synchronisation (master-slave axes)
- 3 multi-purpose inputs (can be used for incremental ABN-encoder)
- STOP_L, STOP_R and HOME switch inputs
- START input / output for synchronized motion with several axes
- 6 multi-purpose I/Os
- 2 open-drain outputs
- MCU programming interface SWD (single wire debug / pads on PCB)
- Retro-fit option: CAN 2.0B communication interface

Features

- TMC4361 stepper motor controller IC for on-the-fly alteration of many motion specific parameters, linear and S-shaped ramp and closed-loop support
- TMC262 advanced stepper motor driver IC with StallGuard2™ and CoolStep™ features. Using the SpreadCycle™ chopper the microstep current sine wave is well formed with smooth zero crossing.
- support for left and right STOP and HOME switches
- EEPROM

Software

- TMCL™ remote (direct mode) and standalone operation (memory for up to 1024 TMCL™ commands)
- Fully supported by TMCL-IDE (PC based integrated development environment)



2 Order Codes

The standard version of the TMC-1111 StepRocker offers RS485 and USB interfaces (CAN transceiver **not** assembled).

The module is pre-programmed with TRINAMICs TMCL™ firmware with all available features.

Order Code	Description	Size (LxWxH)
TMC-1111 StepRocker	1-axis bipolar stepper motor controller/driver module with optional closed-loop support and RS485 and USB interfaces	85mm x 55mm x 15mm

Table 1: TMC-1111 StepRocker Order Code



3 Mechanical and Electrical Interfacing

3.1 Size of board

The board with the controller/driver electronics has an overall size of 85mm x 55mm x 15mm without mating connectors. It offers four mounting holes for M3 screws (3.2mm diameter). All four mounting holes are connected to the ground plane (signal and supply ground) of the module.

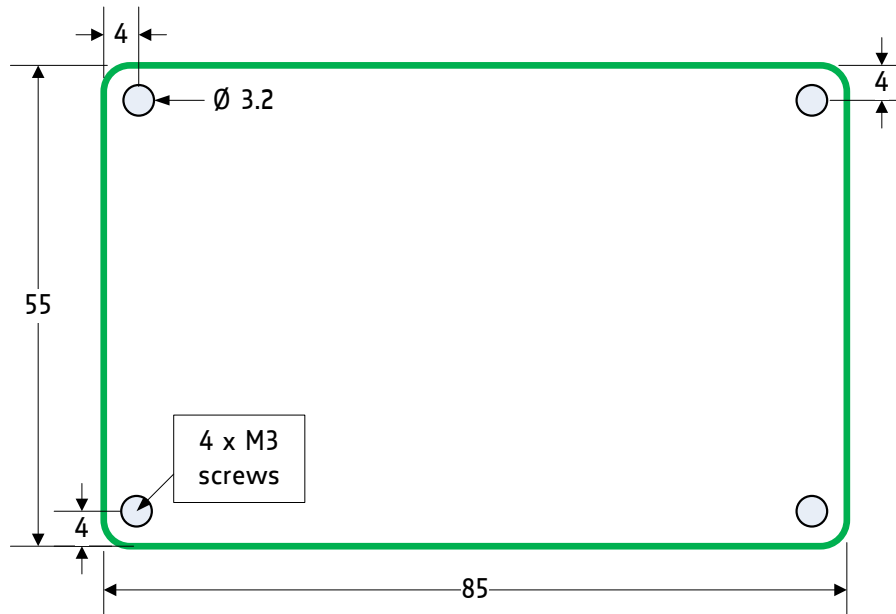


Figure 1: Board Dimensions and Position of Mounting Holes (all Values in mm)



4 Connectors

The TMCM-1111 StepRocker has eight connectors altogether. There are two screw connectors for power and motor and two interface connectors (mini-USB and RS485). Furthermore, the TMCM-1111 StepRocker has one connector for reference and home switches, one step/direction input connector (TTL level) and one output connector, and the GPIO connector, which can be used e.g. for connecting an ABN-encoder for closed-loop operation.

NOTICE

Start with power supply OFF and do not connect or disconnect motor during operation! Motor cable and motor inductivity might lead to voltage spikes when the motor is (dis)connected while energized. These voltage spikes might exceed voltage limits of the driver MOSFETs and might permanently damage them. Therefore, always switch off / disconnect power supply or at least disable driver stage before connecting / disconnecting motor.

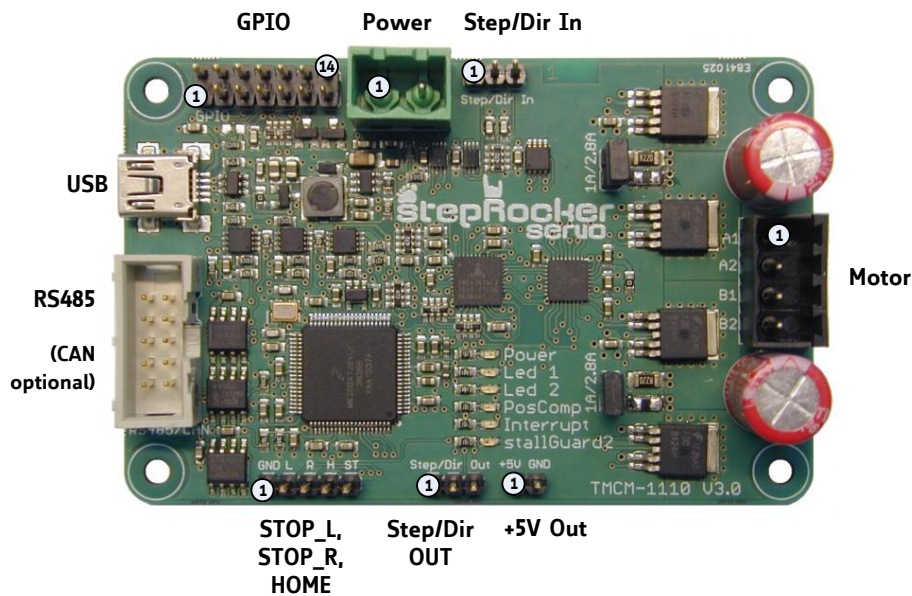


Figure 2: TMCM-1111 StepRocker Connectors

Connector Types and Mating Connectors		
Connector	Connector type on-board	Mating connector type
Power	RIA 220-02, 2 pin, 5.08mm pitch, shrouded header	RIA 249-02, screw type terminal block, pluggable, centerline 5.08mm pitch
Motor	RIA 183-04, 4 pin, 3.5mm pitch, shrouded header	RIA 169-04, screw type terminal block, pluggable, centerline 3.5mm pitch
USB	USB-mini female connector	USB-mini male connector
RS485/CAN	Low profile box header without locking bar, type 8380, 10 pin, DIN 41651, 2.54mm pitch	Low profile IDC socket connector, 10 pin, DIN 41651, 2.54mm pitch



Connector	Connector type on-board	Mating connector type
GPIO	Multi-pin-connector, 14 pin, 2.54mm pitch	Female connector with 2.54mm pitch
STOP_L, STOP_R, HOME	Multi-pin-connector, 5pin, 2.54mm pitch	Female connector with 2.54mm pitch
Step/Dir In	Multi-pin-connector, 3 pin, 2.54mm pitch	Female connector with 2.54mm pitch
Step/Dir Out	Multi-pin-connector, 3 pin, 2.54mm pitch	Female connector with 2.54mm pitch
+5V out	Two-pin-connector, 2.54mm pitch	Female connector with 2.54mm pitch

Table 2: Connector Types and Mating Connectors of the TMC-1111 StepRocker



4.1 Power Connector

Power Supply Connector Pin Assignment			
Pin	Label	Direction	Description
1	GND	Power (GND)	Common system supply and signal ground
2	10...30V	Power (input)	Power supply voltage

Table 3: Power Supply Connector Pin Assignment

NOTICE

Do not connect or disconnect motor during operation! Motor cable and motor inductivity might lead to voltage spikes when the motor is (dis)connected while energized. These voltage spikes might exceed voltage limits of the driver MOSFETs and might permanently damage them. Therefore, always switch off / disconnect power supply or at least disable driver stage before connecting / disconnecting motor.

NOTICE

Take care of polarity, wrong polarity can destroy the board!

4.2 I/O Connector (Microcontroller)

The TMCM-1111 offers an on-board ARM Cortex-M4™ microcontroller with +3V3 powered IOs and +5V tolerant inputs. In order to be compatible with the original TMCM-1110 StepRocker, +5V output level-shifters/buffers have been integrated on-board. This way, all general purpose IO pins configured as outputs will deliver +5V TTL signals.

Closed-loop operation with the TMCM-1111 StepRocker requires an external encoder. The incremental ABN output signals of this encoder (either +5V TTL or open drain) have to be connected to the encoder input channels A, B and zero (pin 10, 12 and 14) of this I/O connector. The encoder channel inputs are connected to the on-board motion controller TMC4361 for closed loop support.

I/O Connector Pin Assignment			
Pin	Label	Direction	Description
1	GND	Power (GND)	Supply and signal ground
2	GND	Power (GND)	Supply and signal ground
3	PWMD_0	in/out	General purpose I/O (+5V compatible, default: input)
4	PWMU_0	in/out	General purpose I/O (+5V compatible, default: output)
5	PWMD_1	in/out	General purpose I/O (+5V compatible, default: input)
6	PWMU_1	in/out	General purpose I/O (+5V compatible, default: output)
7	PWMD_2	in/out	General purpose I/O (+5V compatible, default: input)
8	PWMU_2	in/out	General purpose I/O (+5V compatible, default: output)
9	AIN_0	in	Analog input (can be used as home switch) input voltage range 0...+10V, resolution: 12bit (0...4095)
10	PHASE_A	in	Encoder input channel A (+5V compatible, internal pull-up to +5V)



Pin	Label	Direction	Description
11	OpenDrain_1	out	Open-drain output (max. 100mA)
12	PHASE_B	in	Encoder input channel B (+5V compatible, internal pull-up to +5V)
13	OpenDrain_2	out	Open-drain output (max. 100mA)
14	PHASE_Z	in	Encoder input zero channel (+5V compatible, internal pull-up to +5V)

Table 4: I/O Connector Pin Assignment

4.3 Motor Connector

The motor has to be connected to the motor connector, one phase (phase A) between A1 and A2 and the second phase (phase B) between B1 and B2.

Motor Connector Pin Assignment			
Pin	Label	Direction	Description
1	A1	out	Pin 1 of motor coil A
2	A2	out	Pin 2 of motor coil A
3	B1	out	Pin 1 of motor coil B
4	B2	out	Pin 2 of motor coil B

Table 5: Motor Connector Pin Assignment

NOTICE

Do not connect or disconnect motor during operation! Motor cable and motor inductivity might lead to voltage spikes when the motor is (dis)connected while energized. These voltage spikes might exceed voltage limits of the driver MOSFETs and might permanently damage them. Therefore, always switch off / disconnect power supply or at least disable driver stage before connecting / disconnecting motor.

4.4 STOP_L, STOP_R and HOME Switch Connector

STOP_L, STOP_R and HOME Switch Connector Pin Assignment			
Pin	Label	Direction	Description
1	GND	Power (GND)	Signal and system ground
2	L	in	Input for left limit switch (STOP_L)
3	R	in	Input for right limit switch (STOP_R)
4	H	in	Input for home switch (HOME)



Pin	Label	Direction	Description
5	ST	in/out	Input or Output (programmable) for START signal of motion controller in order to synchronize motion of more than one module

Table 6: STOP_L, STOP_R and HOME Switch Connector Pin Assignment


4.5 RS485 and CAN Connector

The standard TMCM-1111 StepRocker offers the RS485 interface, only.

RS485/CAN Connector Pin Assignment			
Pin	Label	Direction	Description
1			
2			
3	CAN_L	bi-directional	differential CAN bus signal (inverting) - retro-fit option
4	CAN_H	bi-directional	differential CAN bus signal (non-inverting) - retro-fit option
5	GND	Power (GND)	Signal and system ground
6	RS485+	bi-directional	differential RS485 bus signal (non-inverting)
7	RS485-	bi-directional	differential RS485 bus signal (inverting)
8			
9			
10			

Table 7: RS485/CAN Connector Pin Assignment

4.5.1 Upgrade the TMCM-1111 StepRocker for CAN communication

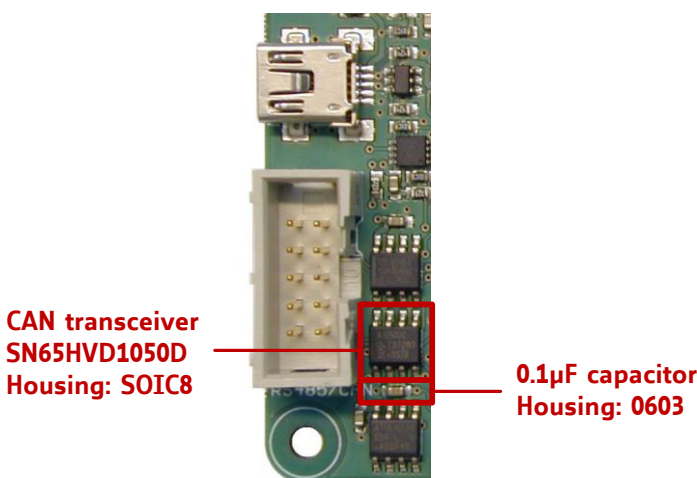

The table above shows the pin configuration for CAN, too. Before starting with CAN it is necessary to solder a SN65HVD1050D CAN transceiver with housing SOIC8 and a 0.1µF capacitor with housing 0603 on the TMCM-1111 StepRocker. Afterwards, the module is ready for using the CAN interface.

CAN and RS485 can be assembled at the same time. It is not necessary to remove the RS485 transceiver.



4.6 USB Connector

A USB interface is available via a mini-USB connector. This module supports USB 2.0 Full-Speed (12Mbit/s) connections.

USB Connector Pin Assignment			
Pin	Label	Direction	Description
1	VBUS	Power (+5V input)	+5V supply from the host
2	D-	bi-directional	USB Data-
3	D+	bi-directional	USB Data+
4	ID		Connected to signal and system ground
5	GND	Power (GND)	Signal and system ground

Table 8: USB Connector Pin Assignment

4.7 Step/Dir Input Connector

The TMC-1111 StepRocker is equipped with a step/dir input connector. Via this connector the on-board motion controller can be synchronized to an external master (e.g. adding closed-loop functionality). Please refer to firmware manual for options and more details.

Step/Dir Input Connector Pin Assignment			
Pin	Label	Direction	Description
1	GND	Power (GND)	Signal and System ground
2	Step In	in	Motion Controller step input signal (+5V compatible)
3	Dir In	in	Motion Controller direction input signal (+5V compatible)

Table 9: Step/Dir Input Connector Pin Assignment

4.8 Step/Dir Output Connector

Step-/Dir output signals from the on-board motion controller maybe connected to an external driver stage (e.g. with different voltage and / or current rating) or used for synchronisation of two or more axes (e.g. when connected to Step-/Dir Input of another StepRocker).

Step/Dir Output Connector Pin Assignment			
Pin	Label	Direction	Description
1	GND	Power (GND)	Signal and System ground
2	Step Out	out	Motion Controller step output signal (+5V compatible)
3	Dir Out	out	Motion controller direction output signal (+5V compatible)

Table 10: Step/Dir Output Connector Pin Assignment



4.9 +5V Output Connector

In contrast to the earlier generation StepRocker family (TMCM-1110) the TMCM-1111 StepRocker integrates a switching DC/DC converter for generation of +5V digital supply on-board. This +5V are available also externally via the +5V Out Connector - delivering up-to 100mA e.g. for supply of an external encoder or home/end switch electronics.

+5V Output Connector Pin Assignment			
Pin	Label	Direction	Description
1	GND	Power (GND)	Signal and System ground
2	+5V out	out	+5V supply output. Can deliver up-to 100mA for external circuits e.g. encoder

Table 11: +5V Output Connector Pin Assignment

4.10 Microcontroller Programming Interface

The programming pads for the microcontroller are located on the bottom side of the module. They are connected directly to the related processor pins - resp. GND or on-board generated +3V3 supply. These pins are used for programming of the bootloader and firmware during production + testing of the module.

Programming Pads		
Pin	Label	Description
1	GND	Module and signal ground
2	+3V3	+3V3 DC supply - generated on-board
3	nRST	Hardware reset input
4	SWDIO	Serial wire data I/O
5	SWDCLK	Serial wire clock

Table 12: Programming Pads on Bottom of PCB

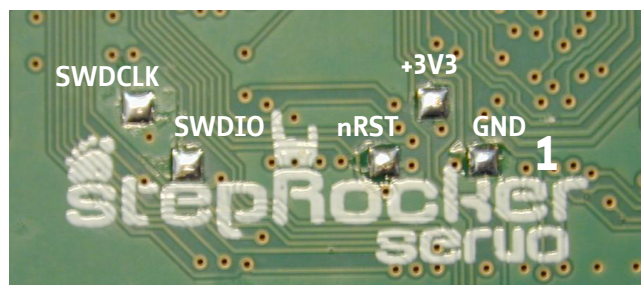


Figure 3: TMCM-1111 StepRocker Programming Pads



5 Reset to Factory Default

It is possible to reset all settings of the TMCM-1111 StepRocker to factory default without establishing a working communication connection. This might be helpful in case communication parameters of the preferred interface have been set to unknown values or got lost. To do this the following steps have to be performed:

1. Switch the supply power off and also disconnect the USB cable if connected.
2. Short the SWDIO pad with the SWDCLK pad (on the bottom side of the PCB, see figure 3).
3. Switch the supply power on again.
4. LED1 and LED2 are now flashing fast.
5. Switch the supply power off.
6. Remove the short between the two pads.
7. Switch the supply power on and wait until LED1 flashes normally again. The TMCM-1111 StepRocker now runs with factory default settings.



6 Jumper Settings

The TMCM-1111 StepRocker offers two jumpers for selection of programmable motor current range.

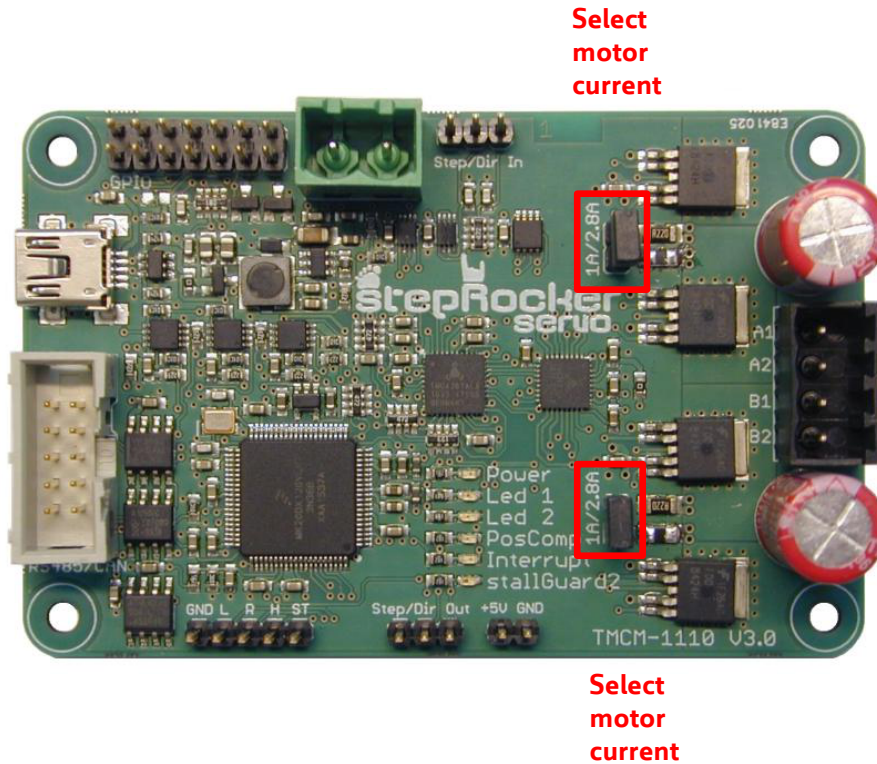


Figure 4: Jumper Settings of TMCM-1111 StepRocker

Jumpers of the TMCM-1111 StepRocker		
Jumper	Label	Description
Select motor current	1A/2.8A	Jumper plugged: motor current up to 2.8A RMS Jumper unplugged: motor current up to 1A RMS

Table 13: Jumpers of the TMCM-1111 StepRocker



7 LEDs

LED Description		
Status	Label	Description
Power on	POWER	This orange LED lights up upon the power supply is available
LED1 without pre-defined functionality	LED1	This yellow LED can be used customer specific. This LED is connected to PTA5 (pin 31) of the MK20DX128VLK7 microcontroller.
LED2 without pre-defined functionality	LED2	This yellow LED can be used customer specific. This LED is connected to PTE5 (pin 6) of the MK20DX128VLK7 microcontroller.
POSCOMP output used	POSCOMP	This yellow LED lights up if the TARGET_REACHED output of the TMC4361 is activated.
Interrupt detected	Interrupt	This orange LED lights up upon interrupts. The LED is connected to the INTR pin of the TMC4361.
StallGuard2™ detected	stallGuard2	This red LED lights up upon stalling conditions. The LED is connected to the SG_TST pin of the TMC262.

Table 14: LED Description

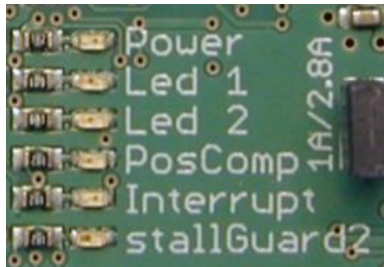


Figure 5: TMC-1111 StepRocker LEDs



8 Communication

8.1 RS485

For remote control and communication with a host system the TMCM-1111 provides a two wire RS485 bus interface. For proper operation the following items should be taken into account when setting up an RS485 network:

1. **BUS STRUCTURE:**

The network topology should follow a bus structure as closely as possible. That is, the connection between each node and the bus itself should be as short as possible. Basically, it should be short compared to the length of the bus.

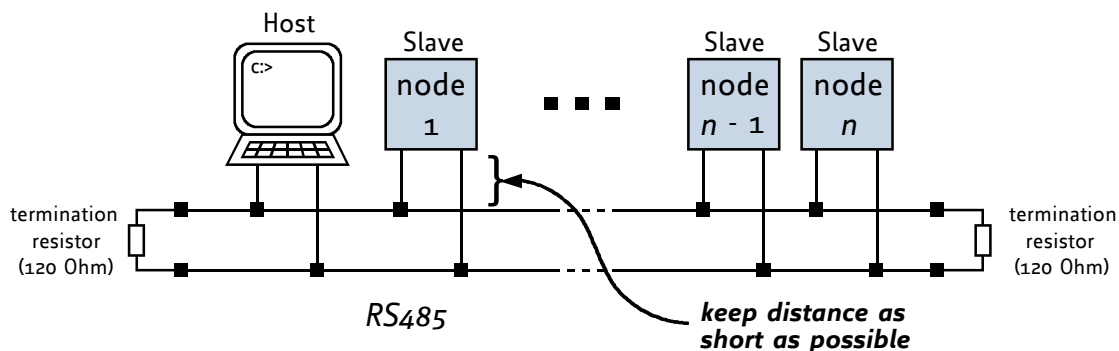


Figure 6: RS485 bus structure with termination resistors

2. **BUS TERMINATION:**

Especially for longer busses and/or multiple nodes connected to the bus and/or high communication speeds, the bus should be properly terminated at both ends. The TMCM-1111 does not integrate any termination resistor. Therefore, 120 Ohm termination resistors at both ends of the bus have to be added externally.

3. **NUMBER OF NODES:**

The RS485 electrical interface standard (EIA-485) allows up to 32 nodes to be connected to a single bus. The bus transceiver used on the TMCM-1111 units (SN65HVD3082ED) has just 1/8th of the standard bus load and allows a maximum of 256 units to be connected to a single RS485 bus.

4. **NO FLOATING BUS LINES:**

Avoid floating bus lines while neither the host/master nor one of the slaves along the bus line is transmitting data (all bus nodes switched to receive mode). Floating bus lines may lead to communication errors. In order to ensure valid signals on the bus it is recommended to use a resistor network connecting both bus lines to GND resp. +5V. In contrast to the termination resistors this network is normally required just once per bus. Certain RS485 interface converters available for PCs already include these additional resistors (e.g. USB-2-485).



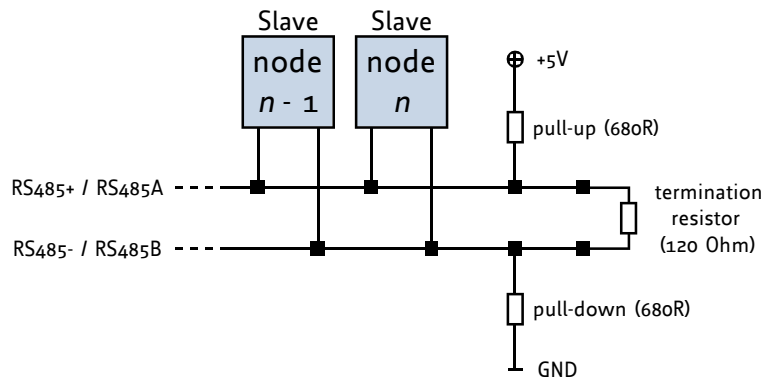


Figure 7: RS485 bus lines with resistor network

8.2 USB

For remote control and communication with a host system the TMCM-1111 StepRocker provides a USB 2.0 full-speed (12Mbit/s) interface (mini-USB connector). As soon as a USB-Host is connected the module will accept commands via USB. The TMCM-1111 supports USB self powered operation (External power supplied via the power supply connector) and USB bus powered operation, also (no external power is supplied via the power supply connector). During USB bus powered operation, only the core digital circuit parts will be operational. That is, the microcontroller itself and also the EEPROM. Of course, any motor movement will not be possible in this mode. This mode has been implemented in order to enable configuration / parameter setting / read-out, firmware updates etc. by just connecting a USB cable between the module and a host PC. No other connection / additional power supply is required.

8.3 CAN (Retro-fit Option)

For remote control and communication with a host system the TMCM-1111 StepRocker can be equipped with a CAN bus interface. Please note, that it is necessary to add CAN transceiver and filter capacitor first for the standard TMCM-1111 StepRocker version (see 4.5.1).

For proper operation the following items should be taken into account when setting up a CAN network:

1. BUS STRUCTURE:

The network topology should follow a bus structure as closely as possible. That is, the connection between each node and the bus itself should be as short as possible. Basically, it should be short compared to the length of the bus.

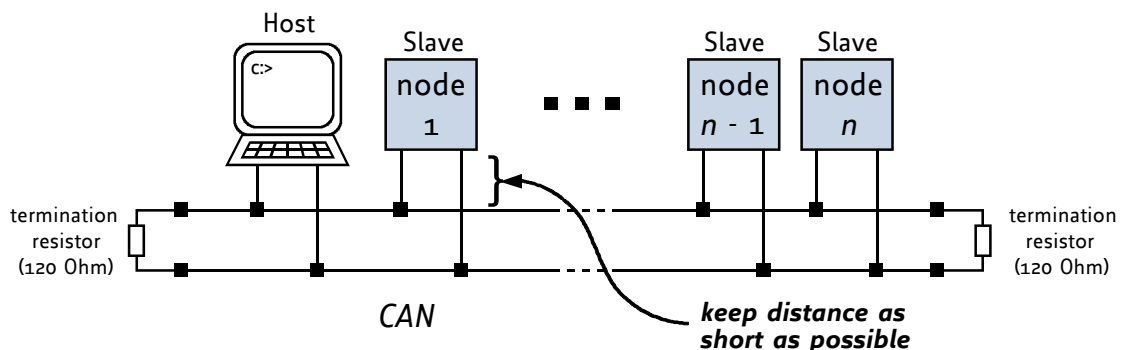


Figure 8: CAN bus structure with termination resistors



2. *BUS TERMINATION:*

Especially for longer busses and/or multiple nodes connected to the bus and/or high communication speeds, the bus should be properly terminated at both ends. The TMCM-1111 does not integrate any termination resistor. Therefore, 120 Ohm termination resistors at both ends of the bus have to be added externally.



9 Functional Description

The TMCM-1111 StepRocker is a highly integrated single axis controller/driver module for stepper motors. It can be controlled via RS485 or USB serial interfaces (CAN retro-fit option) and comes with the PC based software development environment TMCL-IDE for the Trinamic Motion Control Language (TMCL™). Using predefined TMCL™ high level commands like *move to position* a rapid and fast development of motion control applications is guaranteed. Whereas the boot loader is installed during production and testing at TRINAMIC and remains usually untouched throughout the whole lifetime, the firmware can be updated by the user.

Communication traffic is kept low since all time critical operations, e.g. ramp calculation, are performed on-board. Full remote control of the device with feedback is possible. The firmware of the module can be updated via any of the serial interfaces.

The TMCM-1111 StepRocker contains the following main components:

- Microcontroller (ARM Cortex-M4™, MK20DX128VLK7), responsible for overall control and communication
- TMC4361 highly integrated advanced stepper motor controller. Supports linear and S-shaped ramps. Together with an external encoder closed-loop operation is supported.
- TMC262 advanced stepper motor driver IC with StallGuard2™ and CoolStep™ with MOSFET driver stage (4x N+P power MOSFETs for bipolar stepper motor) for motor 0
- RS485 and USB transceivers
- On-board voltage regulators (+5V and +3V3) required for supply of all on-board digital circuits

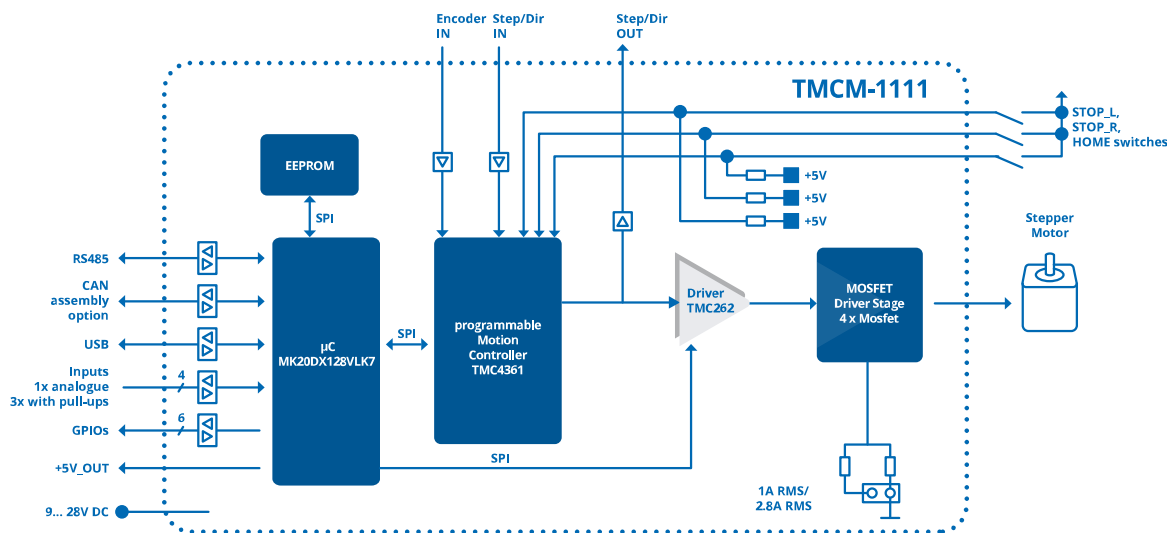


Figure 9: TMCM-1111 StepRocker block diagram



10 Operational Ratings and Characteristics

NOTICE

Never Exceed the absolute maximum ratings! Keep the power supply voltage below the upper limit of +30V! Otherwise the board electronics will seriously be damaged! Especially, when the selected operating voltage is near the upper limit a regulated power supply is highly recommended.

General Operational Ratings					
Symbol	Parameter	Min	Typ	Max	Unit
V_{Power}	Power supply voltage	10	12...24	30	V
V_{USB}	Power supply via USB connector		5		V
I_{USB}	Current withdrawn from USB supply when USB bus powered (no other supply connected)		70		mA
I_{COIL}	Motor coil current for sine wave peak (chopper regulated, adjustable via software)	0		1500 or 4000	mA
I_{MC}	Continuous motor current (RMS)	0		1000 or 2800	mA
T_{ENV}	Environmental temperature at rated current (no forced cooling required)	-25		60	°C

Table 15: General operational ratings of the module

Operational Ratings of the RS485 Interface					
Symbol	Parameter	Min	Typ	Max	Unit
N_{RS485}	Number of nodes connected to single RS485 network			256	

Table 16: Operational ratings of the RS485 interface



11 Abbreviations used in this Manual

Abbreviation	Description
IDE	Integrated Development Environment
LED	Light Emmitting Diode
RMS	Root Mean Square value
TMCL	TRINAMIC Motion Control Language

Table 17: Abbreviations used in this Manual



12 Figures Index

1	Board Dimensions and Position of Mounting Holes (all Values in mm) . . .	5	5	TMCM-1111 StepRocker LEDs	15
2	TMCM-1111 StepRocker Connectors . . .	6	6	RS485 bus structure with termination resistors	16
3	TMCM-1111 StepRocker Programming Pads	12	7	RS485 bus lines with resistor network	17
4	Jumper Settings of TMCM-1111 StepRocker	14	8	CAN bus structure with termination resistors	17
			9	TMCM-1111 StepRocker block diagram	19



13 Tables Index

1	TMCM-1111 StepRocker Order Code	4	10	Step/Dir Output Connector Pin Assignment	11
2	Connector Types and Mating Connectors of the TMCM-1111 StepRocker	7	11	+5V Output Connector Pin Assignment	12
3	Power Supply Connector Pin Assignment	8	12	Programming Pads on Bottom of PCB	12
4	I/O Connector Pin Assignment	9	13	Jumpers of the TMCM-1111 StepRocker	14
5	Motor Connector Pin Assignment	9	14	LED Description	15
6	STOP_L, STOP_R and HOME Switch Connector Pin Assignment	10	15	General operational ratings of the module	20
7	RS485/CAN Connector Pin Assignment	10	16	Operational ratings of the RS485 interface	20
8	USB Connector Pin Assignment	11	17	Abbreviations used in this Manual	21
9	Step/Dir Input Connector Pin Assignment	11	18	Hardware Revision	26
			19	Document Revision	26



14 Supplemental Directives

14.1 Producer Information

14.2 Copyright

TRINAMIC owns the content of this user manual in its entirety, including but not limited to pictures, logos, trademarks, and resources. © Copyright 2021 TRINAMIC. All rights reserved. Electronically published by TRINAMIC, Germany.

Redistributions of source or derived format (for example, Portable Document Format or Hypertext Markup Language) must retain the above copyright notice, and the complete Datasheet User Manual documentation of this product including associated Application Notes; and a reference to other available product-related documentation.

14.3 Trademark Designations and Symbols

Trademark designations and symbols used in this documentation indicate that a product or feature is owned and registered as trademark and/or patent either by TRINAMIC or by other manufacturers, whose products are used or referred to in combination with TRINAMIC's products and TRINAMIC's product documentation.

This Hardware Manual is a non-commercial publication that seeks to provide concise scientific and technical user information to the target user. Thus, trademark designations and symbols are only entered in the Short Spec of this document that introduces the product at a quick glance. The trademark designation /symbol is also entered when the product or feature name occurs for the first time in the document. All trademarks and brand names used are property of their respective owners.

14.4 Target User

The documentation provided here, is for programmers and engineers only, who are equipped with the necessary skills and have been trained to work with this type of product.

The Target User knows how to responsibly make use of this product without causing harm to himself or others, and without causing damage to systems or devices, in which the user incorporates the product.

14.5 Disclaimer: Life Support Systems

TRINAMIC Motion Control GmbH & Co. KG does not authorize or warrant any of its products for use in life support systems, without the specific written consent of TRINAMIC Motion Control GmbH & Co. KG.

Life support systems are equipment intended to support or sustain life, and whose failure to perform, when properly used in accordance with instructions provided, can be reasonably expected to result in personal injury or death.

Information given in this document is believed to be accurate and reliable. However, no responsibility is assumed for the consequences of its use nor for any infringement of patents or other rights of third parties which may result from its use. Specifications are subject to change without notice.

14.6 Disclaimer: Intended Use

The data specified in this user manual is intended solely for the purpose of product description. No representations or warranties, either express or implied, of merchantability, fitness for a particular purpose



or of any other nature are made hereunder with respect to information/specification or the products to which information refers and no guarantee with respect to compliance to the intended use is given.

In particular, this also applies to the stated possible applications or areas of applications of the product. TRINAMIC products are not designed for and must not be used in connection with any applications where the failure of such products would reasonably be expected to result in significant personal injury or death (safety-Critical Applications) without TRINAMIC's specific written consent.

TRINAMIC products are not designed nor intended for use in military or aerospace applications or environments or in automotive applications unless specifically designated for such use by TRINAMIC. TRINAMIC conveys no patent, copyright, mask work right or other trade mark right to this product. TRINAMIC assumes no liability for any patent and/or other trade mark rights of a third party resulting from processing or handling of the product and/or any other use of the product.

14.7 Collateral Documents & Tools

This product documentation is related and/or associated with additional tool kits, firmware and other items, as provided on the product page at: www.trinamic.com.



15 Revision History

15.1 Hardware Revision

Version	Date	Author	Description
V1.0	2017-JAN-23	GE	Initial version
V1.1	2017-AUG-02	GE	Minor changes: plating added to mounting holes and resistor values of input dividers adapted in order to improve compatibility with version TMCM-1110

Table 18: Hardware Revision

15.2 Document Revision

Version	Date	Author	Description
0.90	2017-JUN-12	GE	First version.
1.00	2017-SEP-06	GE	Minor corrections + adapted to hardware version 1.1.
1.01	2017-OCT-10	OK	New product picture on first page.
1.02	2021-MAR-26	OK	Added reset to factory default.

Table 19: Document Revision

