

TECHNICAL DATA

Fluke 1662 Multifunction Tester with TruTest Data Management Software Kit



Key features

- 1662 Multifunction Tester
- TruTest Data Management Software"

Product overview: Fluke 1662 Multifunction Tester with TruTest Data Management Software Kit

[Fluke 1662 Multifunction Tester](#)


The Fluke 1662 installation tester gives you Fluke reliability and all the basic testing power you need for day-in, day-out installation testing. It tests to all local regulations and is easy and intuitive to use. Additional helpful features like the On/Off switchable auto-start for RCD and loop test, and self-test save time and give you more confidence in your results.

[Fluke TruTest Data Management Software](#)

Fluke TruTest Software is designed to eliminate the hassle associated with traditional electrical system data management and reporting. Whether you are testing fixed wire installations, or appliances in an office, verifying repairs in a workshop, or performing annual inspections proper data management is critical for producing easy-to-understand reports for clients. Compatible with a growing list of Fluke and Beha-Amprobe test and measurement devices TruTest Software allows you to quickly and easily import measurement results directly from your test instruments, manage files transferred from instruments, or manually enter data as needed.

Specifications: Fluke 1662 Multifunction Tester with TruTest Data Management Software Kit

AC voltage measurement	
Range	500 V
Resolution	0.1 V
Accuracy 45 Hz – 66 Hz	0.8% + 3
Input impedance	360 k Ω
Overload protection	660 V rms
Continuity testing (RLO)	
Range (autoranging)	20 Ω / 200 Ω / 2000 Ω
Resolution	0.01 Ω / 0.1 Ω / 1 Ω
Open Circuit Voltage	>4 V
Insulation resistance measurement (RISO)	
Accuracy of tTest voltage (at rated test current)	+10%, -0%
Test voltage	100 V 250 V 500 V 1000 V
Insulation resistance range	20 M Ω / 50 M Ω 20 M Ω / 100 M Ω 20 M Ω / 200 M Ω 20 M Ω / 200 M Ω / 500 M Ω 20 M Ω / 200 M Ω / 1000 M Ω
Resolution	0.01 M Ω / 0.1 M Ω 0.01 M Ω / 0.1 M Ω 0.01 M Ω / 0.1 M Ω 0.01 M Ω / 0.1 M Ω / 1 M Ω 0.01 M Ω / 0.1 M Ω / 1 M Ω
Test current	1 mA @ 50 k Ω 1 mA @ 100 k Ω 1 mA @ 250 k Ω 1 mA @ 500 k Ω 1 mA @ 1 M Ω
Loop and line impedance (ZI)	
Range	10 Ω / 0.001 Ω / High current m Ω mode
Resolution	0.01 Ω / 0.1 Ω / 1 Ω
Prospective earth fault current, PSC test	
Range	1000 A / 10 kA (50 kA)
Resolution	1 A / 0.1 kA

Computation	Prospective earth fault current (PEFC) or Prospective short circuit current (PSC) determined by dividing measured mains voltage by measured loop (L-PE) resistance or line (L-N) resistance, respectively.	
RCD testing, RCD types tested		
RCD Type	A ⁴ , AC ¹ , G ² , S ³	
Notes	¹ Responds to AC ² General, no delay ³ Time delay ⁴ Responds to pulsed signal ⁵ Responds to smooth DC signal	
Tripping speed test (ΔT)		
Current settings ¹	10-30-100-300-500-1000 mA – VAR 10-30-100 mA	
Multiplier	x ½, x 1 x 5	
Measurement range	RCD Type G	310 ms 50 ms
	RCD Type S	510 ms 160 ms
Notes	¹ 1000 mA type AC only 700 mA maximum type A in VAR mode VAR mode not available for type B.	
RCD/FI-Tripping Current Measurement/Ramp Test ($I\Delta N$)		
Current range	30% to 110% of RCD rated current ¹	
Step size	10% of $I\Delta N$ ²	
Dwell time	Type G	300 ms/step
	Type S	500 ms/step
Measurement accuracy	±5%	
Specified trip current ranges (EN 61008-1)	50% to 100% for Type AC 35% to 140% for Type A (>10 mA) 35% to 200% for Type A (≤10 mA) 50% to 200% for Type B ² 5% for Type B	
Notes	¹ 30% to 150% for Type A $I\Delta N > 10$ mA 30% to 210% for Type A $I\Delta N = 10$ mA 20% to 210% for Type B	
Phase Sequence Indication		
Icon	 Phase Sequence indicator is active.	
General Specifications		
Size (L x W x H)	10 x 25 x 12.5 cm	
Weight (incl. batteries)	1.3 Kg	
Battery size, quantity	Type AA, 6 ea.	

Sealing	IP-40		
Safety	Complies with EN61010-1 Ed 2.0 (2001-02), UL61010, ANSI/ISA –s82.02.01 2000 and CAN/CSA c22.2 No. 1010 2nd edition		
Overvoltage	CAT III / 500V; CAT IV 300V		
Performance	EN61557-1 to EN61557-7 Second Edition and EN61557-10 Second Edition		
Function	Demo	Lite	Advanced
Database structure (Local standalone or server based)	Local	Local	Local
Portable Appliance Tester (PAT) module	•	•	•
Portable Appliance Testers supported	Fluke 6500, Fluke 6500-2, Beha-Amprobe GT-600, Beha-Amprobe GT-650, Beha-Amprobe GT-800, Beha-Amprobe GT-900		
Maximum addable clients	1	2	Unlimited
Maximum addable sites/client	2	5	Unlimited
Maximum addable locations/client	5	50	Unlimited
Maximum addable appliances/client	20	1000	Unlimited
Installation Testers (INST) module	•	•	•
Installation Testers supported	Fluke 1653, Fluke 1653B, Fluke 1654B, Fluke 1662, Fluke 1663, Fluke 1664 FC, Beha-Amprobe ProInstall-100, Beha-Amprobe ProInstall-200		
Maximum addable clients	1	2	Unlimited
Maximum addable sites/client	2	5	Unlimited
Maximum addable locations/client	5	25	Unlimited
Maximum addable appliances/client	50	200	Unlimited
Include demo database	•	•	•
Create clients	•	•	•
Rename clients		•	•
Delete clients	•	•	•
Create nodes	•	•	•
Move nodes	•	•	•
Rename nodes		•	•
Delete nodes	•	•	•
Edit client information		•	•
Edit site information		•	•



Edit location information		•	•
Edit appliance information		•	•
Edit test information		•	•
Add test step		•	•
Delete test step		•	•
Edit test step		•	•
Add remarks		•	•
Add attachment (file) to remark			•
Edit remark		•	•
Delete remark		•	•
Read data from instrument	•	•	•
Read data from file	•	•	•
Read data conflict management	•	•	•
Read data assign tree structure	•	•	•
Load data to instrument			*Compatible tool required
Use search	•	•	•
Show reports	With watermark	•	•
Show certificates	With watermark	•	•
Save (PDF, XML,...) /Print reports		•	•
Save (PDF, XML,...)/Print certificates		•	•
Add engineers	Demo engineer	•	•
Edit engineers		•	•
Delete engineers		•	•
Print engineers		•	•
Add test instruments	Demo instrument	•	•
Edit test instruments		•	•
Delete test instruments		•	•
Print test instruments		•	•

Edit my company info	Demo company	•	•
Edit company logo	Demo logo		•
Edit certification logo	Demo logo		•
View Auto Test Codes	•	•	•
Select favorites Auto Test Codes		•	•
Print favorites Auto Test Codes		•	•
Print All Auto Test Codes		•	•
Create customized Auto Test Codes			•
Edit customized Auto Test Codes			•
Copy customized Auto Test Codes			•
Delete customized Auto Test Codes			•
Print Customized Auto Test Codes			•
Create backup		•	•
Restore backup		•	•
Maximum users	1 Demo user	2	Unlimited
Add users		•	•
Edit users		•	•
User roles		•	•
Edit user roles		•	•
Print users list		•	•
Edit limits		•	•
Available languages	EN, DE, FR, IT, NL		
Supported Installation certificates	DIN VDE 0701-0702, ÖVE/ÖNORM E 8701, SNR 462638, NEN3140, International template		
Change language	•	•	•
Change country	•	•	•
Change report language			•
Expire duration	60 days (calculated from installation date)	Unlimited	
Free updates		5 years (calculated from enter serial code date)	
Expiration popup notice	Daily	Every 30 days after 5 year free update period	



Activation date with days left until expiration	•	•	•
---	---	---	---

System requirements

Type	Requirement
Operating System	<ul style="list-style-type: none">• Microsoft Windows 10, 64-bit and 32-bit (recommended)• Microsoft Windows 8/8.1, 64-bit and 32-bit• Microsoft Windows 7 with Service Pack 1, 64-bit and 32-bit
System Memory	Minimum 4 GB RAM (64-bit) or 2 GB RAM (32-bit)
Hard disk space	Minimum 2 GB available hard disk space
Display resolution	Minimum screen resolution 1366 x 768
Communication interfaces	USB

Ordering information



Fluke 1662 FTT Kit

Fluke 1662 Multifunction Tester with TruTest Software Kit

Includes:

- 1662 Multifunction Installation Tester
- 6x AA (IEC LR6) cell batteries
- C1600 hard carrying case
- Zero adapter
- Heavy duty mains cord
- STD standard test lead set
- Padded carrying and waist strap
- Quick reference guide
- TP165X remote control probe and lead
- IR189USB cable
- TruTest Data Management Software

Fluke 1662 SCH FTT Kit

Fluke 1662 Multifunction Tester with TruTest Software Kit

Includes:

- 1662 Multifunction Installation Tester
- 6x AA (IEC LR6) cell batteries
- C1600 hard carrying case
- Zero adapter
- Heavy duty mains cord
- STD standard test lead set

- Padded carrying and waist strap
 - Quick reference guide
 - TP165X remote control probe and lead
 - IR189USB cable
 - TruTest Data Management Software
-

Fluke 1662 ITDK FTT Kit

Fluke 1662 Multifunction Tester with TruTest Software Kit

Includes:

- 1662 Multifunction Installation Tester
 - 6x AA (IEC LR6) cell batteries
 - C1600 hard carrying case
 - Zero adapter
 - Heavy duty mains cord
 - STD standard test lead set
 - Padded carrying and waist strap
 - Quick reference guide
 - TP165X remote control probe and lead
 - IR189USB cable
 - TruTest Data Management Software
-

Fluke 1662 CH FTT Kit

Fluke 1662 Multifunction Tester with TruTest Software Kit

Includes:

- 1662 Multifunction Installation Tester
 - 6x AA (IEC LR6) cell batteries
 - C1600 hard carrying case
 - Zero adapter
 - Heavy duty mains cord
 - STD standard test lead set
 - Padded carrying and waist strap
 - Quick reference guide
 - TP165X remote control probe and lead
 - IR189USB cable
 - TruTest Data Management Software
-

Fluke. *Keeping your world up and running.®*

Fluke (UK) Ltd.
52 Hurricane Way
Norwich, Norfolk
NR6 6JB
United Kingdom
Tel.: +44 (0)20 7942 0708
E-mail: cs.uk@fluke.com
www.fluke.com/en-gb

©2022 Fluke Corporation. All rights reserved.
Data subject to alteration without notice.
08/2022

**Modification of this document is not permitted
without written permission from Fluke Corporation.**