

**System Power Supply for TV Series****FET Controller Type  
3ch System Power Supply ICs****BD8606FV****•Description**

BD8606FV has realized the high performance and reliability required as a power supply for thin-screen TV.

Due to the high-speed load response, it is most suitable for TV-purpose processors with increasingly high performance, and due to the wide phase margin it leaves a good margin for board pattern & constant setting and so facilitates its application design.

As a high-reliability design, it has various built-in protection circuits (overcurrent protection, output voltage abnormal protection, thermal protection, and off-latch function at the time of abnormality etc.), therefore as an advantage it does not easily damage in every possible abnormal condition such as all-pin short circuit test etc. and hence most suitable for thin-screen TV which requires the high reliability.

**•Features**

- 1) 3ch synchronous rectification step-down system DC/DC converter controller
- 2) 3ch independent ON/OFF. controllable
- 3) Soft start, soft off function
- 4) Concentrated protection control with built-in sequencer
- 5) Built-in low voltage protection function
- 6) Built-in overvoltage protection function
- 7) Built-in overcurrent protection function
- 8) Built-in RT terminal open/short protection function
- 9) Frequency setting by external resistance is available.
- 10) Protection condition is output from PDET terminal.
- 11) Built-in external reset output function

Aug. 2008

● Electric characteristic

(Ta=25°C, VIN1, VIN2, VIN3=5.0V, VCC=5.0V, and GND=0V unless otherwise specified.)

Parameter	Symbol	specification value			UNIT	Condition
		MIN	TYP	MAX		
Circuit current 1	I <sub>Q1</sub>	-	2.5	5	mA	CTL1,2,3=0V
Circuit current 2	I <sub>Q2</sub>	-	5.0	10	mA	CTL1,2,3=VCC
<b>&lt; Error amplifier part Ch1,Ch2,Ch3 &gt;</b>						
Standard voltage (VREF)	V <sub>REF</sub>	0.792	0.8	0.808	V	Terminal FB and FC terminal short
Terminal FB Input bias current	I <sub>FBB</sub>	-1	0	1	μA	V <sub>FB</sub> =0.9V
Terminal FC Clamping voltage H	V <sub>FCH</sub>	1.8	-	-	V	V <sub>FB</sub> =0.7V
Terminal FC Clamping voltage L	V <sub>FCL</sub>	-	-	0.2	V	V <sub>FB</sub> =0.9V
Terminal FC Sink current	I <sub>FCSINK</sub>	0.5	-	-	mA	V <sub>FB</sub> =0.9V, V <sub>FC</sub> =0.4V
Terminal FC Source current	I <sub>FCSOURCE</sub>	-	-	-70	μA	V <sub>FB</sub> =0.7V, V <sub>FC</sub> =1.6V
Open loop gain	A <sub>VERR</sub>	-	100	-	dB	
<b>&lt; OSC part &gt;</b>						
Oscillation frequency	F <sub>OSC</sub>	100	-	600	kHz	
<b>&lt; Soft start part Ch1,Ch2,Ch3 &gt;</b>						
Charging current	I <sub>SS</sub>	-4.0	-2.5	-1.0	μA	V <sub>SS</sub> =1.0V
Terminal SS Threshold voltage	V <sub>SSTH</sub>	1.0	1.1	1.2	V	V <sub>SS</sub> voltage, V <sub>FC</sub> =0.8V
Terminal SS Clamping voltage	V <sub>SSCLM</sub>	1.44	1.72	2.0	V	
Terminal SS Standby voltage	V <sub>SSSTB</sub>	0.11	0.15	0.19	V	V <sub>SS</sub> voltage (L→H)
Terminal SS Standby voltage Maximum hysteresis error	V <sub>SSSTB_HYS</sub>	5	50	100	mV	
Terminal SS Discharge resistance	R <sub>SS</sub>	49	70	91	kΩ	
Terminal SS Protection circuit start voltage	V <sub>SSPON</sub>	1.0	1.1	1.2	V	V <sub>SS</sub> voltage (L→H)
Terminal SS Protection circuit start voltage Maximum hysteresis error	V <sub>SSPON_HYS</sub>	10	100	200	mV	V <sub>SS</sub> voltage
<b>&lt; Low voltage, over voltage detection part Ch1,Ch2,Ch3 &gt;</b>						
Terminal FB Low voltage detection voltage	V <sub>LVP</sub>	0.27	0.32	0.37	V	V <sub>FB</sub> voltage
Terminal FB Low voltage detection Maximum hysteresis error	V <sub>LVP_HYS</sub>	10	100	200	mV	V <sub>FB</sub> voltage
Terminal FB Overvoltage detection voltage	V <sub>OVF</sub>	1.08	1.2	1.32	V	V <sub>FB</sub> voltage
<b>&lt; Over current detection part Ch1,Ch2,Ch3 &gt;</b>						
Terminal LX input bias current	I <sub>LXB</sub>	-1	0	1	μA	
Terminal OCP input bias current	I <sub>OCPB</sub>	20	50	80	μA	
<b>&lt; Reset detection part &gt;</b>						
Terminal MONVCC reset detection voltage	V <sub>RSTO</sub>	0.98	1.0	1.02	V	V <sub>MONVCC</sub> voltage (H→L)
Terminal MONVCC input bias current	I <sub>MONVCCB</sub>	-1	0	1	μA	
Terminal RSTDLY charging current	I <sub>RSTDLY</sub>	-15	-10	-5	μA	
Terminal RESET L output voltage	V <sub>OL_RST</sub>	-	-	0.4	V	I <sub>OL</sub> =100μA
<b>&lt; Others &gt;</b>						
Terminal PDET L output voltage	V <sub>OL_PDET</sub>	-	-	0.4	V	I <sub>OL</sub> =100μA
Terminal CTL input voltage H level voltage	V <sub>IH_CTL</sub>	2.0	-	VCC	V	Terminal CTL1,2,3
Terminal CTL input voltage L level voltage	V <sub>IL_CTL</sub>	-	-	0.5	V	Terminal CTL1,2,3
Terminal CTL input current	I <sub>I_CTL</sub>	-	40	70	μA	Terminal CTL1,2,3, CTL=VCC
Terminal DRV H output voltage	V <sub>OH_DRV</sub>	4.5	-	-	V	Terminal DRV1A,2A,3A,1B,2B,3B
Terminal DRV L output voltage	V <sub>OL_DRV</sub>	-	-	0.5	V	Terminal DRV1A,2A,3A,1B,2B,3B

V<sub>FB</sub> : FB terminal voltage, V<sub>FC</sub> : FC terminal voltage, V<sub>SS</sub> : SS terminal voltage, V<sub>MONVCC</sub> : MONVCC terminal voltage

Not designed for radiation resistance.

Current capability should not exceed Pd.

● Block diagram

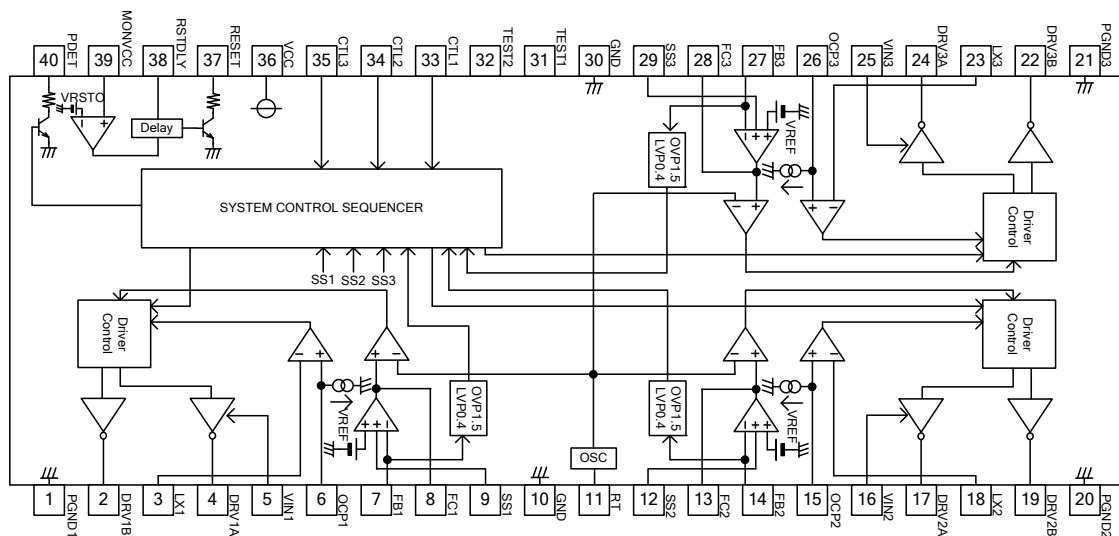


Figure 1 Block char

● Terminal explanation

Table 1 terminal explanation

No.	Symbol	Description	No.	Symbol	Description
1	PGND1	Ch1 power GND (same potential as GND terminal)	21	PGND3	Ch3 power GND (same potential as terminal GND)
2	DRV1B	Ch1 Nch drive output terminal	22	DRV3B	Ch3 Nch drive output terminal
3	LX1	Ch1 overcurrent detection terminal	23	LX3	Ch3 overcurrent detection terminal
4	DRV1A	Ch1 Pch drive output terminal	24	DRV3A	Ch3 Pch drive output terminal
5	VIN1	Ch1 power supply input terminal	25	VIN3	Ch3 power supply input terminal
6	OCP1	Ch1 overcurrent detection level resistance connection terminal	26	OCP3	Ch3 overcurrent detection level resistance connection terminal
7	FB1	Ch1 voltage detection terminal	27	FB3	Ch3 voltage detection terminal
8	FC1	Ch1 phase compensation terminal	28	FC3	Ch3 phase compensation terminal
9	SS1	Ch1 soft start adjustment capacity connection terminal	29	SS3	Ch3 soft start adjustment capacity connection terminal
10	GND	GND (0V connection)	30	GND	GND (0V connection)
11	RT	Frequency adjustment resistance connection terminal	31	TEST1	Test terminal (Connect to GND)
12	SS2	Ch2 soft start adjustment capacity connection terminal	32	TEST2	Test terminal (connect to GND)
13	FC2	Ch2 phase compensation terminal	33	CTL1	Ch1 control terminal
14	FB2	Ch2 voltage detection terminal	34	CTL2	Ch2 control terminal
15	OCP2	Ch2 overcurrent detection level resistance connection terminal	35	CTL3	Ch3 control terminal
16	VIN2	Ch2 power supply input terminal	36	VCC	Power supply input terminal
17	DRV2A	Ch2 Pch drive output terminal	37	RESET	Reset output terminal
18	LX2	Ch2 overcurrent detection terminal	38	RSTDLY	Reset delay adjustment capacity connection terminal
19	DRV2B	Ch2 Nch drive output terminal	39	MONVCC	VCC monitor terminal
20	PGND2	Ch2 power GND (same potential as terminal GND)	40	PDET	Off latch signal output

※Please give to VCC+0.3V as an operation condition in all input terminals.

However, please do not exceed the absolute maximum rating as VCC=VIN1=VIN2=VIN3.

● Terminal equivalent circuit chart

Terminal No.	Terminal name	Explanation	Terminal equivalent circuit chart
1	PGND1	Ch1 Power GND (GND Terminal and this potential)	
20	PGND2	Ch2 Power GND (GND Terminal and this potential)	
21	PGND3	Ch3 Power GND (GND Terminal and this potential)	
2	DRV1B	Ch1 Nch Driving output terminal	
19	DRV2B	Ch2 Nch Driving output terminal	
22	DRV3B	Ch3 Nch Driving output terminal	
3	LX1	Ch1 Over current detection terminal	
18	LX2	Ch2 Over current detection terminal	
23	LX3	Ch3 Over current detection terminal	
4	DRV1A	Ch1 Pch Driving output terminal	
17	DRV2A	Ch2 Pch Driving output terminal	
24	DRV3A	Ch3 Pch Driving output terminal	
5	VIN1	Ch1 Power supply input terminal	
16	VIN2	Ch2 Power supply input terminal	
25	VIN3	Ch3 Power supply input terminal	

Terminal No.	Terminal name	Explanation	Terminal equivalent circuit chart
6	OCP1	Ch1 Over current detection level Set resistance connection terminal	
15	OCP2	Ch2 Over current detection level Set resistance connection terminal	
26	OCP3	Ch3 Over current detection level Set resistance connection terminal	
7	FB1	Ch1 Voltage detection terminal	
14	FB2	Ch2 Voltage detection terminal	
27	FB3	Ch3 Voltage detection terminal	
8	FC1	Ch1 Phase amends terminal	
13	FC2	Ch2 Phase amends terminal	
28	FC3	Ch3 Phase amends terminal	

Terminal No..	Terminal name	Explanation	Terminal equivalent circuit chart
9	SS1	Ch1 Soft start Adjustment capacity connection terminal	
12	SS2	Ch2 Soft start Adjustment capacity connection terminal	
29	SS3	Ch3 Soft start Adjustment capacity connection terminal	
10	GND	GND (0V Connection)	
30	GND	GND (0V Connection)	
11	RT	Frequency adjustment resistance connection terminal	
31	TEST1	Test terminal	
32	TEST2	Test terminal	
33	CTL1	Ch1 Control terminal	
34	CTL2	Ch2 Control terminal	
35	CTL3	Ch3 Control terminal	

Terminal No.	Terminal name	Explanation	Terminal equivalent circuit chart
36	VCC	Power supply input terminal	
37	RESET	Reset output terminal	
38	RSTDLY	Reset Delay Adjustment capacity connection terminal	
39	MONVCC	VCC Monitor terminal	
40	PDET	Off latch output terminal	

● Circuit chart

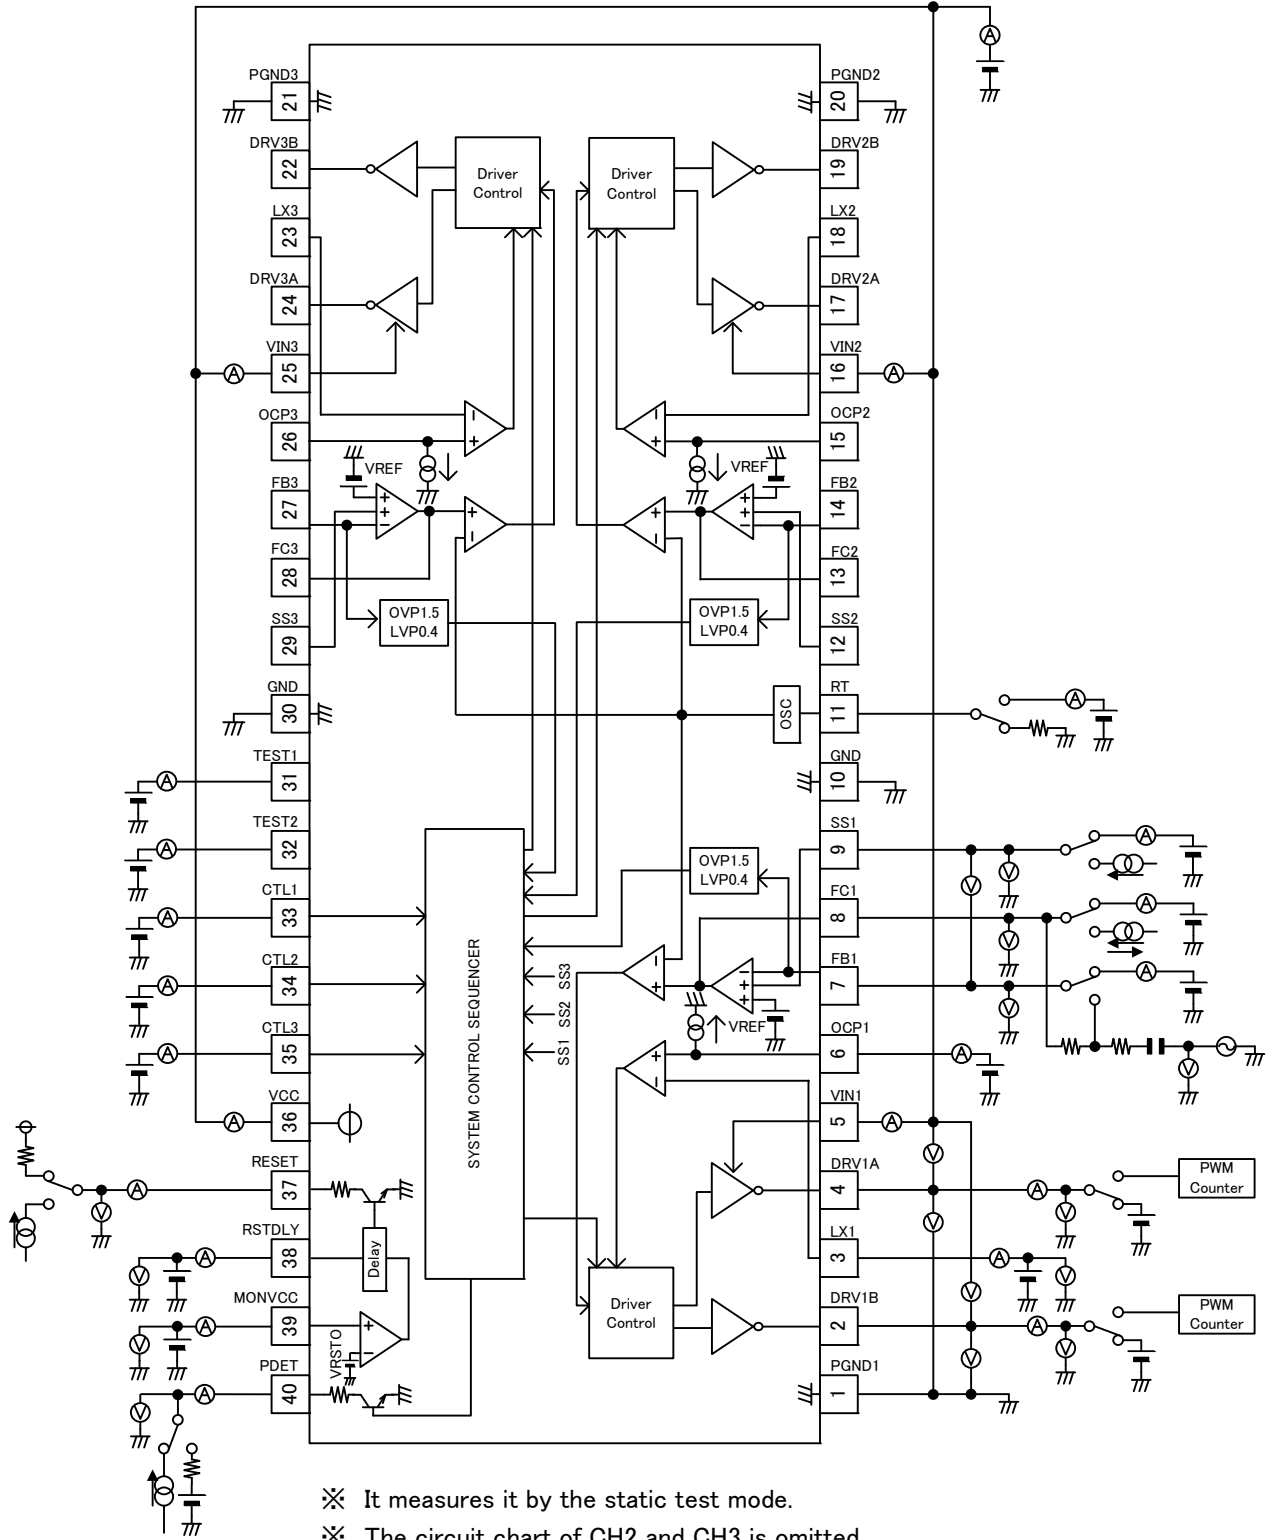


Figure 2 Circuit chart



● Application circuit chart

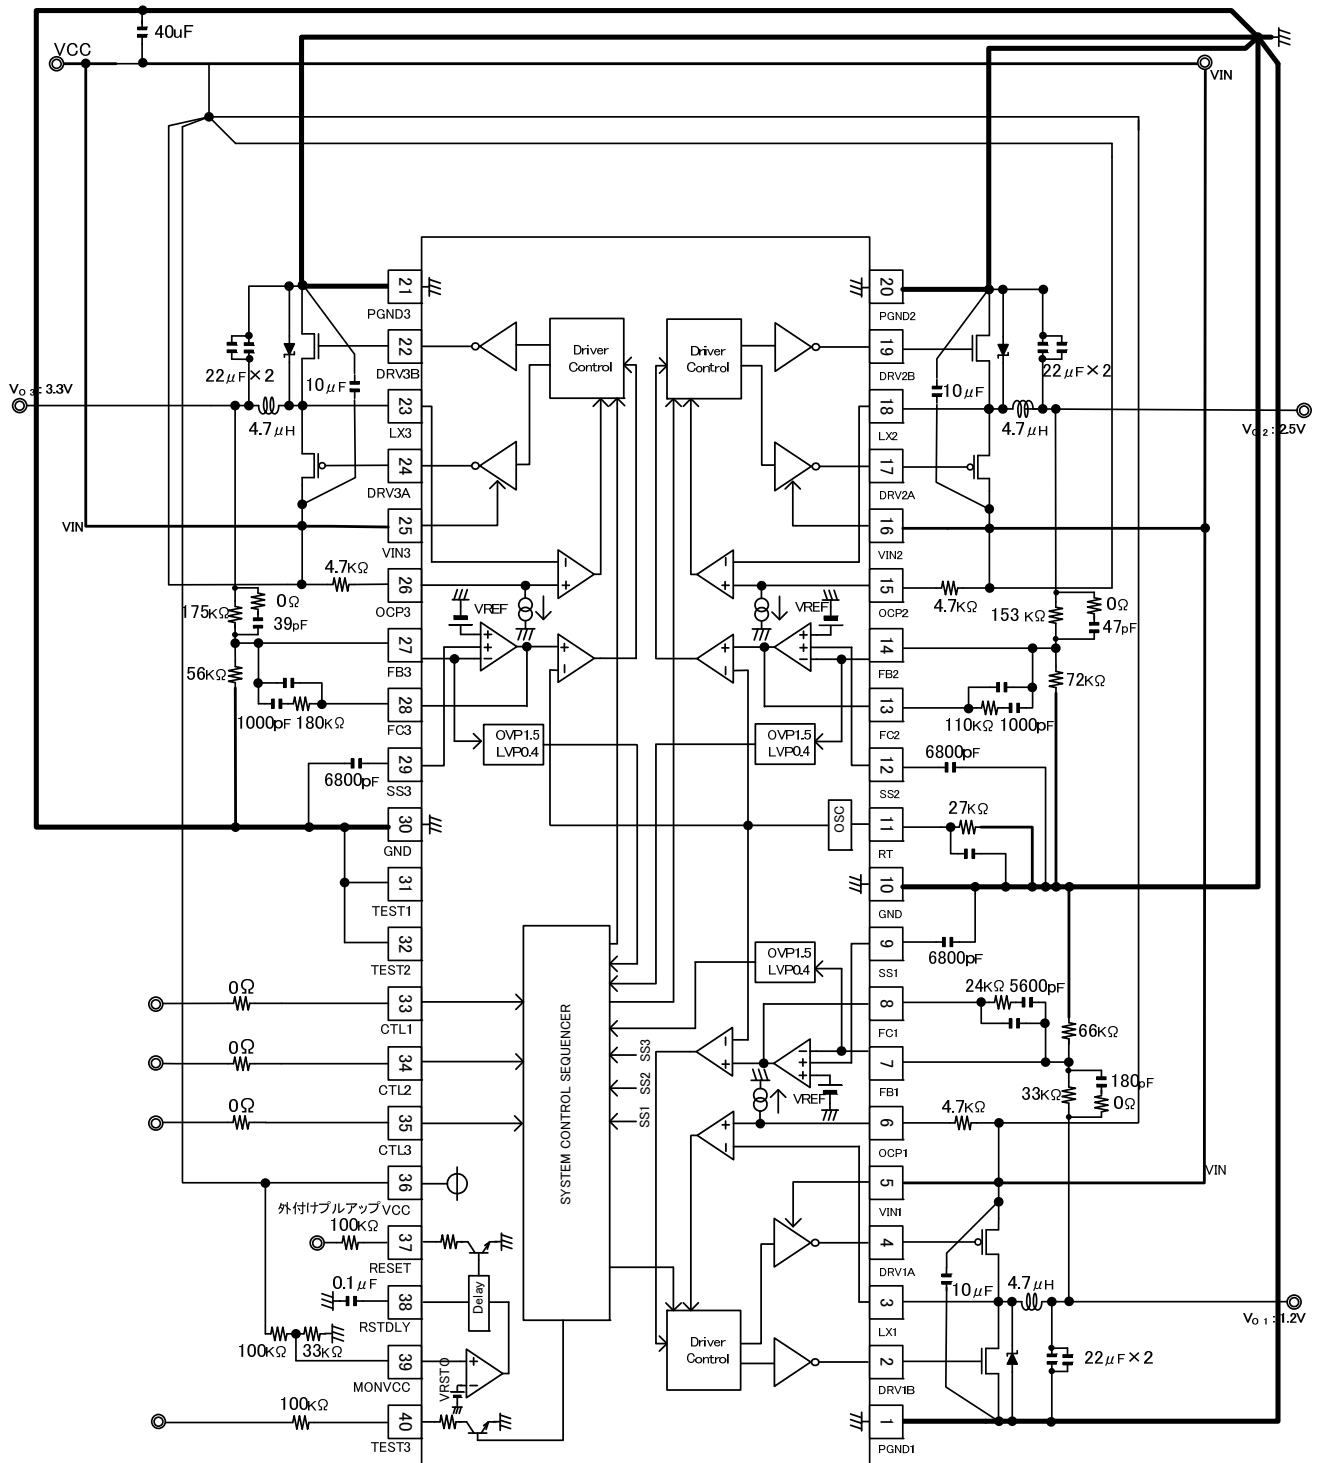


Figure 3 Application circuit chart

- Each characteristic reference data

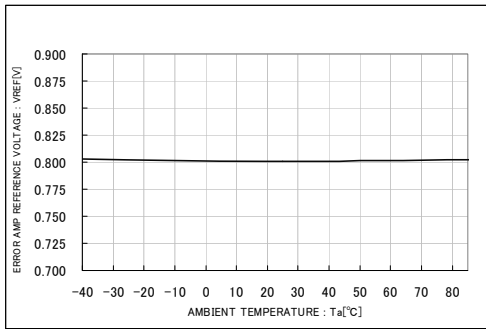


Figure 4 Standard voltage-temperature characteristic

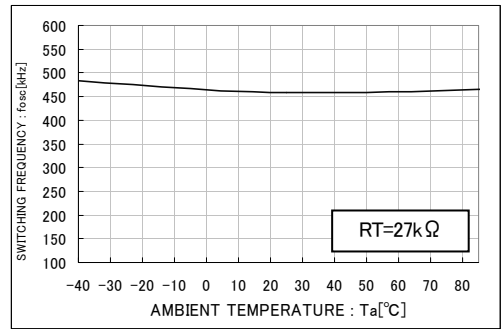


Figure 5 Switching frequency-temperature characteristic

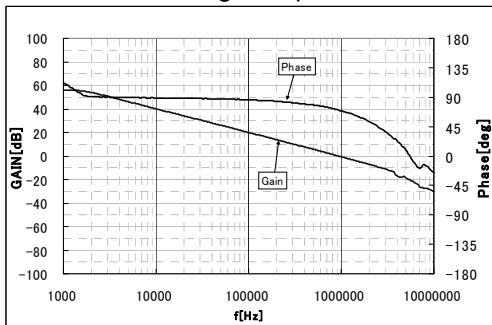


Figure 6 Open loop characteristic

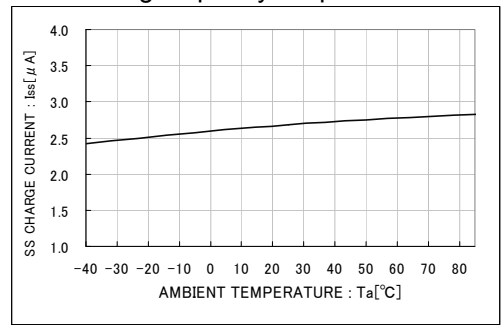


Figure 7 Terminal SS charge current-temperature characteristic

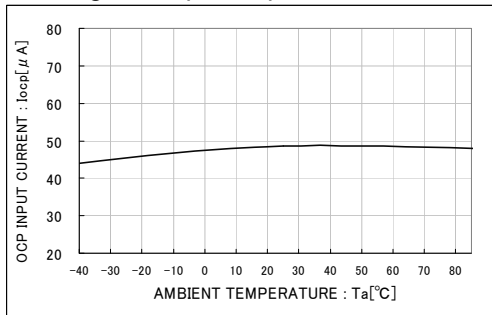


Figure 8 Terminal OCP inflow current-temperature characteristic

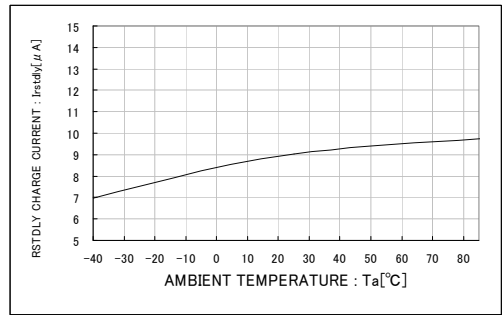


Figure 9 Terminal RSTDLY charge current-temperature characteristic

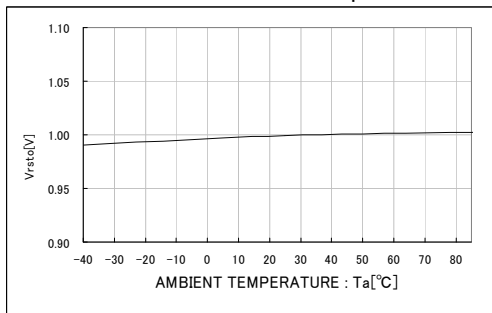


Figure 10 MONVCC reset detection voltage-temperature characteristic

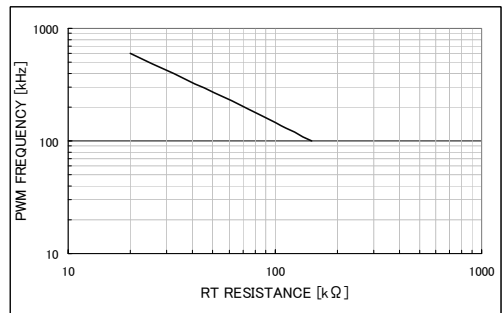


Figure 11 Switching frequency-terminal RT resistance characteristic

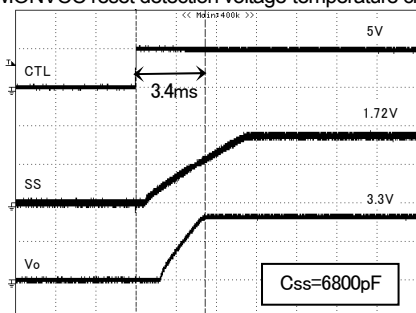


Figure 12 Soft start crimp

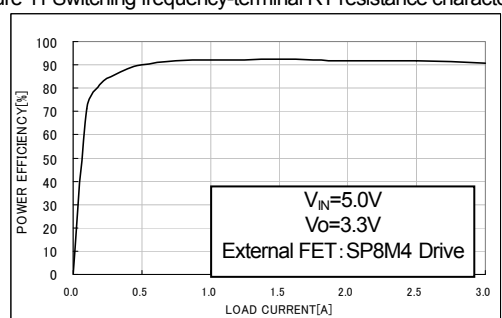


Figure 13 Efficiency

Reference data of dead time

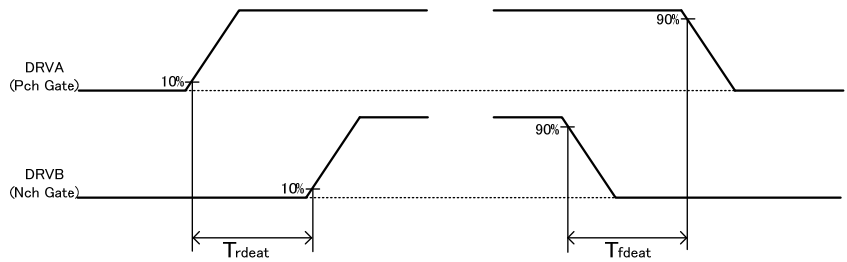


Figure 14 Dead time

(VCC=5.0V, VIN=5.0V, Ta=25°C)

Parameter	Symbol	min	typ	max	UNIT
PchMOS OFF→NchMOS ON Dead time	$T_{rdead}$	90	120	160	ns
NchMOS OFF→PchMOS ON Dead time	$T_{fdead}$	100	140	190	ns

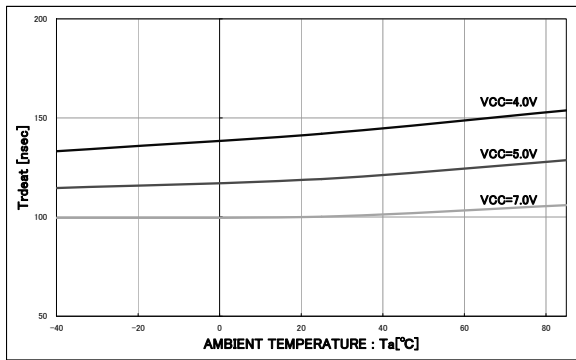


Figure 15 Dead time  $T_{rdead}$  - Temperature characteristic

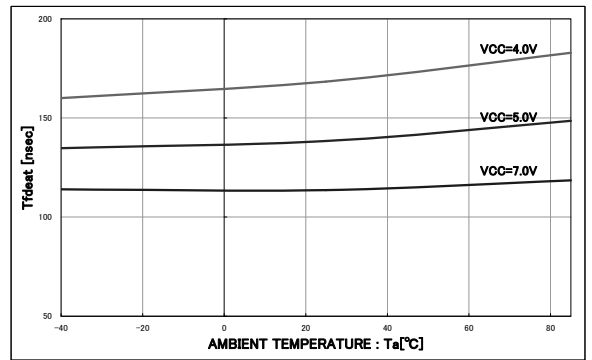


Figure 16 Dead time  $T_{fdead}$  - Temperature characteristic

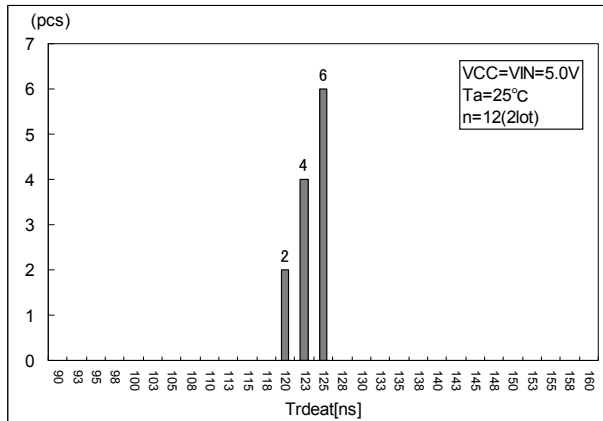


Figure 17 Dead time  $T_{rdead}$  - Difference

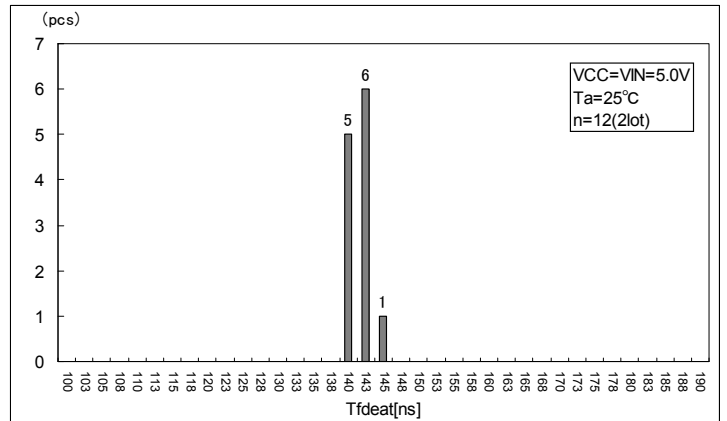


Figure 18 Dead time  $T_{fdead}$  - Difference

Reset detection data

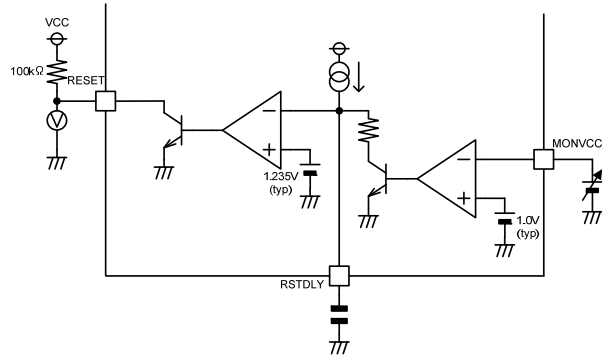


Figure 19 Circuit chart

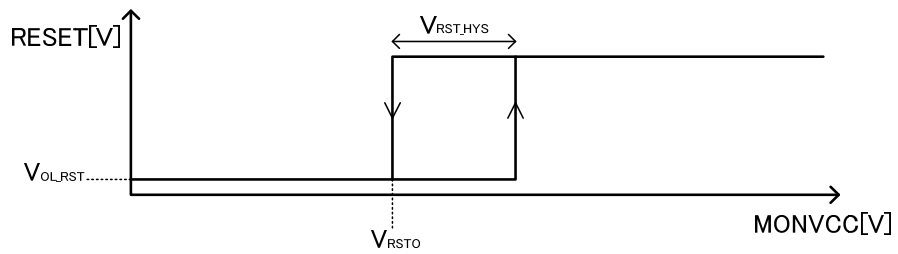



Figure 20 Reset detection

(VCC=5V, Ta=25°C)

Parameter	Symbol	min	typ	max	UNIT
Terminal MONVCC reset detection voltage	$V_{RSTO}$	0.98	1.0	1.02	V
Terminal MONVCC reset detection voltage Maximum hysteresis error	$V_{RST\_HYS}$	20	72	180	mV

Permissible loss

$\theta_{jc}$ [°C/W]	$\theta_{ja}$ [°C/W]	$T_{STGmin}$ [°C]	$T_{STGmax}$ [°C]	$T_{amin}$ [°C]	$T_{amax}$ [°C]	$T_{cmax}$ Destruction temperature [°C]	$T_{jmax}$ Destruction temperature [°C]
28.0	111.1	-50.0	150.0	-45.0	85.0	150.0	150.0

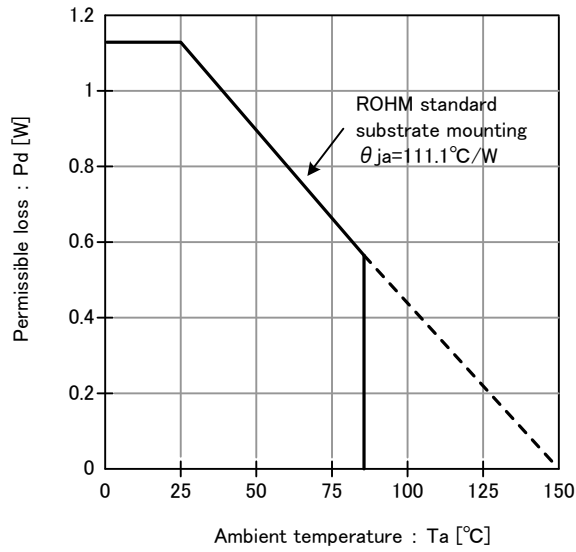

ROHM standard substrate specification  
 Material The glass epoxy  
 Size 70mm × 70mm × 1.6mmt

Figure 2 Heat decrease curve

※These values are the example values, and no guarantee values.

● **Operation description**

ON/OFF control

DC/DC converter controller ON/OFF function

DC/DC converter controller of each Ch can be independently controlled ON/OFF by CTL1, CTL2, and CTL3 terminal. Analog circuit of Ch interlocked to each CTL terminal starts operation at ON control (on mode), and goes down to setting output voltage.

Analog circuit of Ch interlocked to each CTL terminal should be standby at OFF control (off mode), and output voltage becomes 0V.

Table1 DC/DC converter controller ON/OFF function

CTL1 terminal voltage	Ch1	CTL2 terminal voltage	Ch2	CTL3 terminal voltage	Ch3
>VIHCTL1	ON control	>VIHCTL2	ON control	>VIHCTL3	ON control
<VILCTL1	OFF control	<VILCTL2	OFF control	<VILCTL3	OFF control

Soft start time set function

DC/DC converter controller of each Ch can do soft start without overshoot by charging soft start capacity (C<sub>SS</sub>) connected between ss terminal and GND in each Ch by charging current at ON control.

The mute of the output is released when it reaches V<sub>SS</sub>=0.15V (V<sub>SSSTB</sub>), and the output voltage does the soft start operation from the point of V<sub>SS</sub>=0.3V (typ) in proportion to the voltage of the terminal SS.

Also, soft start time (t<sub>SS</sub>) can be set by setting soft start capacity arbitrarily.

Soft start time (t<sub>SS</sub>) should be set at 3msec < t<sub>SS</sub> < 30msec.

※Please note that the overshoot is not caused in the output setting voltage when setting it to t<sub>SS</sub> ≤ 3msec.

$$t_{SS} = 400\mu s + \frac{1.1V \times C_{SS}}{2.5\mu A}$$

Discharge function

DC/DC converter controller of each Ch can do soft off by discharging load discharged to soft start capacity connected between SS terminal to GND by discharging resistance at OFF control.

Soft off operates in proportion to the voltage of the terminal SS the output voltage from the point of V<sub>SS</sub>=0.8V (typ).

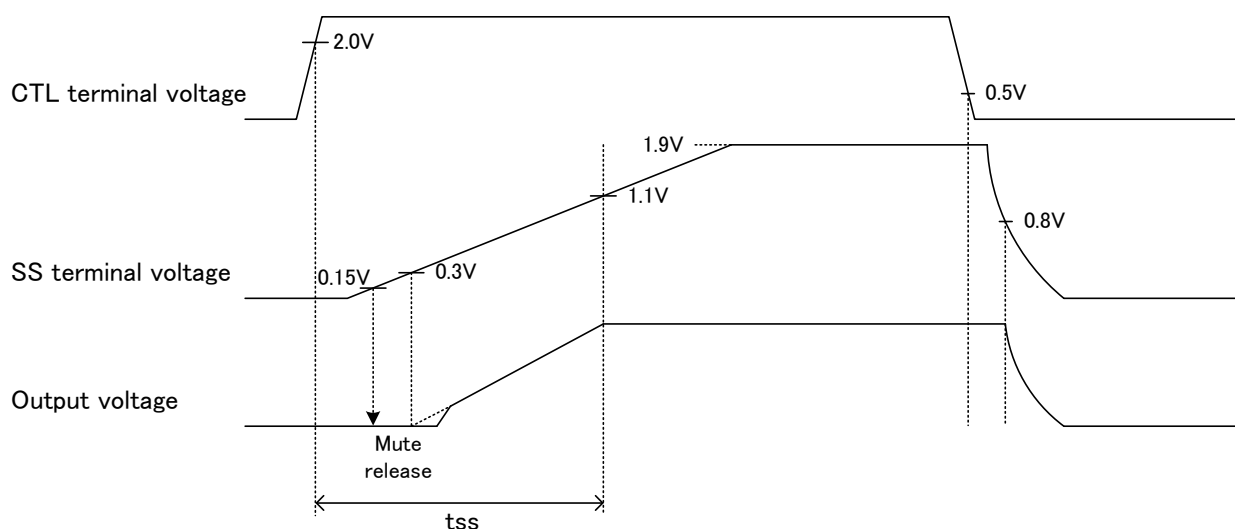


Figure 22 Wave form at ON/OFF control

OSC oscillation frequency setting function

DRVA and DRVB output oscillation frequency of DC/DC converter controller of each Ch can be set by installing resistance between RT terminal and GND externally.

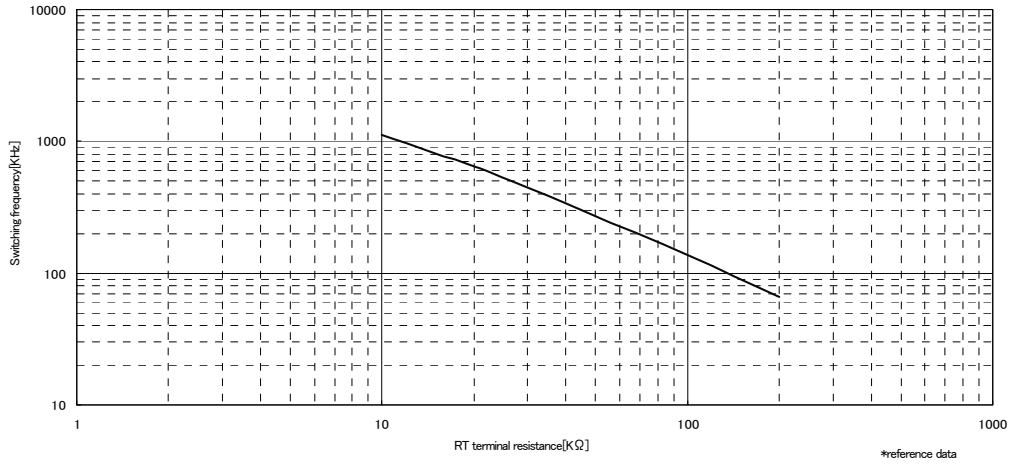


Figure 23 Terminal RT resistance-oscillation frequency

Off latch signal output function

PDET terminal outputs condition of off latch when protection operation of DC/DC converter controller of each Ch operates.

Table 2 PDET terminal off latch signal output function

Protection operation	Terminal PDET
ON	LOW
OFF	Hi-Z

Reset output function

Reset output function observes voltage value from MONVCC terminal and does reset operation compared to internal reference level.

Set MONVCC terminal external resistance to make VCC voltage more than 5.0V at reset release.

Table 3 DC/DC converter controller ON/OFF function

MONVCC terminal voltage	RESET terminal
< 1.0V(typ)	LOW
> 1.072V(typ)	Hi-Z

Delay time until detecting reset release is settable by capacitor connected to RSTDLY terminal.

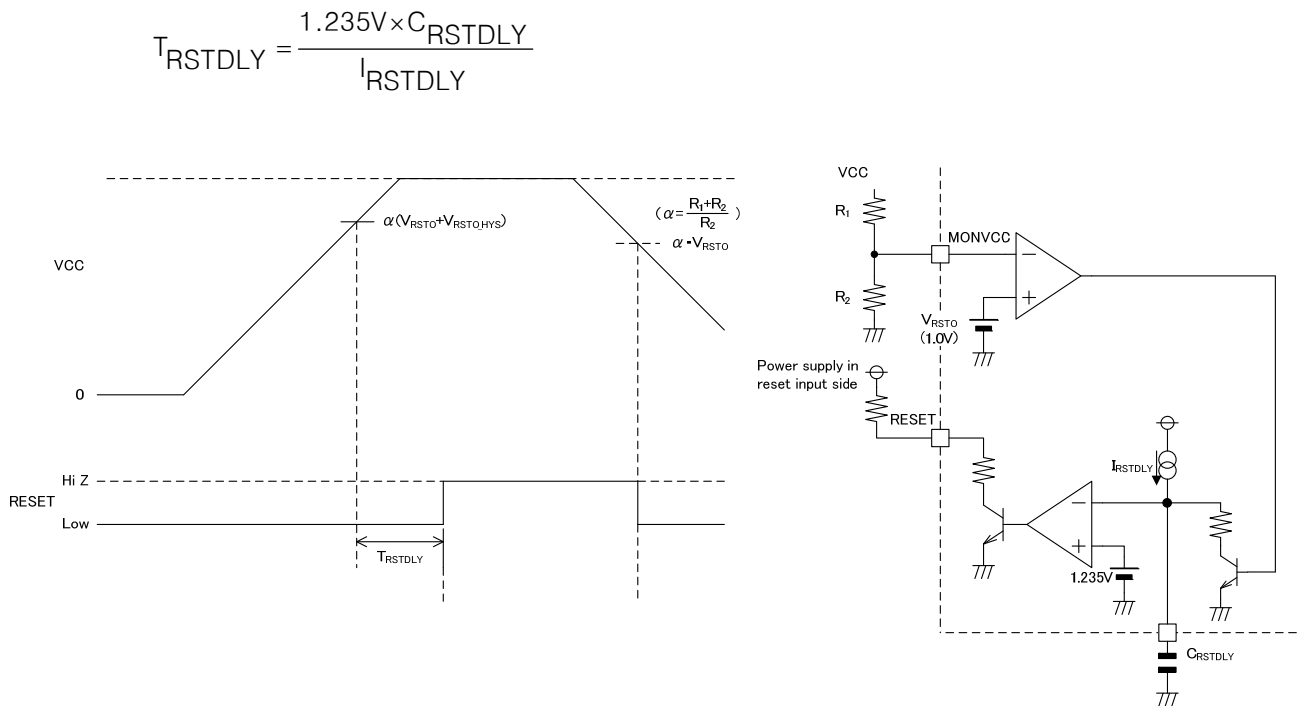


Figure 24 Reset operation  
( T<sub>RSTDLY</sub>: Delay time until detecting reset release )



### Output Duty

Output Duty of DRVA of the DC/DC converter controller of each Ch is decided depending on the voltage of the terminal FC of each Ch.

$$\text{Setting output Duty} = \frac{\text{Output setting voltage}}{\text{VIN voltage}} \times 100 \quad [\%]$$

$$9\% < \text{Setting output Duty} < 92\%$$

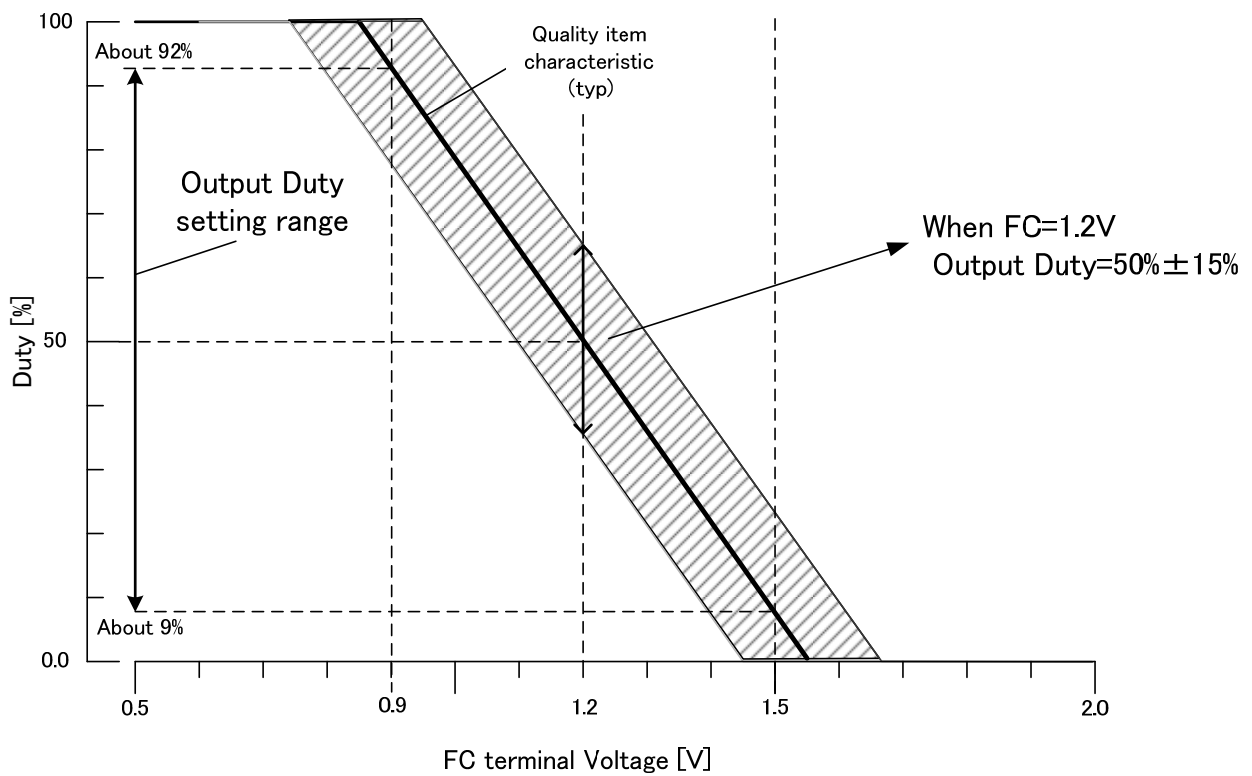


Figure 25 FC Voltage-Output Duty Linearity

● Protection function

Protection circuit is effective for destruction prevention due to accident so that avoid using by continuous protection operation.

Low voltage protection function(LVP)

Low voltage protection function detects output voltage  $V_O$  set in each Ch from FB terminal of each Ch and off-latched all DC/DC converter controller compared to internal reference level.

Low voltage protection function operates when FB terminal voltage falls below  $V_{LVP}$  ( $=1.5 \times V_{REF}$ ) and continues about more than 400 $\mu$ sec (typ).

Table 4 Low voltage protection function

CTL terminal	SS terminal	FB terminal	Low voltage protection function	Low voltage protection operation
$>V_{IHCTL}$	$>1.1V(\text{typ})$	$<V_{LVP}$	Enable	ON
		$>V_{LVP}+V_{LVP\_HYS}$		OFF
	$<1.0V(\text{typ})$	-	Disable	OFF
$<V_{ILCTL}$	-	-	Disable	OFF

※Constant voltage protection function is enabled when SS terminal voltage of each Ch becomes more than 1.1V (typ) in the transition to ON control (during soft start).

Overvoltage protection function(OVP)

Overvoltage protection function detects output voltage  $V_O$  set in each Ch from FB terminal of each Ch and off-latched all DC/DC converter controller compared to internal reference level.

Overvoltage protection function operates when FB terminal voltage exceeds  $V_{OVP}$  ( $=1.5 \times V_{REF}$ ) and continues about more than 400 $\mu$ sec (typ).

Table 5 Overvoltage protection function

CTL terminal	SS terminal	FB terminal	Overvoltage protection function	Overvoltage protection operation
$>V_{IHCTL}$	$>1.1V(\text{typ})$	$>V_{OVP}$	Effective	ON
		$<V_{OVP}$		OFF
	$<1.0V(\text{typ})$	-	Invalidity	OFF
$<V_{ILCTL}$	-	-	Invalidity	OFF

※Overvoltage protection function is enabled when SS terminal voltage of each Ch becomes more than 1.1V (typ) in the transition to ON control (during soft start).

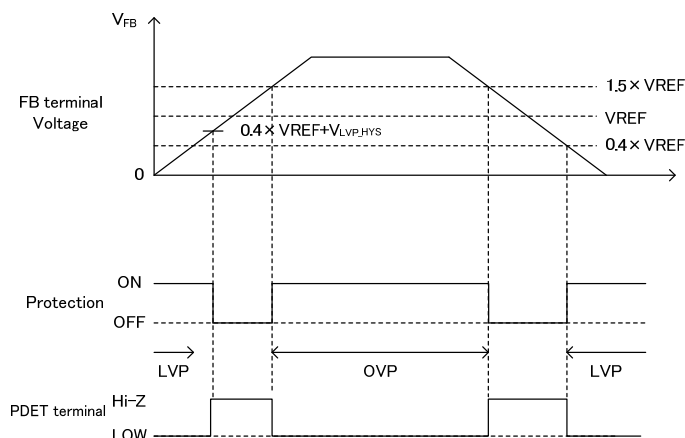


Figure 26 Low voltage and over voltage protection

Overcurrent protection function(OCP)

Overcurrent protection function compared drain voltage (LX terminal voltage) with OCP terminal voltage when external Pch POWER MOS is ON. When LX terminal voltage becomes lower than OCP terminal voltage, external MOS would be OFF. Up to 50uA (typ) of constant current from OCP terminal is synchronized. Overcurrent detection level (OCP terminal voltage) can be set arbitrarily by external resistance value.

Off latch by overcurrent protection function operates when LX terminal voltage falls below OCP terminal voltage and continues about more than 400μsec (typ).

Table 6 overcurrent protection function

CTL terminal	SS terminal	LX terminal voltage	Overcurrent protection function	Overcurrent protection operation
>VIHCTL	>1.1V(typ)	<VOCP	Enable	ON
		>VOCP		OFF
<VILCTL	<1.0V(typ)	-	Disable	OFF
	-	-	Disable	OFF

※Set OCP terminal voltage to be more than VIN-2.5V (typ).



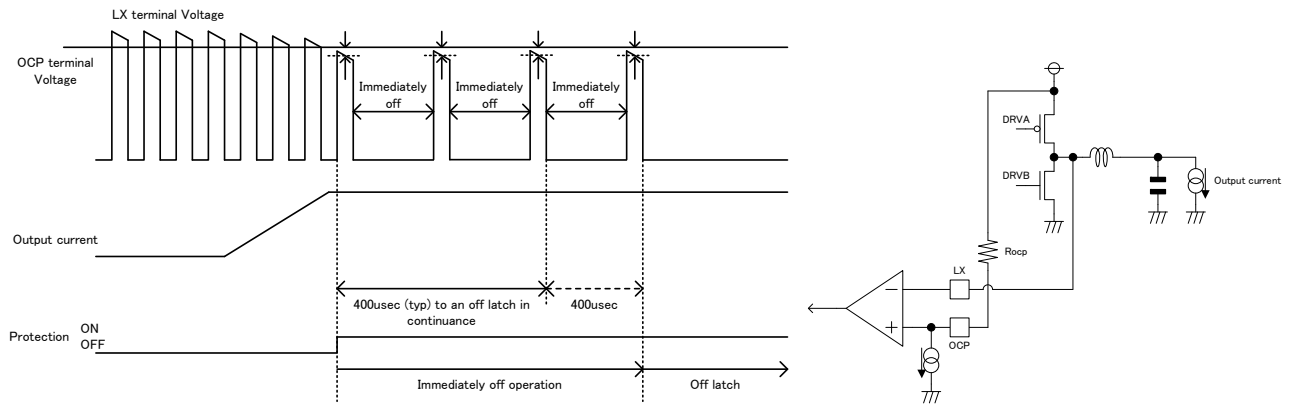


Figure 27 Overcurrent protection

Terminal FC abnormality protection function

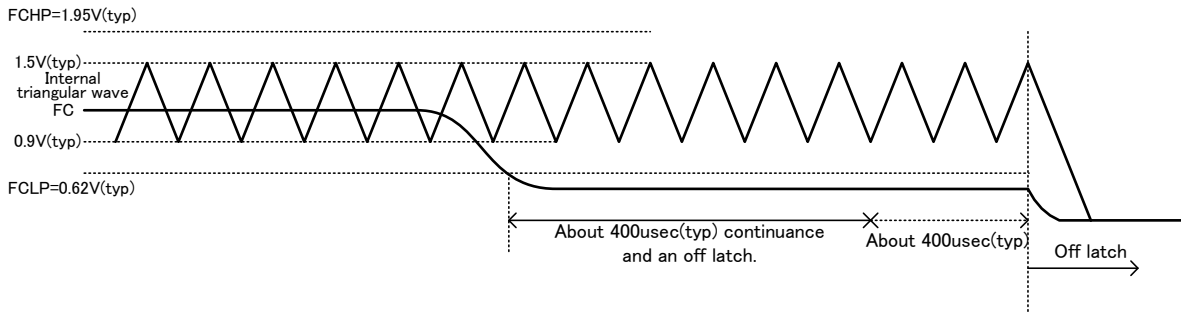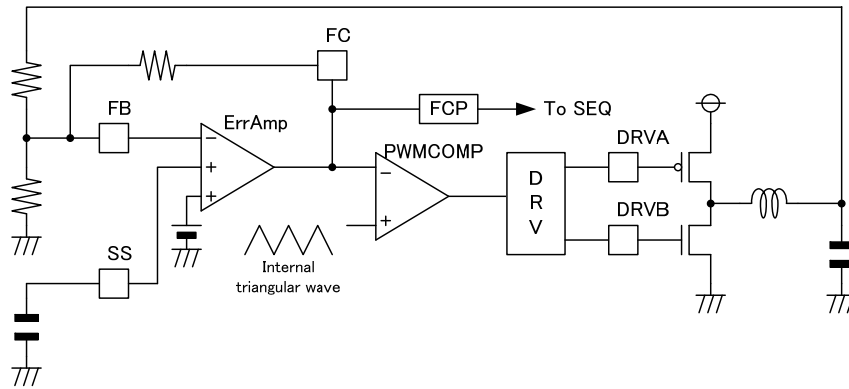

The terminal FC abnormality protection function of this all DC/DC converter controller detects the continuance of the state that FC which is the difference input of PWMCOMP does not intersect with an internal triangular wave. The terminal FC abnormality protection function is exceeded 1.95V(typ) by the voltage of the terminal FC or operates when it falls below 0.62V(typ), and about 400µsec(typ) or more continues.

CTL terminal	SS terminal	Protection operation	FC terminal	Terminal FC abnormality protection operation
> V <sub>IHCTL</sub>	> 1.1V(typ)	Enable	> 1.95V(typ)	ON
	< 1.0V(typ)		0.62V(typ) < , < 1.95V(typ)	OFF
< V <sub>IHCTL</sub>	> 1.1V(typ)	Disable	< 0.62V(typ)	ON
	< 1.0V(typ)		-	OFF

※ Terminal FC abnormality protection function is enabled when SS terminal voltage of each Ch becomes more than 1.1V (typ) in the transition to ON control (during soft start).

RT terminal open/short protection function

RT terminal open/short protection function off-latches all DC/DC converter controller by detecting open/short condition internally from RT terminal to prevent from output voltage error caused by abnormal oscillation of internal triangular wave at RT terminal open/short.

RT terminal open/short protection function is regularly enabled after boot-up.

RT terminal open/short protection function operates when error detection condition continues about more than 400µsec (typ).

Soft start time-out function

Each Ch DC/DC converter controller off-latch-controls when  $V_{SS}$  does not exceed  $V_{SSPON}$  from  $V_{SS} > V_{SSSTB} + V_{SSSTB\_HYS}$  after 50msec (typ) passed from soft start.

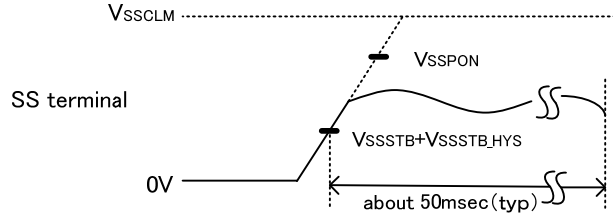




Figure 28 At soft start time-out

Error detection (off latch) release method

Each Ch DC/DC converter controller comes into off latch condition when protection function operates. Off latch can be released by the following method. Each Ch DC/DC converter controller becomes able to do ON control transition by releasing off latch.

1. Set all Ch CTL terminal voltage as  $< V_{ILCTL}$  and continue that condition about more than 200usec (typ).
2. Drop down power supply VCC to below 3.7V.

# SSOP-B40

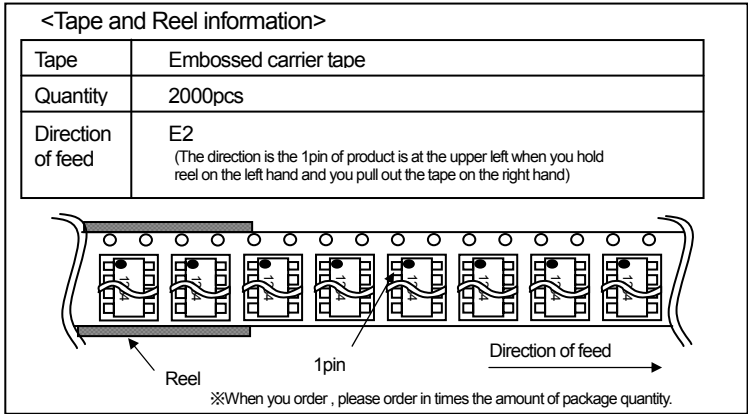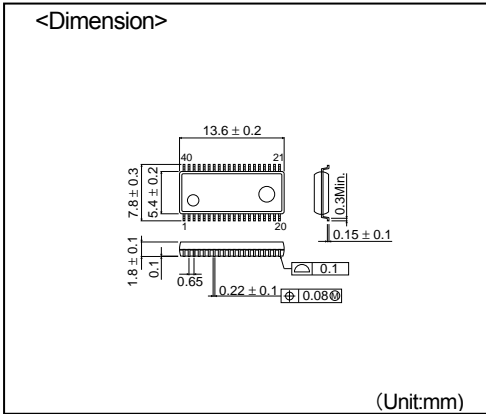

- The contents described herein are correct as of August, 2008
- The contents described herein are subject to change without notice. For updates of the latest information, please contact and confirm with ROHM CO.,LTD.
- Any part of this application note must not be duplicated or copied without our permission.
- Application circuit diagrams and circuit constants contained herein are shown as examples of standard use and operation. Please pay careful attention to the peripheral conditions when designing circuits and deciding upon circuit constants in the set.
- Any data, including, but not limited to application circuit diagrams and information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO.,LTD. disclaims any warranty that any use of such devices shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such devices.
- Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or otherwise dispose of the same, implied right or license to practice or commercially exploit any intellectual property rights or other proprietary rights owned or controlled by ROHM CO., LTD. is granted to any such buyer.
- The products described herein utilize silicon as the main material.
- The products described herein are not designed to be X ray proof.

The products listed in this catalog are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys). Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of which would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

Contact us for further information about the products.

San Diego  
Atlanta  
Boston  
Chicago  
Dallas  
Denver  
Detroit  
Nashville  
Mexico  
Düsseldorf  
Munich  
Stuttgart  
France  
United Kingdom  
Denmark  
Espoo  
Salo  
Oulu  
Barcelona  
Hungary  
Poland  
Russia  
Seoul  
Masan  
Dalian  
Beijing

TEL: +1-858-625-3630  
TEL: +1-770-754-5972  
TEL: +1-978-371-0382  
TEL: +1-847-368-1006  
TEL: +1-469-287-5366  
TEL: +1-303-708-0908  
TEL: +1-248-348-9920  
TEL: +1-615-620-6700  
TEL: +52-33-3123-2001  
TEL: +49-2154-9210  
TEL: +49-8999-216168  
TEL: +49-711-7272-370  
TEL: +33-1-5697-3060  
TEL: +44-1-908-306700  
TEL: +45-3694-4739  
TEL: +358-9725-54491  
TEL: +358-2-7332234  
TEL: +358-8-5372930  
TEL: +34-9375-24320  
TEL: +36-1-4719338  
TEL: +48-22-5757213  
TEL: +7-495-739-41-74  
TEL: +82-2-8182-700  
TEL: +82-55-240-6234  
TEL: +86-411-8230-8549  
TEL: +86-10-8525-2483

Tianjin  
Shanghai  
Hangzhou  
Nanjing  
Ningbo  
Qingdao  
Suzhou  
Wuxi  
Shenzhen  
Dongguan  
Fuzhou  
Guangzhou  
Huizhou  
Xiamen  
Zhuhai  
Hong Kong  
Taipei  
Kaohsiung  
Singapore  
Philippines  
Thailand  
Kuala Lumpur  
Penang  
Kyoto  
Yokohama

TEL: +86-22-23029181  
TEL: +86-21-6279-2727  
TEL: +86-571-87658072  
TEL: +86-25-8689-0015  
TEL: +86-574-87654201  
TEL: +86-532-5779-312  
TEL: +86-512-8607-1300  
TEL: +86-510-82702693  
TEL: +86-755-8307-3008  
TEL: +86-769-8393-3320  
TEL: +86-591-8801-8698  
TEL: +86-20-3878-8100  
TEL: +86-752-205-1054  
TEL: +86-592-238-5705  
TEL: +86-756-3232-480  
TEL: +852-2-740-6262  
TEL: +886-2-2500-6956  
TEL: +886-7-237-0881  
TEL: +65-6332-2322  
TEL: +63-2-807-6872  
TEL: +66-2-254-4890  
TEL: +60-3-7958-8355  
TEL: +60-4-2286453  
TEL: +81-75-365-1218  
TEL: +86-22-23029183  
TEL: +86-21-6247-2066  
TEL: +86-571-87658071  
TEL: +86-25-8689-0393  
TEL: +86-574-87654208  
TEL: +86-532-5779-653  
TEL: +86-512-8607-2300  
TEL: +86-510-82702992  
TEL: +86-755-8307-3003  
TEL: +86-769-8398-4140  
TEL: +86-591-8801-8690  
TEL: +86-20-3825-5965  
TEL: +86-752-205-1059  
TEL: +86-592-239-8380  
TEL: +86-756-3232-460  
TEL: +852-2-375-8971  
TEL: +886-2-2503-2869  
TEL: +886-7-238-7332  
TEL: +65-6332-5662  
TEL: +63-2-809-1422  
TEL: +66-2-256-6334  
TEL: +60-3-7958-8377  
TEL: +60-4-2286452  
TEL: +81-75-365-1228  
TEL: +81-45-476-2295

Excellence in Electronics

# ROHM

## ROHM CO., LTD.

21 Saiin Mizosaki-cho, Ukyo-ku, Kyoto  
615-8585, Japan  
TEL: +81-75-311-2121 FAX: +81-75-315-0172  
URL: <http://www.rohm.com>

Published by  
KTC LSI Development Headquarters  
LSI Business Promotion Group

### Notes

- No technical content pages of this document may be reproduced in any form or transmitted by any means without prior permission of ROHM CO.,LTD.
- The contents described herein are subject to change without notice. The specifications for the product described in this document are for reference only. Upon actual use, therefore, please request that specifications to be separately delivered.
- Application circuit diagrams and circuit constants contained herein are shown as examples of standard use and operation. Please pay careful attention to the peripheral conditions when designing circuits and deciding upon circuit constants in the set.
- Any data, including, but not limited to application circuit diagrams information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO.,LTD. disclaims any warranty that any use of such devices shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such devices.
- Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or otherwise dispose of the same, no express or implied right or license to practice or commercially exploit any intellectual property rights or other proprietary rights owned or controlled by
- ROHM CO., LTD. is granted to any such buyer.
- Products listed in this document are no antiradiation design.

The products listed in this document are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys).

Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of which would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

It is our top priority to supply products with the utmost quality and reliability. However, there is always a chance of failure due to unexpected factors. Therefore, please take into account the derating characteristics and allow for sufficient safety features, such as extra margin, anti-flammability, and fail-safe measures when designing in order to prevent possible accidents that may result in bodily harm or fire caused by component failure. ROHM cannot be held responsible for any damages arising from the use of the products under conditions out of the range of the specifications or due to non-compliance with the NOTES specified in this catalog.

Thank you for your accessing to ROHM product informations.

More detail product informations and catalogs are available, please contact your nearest sales office.

**ROHM** Customer Support System

THE AMERICAS / EUROPE / ASIA / JAPAN

[www.rohm.com](http://www.rohm.com)

Contact us : [webmaster@rohm.co.jp](mailto:webmaster@rohm.co.jp)