


Multicomp Variac Auto Transformer

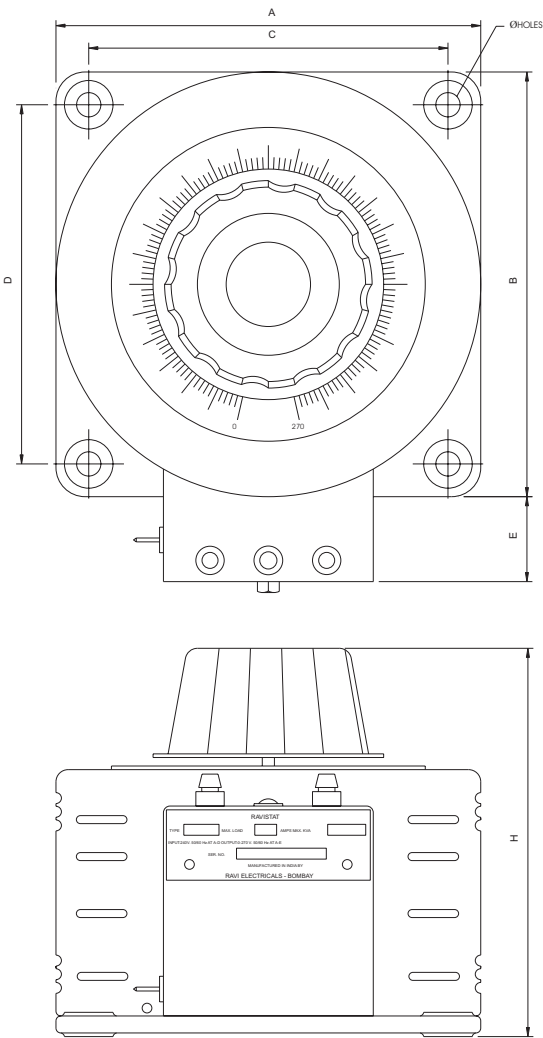

Installation and Safety Instructions

1. Installation, commissioning and maintenance should only be carried out by suitably qualified personal.
2. Read all of the Instructions before you use the Transformer.
3. The input must always be applied across the appropriate Terminals.
Never connect the Variac Auto Transformer in series with the load.
4. The Variac Auto Transformer should be properly earthed using the earth stud or earth terminal.
5. Variable Transformer Operate at mains Voltage.
DO NOT EXCEED THE MAXIMUM VOLTAGE AND CURRENT RATING
6. This Transformer is not designed to provide mains isolation.
7. Please note that when connected to the electrical supply the terminal brushes and track surface are at mains Voltage which is potentially lethal.
8. The Carbon brush should be inspected for damage or wear, faulty over worn brushes will result in damaging the windings.

(Dimensions are in mm)

TYPE	A	B	C	D	E	H	Ø	Approx Wt. in (Kg)
4P-1	175	175	146	146	35	160	10	6.850
6P-1	175	175	146	146	35	160	10	7.750
8P-1	175	175	146	146	35	180	10	8.900
10P-1	175	175	146	146	35	180	10	10.100
15P-1	225	225	176	176	40	190	10	15.500
20P-1	225	225	176	176	40	190	10	17.000
28P-1	300	300	238	238	60	225	13	25.000

