

# Test plug MC4



Test plug MC4 (PV-PST)

- This test plug is used to control the correct location of the MC4 contact in the insulation.

## Ordering information

Order No.	Type
32.6028	PV-PST

# Test plug MC4-Evo 2



Test plug MC4-Evo 2 (PV-EVO-PST)

- This test plug is used to control the correct location of the MC4-Evo 2 contact in the insulation.

## Ordering information

Order No.	Type
32.6073	PV-EVO-PST