

# MCBC SERIES

# PROPORTIONAL CONTROL SOLID STATE RELAYS



### **Features**

- Microcontroller based burst fire control SSR
- Ratings from 25 A to 90 A @ 48-530 VAC
- Low-voltage, current, or potentiometer control
- Output status indicator
- Separate output enable / disable control
- Two time-base periods available
- For use with a wide range of resistive loads



## **PRODUCT SELECTION**

Description	25 A	50 A	90 A
40-140 VAC	MCBC1225	MCBC1250	MCBC1290
180-280 VAC	MCBC2425	MCBC2450	MCBC2490
300-530 VAC	MCBC4825	MCBC4850	MCBC4890



## **SPECIFICATIONS**

# Output

Description	120 V	240 V	480 V
Operating Voltage (47-63 Hz) [Vrms]	48-140	180-280	300-530
Transient Overvoltage [Vpk]	400	600	1200
Maximum Off-State Leakage Current @ Rated Voltage [mArms]	5	7	12
Minimum Off-State dv/dt @ Maximum Rated Voltage [V/µsec]	200	200	200

# Output

Description	25 A	50 A	90 A
Maximum Load Current [Arms] <sup>(4)</sup>	25	50	90
Minimum Load Current [Arms]	150	150	150
Maximum Surge Current (16.6 msec)[Apk]	250	625	1200
Maximum On-State Voltage Drop @ Rated Current [Vpk]	1.6	1.6	1.6
Thermal Resistance Junction to Case (Rjc) [°C/W]	1.02	0.63	0.28
Maximum I <sup>2</sup> t for Fusing (8.3 msec) [A <sup>2</sup> sec]	260	1620	6000

# Input<sup>(1)</sup>

Description	DC Control
DC Voltage Supply Range (VDC) [P1]	8-32
Input Current Range [mA] [P1]	28-30
Nominal Input Impedance [Ohm] [P3]	30K
Control Must Operate Voltage "On"[VDC][P3]	5-32
Control Must Release Voltage "Off" [VDC][P3]	0-4
Control Input Current [mA][P3]	0-1.25
PLV Range Option A [VDC][P4] (3)	0-5
PLV Range Option B [VDC][P4] (3)	0-7
PLV Range Option C [VDC][P4] (3)	0-10
PLV Range Option D [VDC][P4] (3)	4-20
Nominal Input Impedance Option A,B,C [Ohm][P4]	20K
Nominal Input Impedance Option D [Ohm][P4]	220

# **Output Status Functions**

Description	LED
Initial Logic Supply On	Flash Once
Load Voltage Missing / Load Open (w/control disabled)	Flash Once Intermittenly
Load Voltage Missing / Load Open (w/control enabled)	Flash Twice Intermittently
Analog Input < Threshold	Off
Analog Input < Threshold < Max.	Varying On/Off
Analog Input > Max.	On, Bright

## General


Dielectric Strength, Input/Output/Base (50/60 Hz)	4000 VRMS
Minimum Insulation Resistance (@ 500 VDC)	10 <sup>9</sup> Ohms
Maximum Capacitance, Input/Output	10 pF
Ambient Operating Temperature Range	-20 to 80°C
Ambient Storage Temperature Range	-40 to 125 °C
Weight (typical)	3.0 oz (86.5g)
Encapsulation	Thermally conductive Epoxy
Terminals-Power	Screws and Saddle Clamps Furnished, Unmounted
Terminals-Control	Barrier Strip Screw Terminals
Max. Terminal (Power) Screw Torque	20 lb-in (8-32 screws, dry without grease)

### **MECHANICAL SPECIFICATIONS**

Tolerances:  $\pm 0.02$  in / 0.5 mm All dimensions are in inches [millimeters]

### Analog Input OPTIONS: A, B, C, D MOUNTING 1.10 HOLE/SLOT (27.9)-8-32 TERMINAL 0.192 (4.9) DIA. 45 (2 PLACES) (11.4) OUTPUT 2.30 [58.4] 1.87 [47.5] OUTPUT STATUS .78 BASE PLATE (19.8)1.80


### Analog Input OPTIONS: E (Internal Potentiometer)

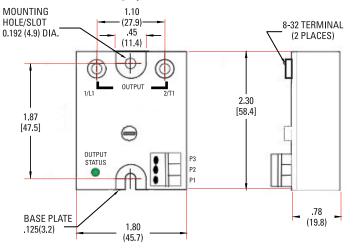

.125(3.2)

## THERMAL DERATE INFORMATION


(45.7)

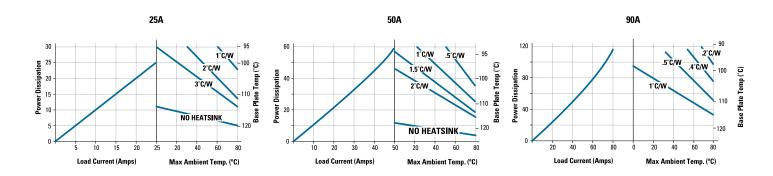




## WIRING DIAGRAMS

## (for Options A, B or C using an external potentiometer)

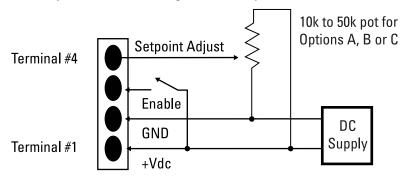



### **Electrical Connections**

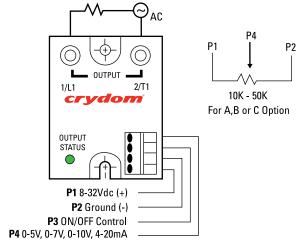

### Note: P2 also 4-20mA return

# **OUTPUT VS ANALOG INPUT SIGNAL CURVES**

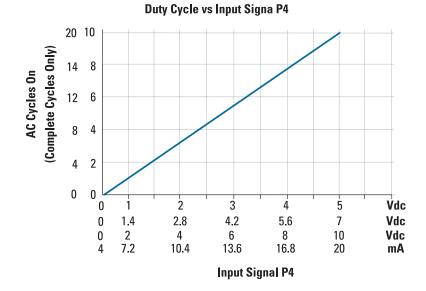

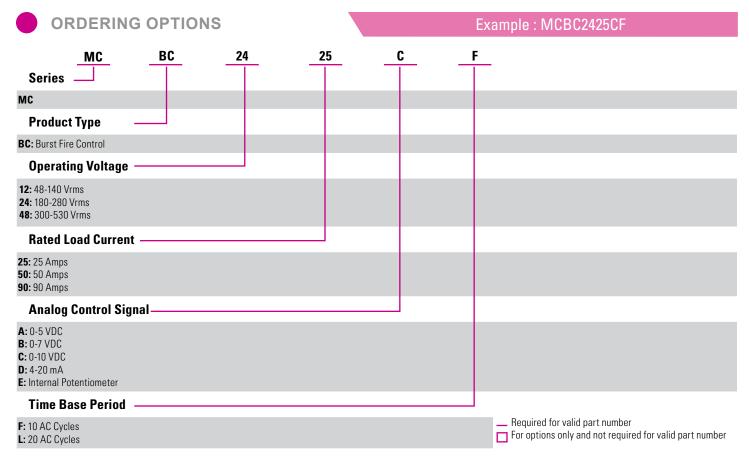

NOTE: Not all combinations are available.

Consult factory for information on the availability of a specific part number.













## **GENERAL NOTES**

- (1) All parameters at 25°C unless otherwise specified.
- (2) Voltages are reference to GND (Ground = 0 VDC) P2
- (3) PLVI voltage can go up to max. supply voltage without damage
- (4) Heat sinking required, see derating curves

# WARNINGS



### RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE

- The product's side panels may be hot, allow the product to cool before touching
- Follow proper mounting instructions including torque values
- Do not allow liquids or foreign objects to enter this product

Failure to follow these instructions can result in serious injury, or equipment damage.



### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power before installing or working with this equipment
- Verify all connections and replace all covers before turning on power

Failure to follow these instructions will result in death or serious injury.

Page 6

Datasheets provided by Sensata Technologies, Inc., its subsidiaries and/or affiliates ("Sensata") are solely intended to assist third parties ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, valuation, and judgment in designing Buyer's systems and products. Sensata datasheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular datasheet. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular datasheet. Sensata may make corrections, enhancements, improvements, and other changes to its datasheets or components without notice. Buyers are authorized to use Sensata datasheets with the Sensata component(s) identified in each particular datasheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATASHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATASHEETS OR USE OF THE DATASHEETS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATASHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY, AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

### **CONTACT US**

### Americas

+1 (800) 350 2727

sales.crydom@sensata.com
Europe, Middle East & Africa

+44 (1202) 416170

ssr-info.eu@sensata.com

Asia Pacific

sales.isasia@list.sensata.com China +86 (21) 2306 1500 Japan +81 (45) 277 7117 Korea +82 (31) 601 2004 India +91 (80) 67920890 Rest of Asia +886 (2) 27602006 ext 2808