

LFSTBEB8450 Quick Start Guide

**STEP
1**

**Unpack the board.
Verify package contents
according to the kit Web
site: [www.freescale.com/
sensortoolbox](http://www.freescale.com/sensortoolbox)**

Assemble the hardware by connecting a development board to the interface board. This board is intended for use with an Accelerometer Interface Board, purchased separately. More information can be found on the Web site.

**STEP
2**


**At [www.freescale.com/
sensortoolbox](http://www.freescale.com/sensortoolbox)
download the latest software
version by clicking: [Download Software](#)**


All Sensor Toolbox kits use the same software and driver, so the install only needs to be done once. Follow the on-screen instructions to install the communication driver for the tool. Check back occasionally for software updates.

**STEP
3**

**Plug in the USB and turn
the board on using the
power switch. Run the Sensor
Toolbox link on your desktop.**

Explore other compatible kits at
www.freescale.com/sensortoolbox

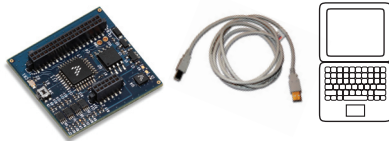

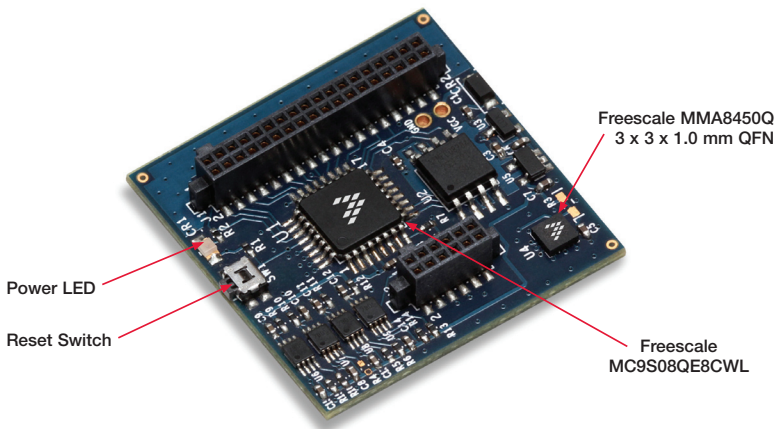

Learn more at www.freescale.com/sensortoolbox.

Freescale and the Freescale logo are trademarks or registered trademarks of Freescale Semiconductor, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2010.

Doc Number: LFSBEB8450ACCQSG / REV 0
Agile Number: 926-78438 / REV A

