This low cost data logger measures and stores up to 4,000 temperature readings over a -10 to $+50^{\circ}$ C measurement range with a fixed 30 minute sample rate and a battery life of 30 days continuous use. Press the button and a red/green LED indicates whether a preset alarm level has been breached.

The data logger is configured and the stored data downloaded by plugging the module into a PC's USB port and running the purpose designed control software under Windows 98, 2000 or XP. The downloaded data can be graphed, printed and exported to other applications. The latest version of the control software may be downloaded free of charge from: www.lascarelectronics.com.

FEATURES

- -10°C to +50°C Measurement Range
- 30 Minute Sample Rate
- 30 Day Battery Life
- Red/Green Alarm Status Indication via Button
- USB Interface for Set-up and Data Download



DATA LOGGER SET-UPS

- Logger Name
- Measurement Range : °C or °F
- High and Low Alarm Levels

ORDERING INFORMATION

1-off Data Logger	Stock Number EL-USB-LITE
Replacement Batteries (10 pack)	BATT-XXX-10

SPECIFICATIONS

Specification	Min.	Тур.	Max.	Unit
Measurement range	-10		+50	°C
Internal resolution		1		°C
Accuracy (overall error)			<u>+</u> 3	°C
Operating temperature range	-10		+50	°C
Logging rate	every 30 minutes			

LASCAR ELECTRONICS LTD.
MODULE HOUSE
WHITEPARISH
WILTSHIRE SP5 2SJ
UK
TFI: +44 (1794) 884567

TEL: +44 (1794) 884567 FAX: +44 (1794) 884616 E-mail: sales@lascar.co.uk LASCAR ELECTRONICS INC. 3750 West 26th Street Erie PA 16506 USA TEL: +1 (814) 835 0621 FAX: +1 (814) 838 8141

FAX: +1 (814) 838 8141 E-mail: us-sales@lascarelectronics.com LASCAR ELECTRONICS (HK) LIMITED FLAT C, 5/FL., LUCKY FTY. BLDG. 63-65 HUNG TO ROAD KWUN TONG KOWLOON HONG KONG TEL: +852 2797 3219 FAX: +852 2343 6187 E-mail: b4lascar@samsongroup.com.hk

Specifications liable to change without prior warning EL-USB-LITE Issue Beta 7 April/2005 M.C.



LED FLASHING MODES

EL-USB-LITE features a bi-colour LED to indicate the status of the data logger. To save power, the status indication only operates when the push button is pressed.

The number of flashes and colours indicate:

/	(Single flash)	The channel is logging, no alarm
_	(Single flash)	The channel is logging, low alarm
// •	(Double flash)	The channel is logging, high alarm

BATTERY REPLACEMENT

We recommend that you replace the battery every 12 months, or prior to logging critical data. The EL-USB-LITE does not lose its stored readings when the battery is discharged or when the battery is replaced; the data logging process will however be stopped and cannot be re-started until the battery has been replaced and the logged data has been downloaded to PC. Only use CR1620 lithium batteries. Before replacing the battery, remove the EL-USB-LITE from the PC.

Note:

 $Leaving the \, EL-USB-LITE \, plugged \, into \, the \, USB \, port \, for \, longer \, than \, necessary \, will \, cause \, some \, of \, the \, battery \, capacity \, to \, be \, lost.$



WARNING: Handle lithium batteries carefully.

 $Dispose\ of\ in\ accordance\ with\ local\ regulations.$





EL-USB-LITE

Issue Beta 7

April/2005

M.C.