


# Tabella A/Tableau A/Tabla A/ Tabela A/Tabelle A/Table A


AKAI		PANASONIC	
AMSTRAD		PHILCO	
BANG & O		PHILIPS	
BLAUPUNKT		PHONOLA	
BRIONVEGA		PYE	
CGE		RADIOLA	
DAEWOO		RADIOMARELLI	
ELBE		REX	
FORMENTI		ROADSTAR	
GOLDSTAR		SABA	
GRUNDIG		SAMSUNG	
HITACHI		SANYO	
IMPERIAL		SCHNEIDER	
ITT NOKIA		SELECO	
LOEWE OPTA		SHARP	
MAGNADYNE		SIEMENS	
MARANTZ		SINUDYNE	
METZ		SONY	
MINERVA		TELEFUNKEN	
MITSUBISHI		THOMSON	
MIVAR		TOSHIBA	
NEC		WHITE WESTING.	
NORDMENDE		<u>ALTRE MARCHE</u>	
ORION		<u>AUTRES MARQUES</u>	
		<u>OTRAS MARCAS</u>	
		<u>OUTRAS MARCAS</u>	
		<u>ANDERE MARKEN</u> <u>OTHER BRANDS</u>	

## how to get your simplex to work?

 insert the batteries...

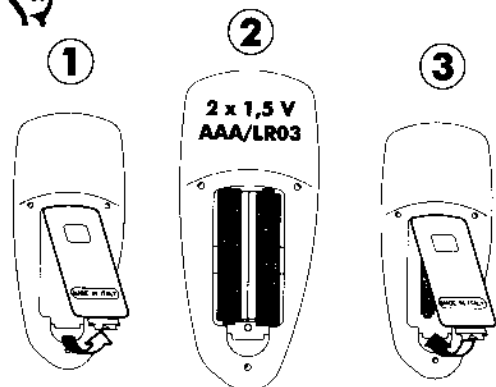

**note:** do not press any button while changing the batteries


 let the *simplex* recognise your TV (search procedure)





**1** switch the TV on, on any channel

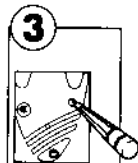


**2** for example in table A find the brand of your TV and the *simplex* corresponding button




**3** press and keep pressed for **3 seconds** the  button with the point of a pencil (the led flashes )

... and before the led goes off...




**4** ... point the *simplex* towards the TV, press and keep pressed the button identified in table A (the led starts to flash ) releasing it immediately the TV switches off

for example:  for philips

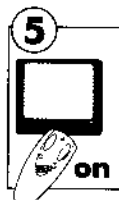


switch the TV back on by **pressing:**

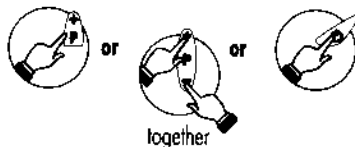

try the other commands and if everything works... the *simplex* is ready!





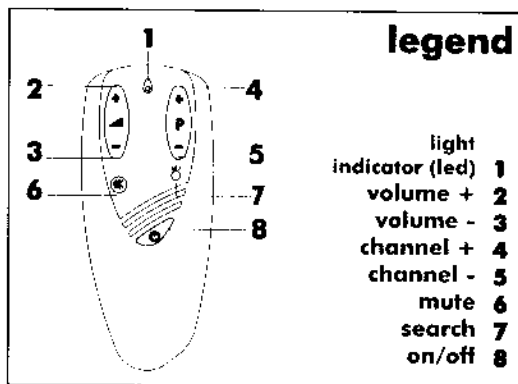



if some commands do not work correctly... continue with the search starting from **2**






### legend

- light indicator (led) **1**
- volume + **2**
- volume - **3**
- channel + **4**
- channel - **5**
- mute **6**
- search **7**
- on/off **8**

### notes

- The led will flash once every time a button is pressed. During the search the led will emit a series of flashes. At the end of the search cycle the led will give 5 short flashes.
- Some models may have only 9 or 10 channels.
- Some TV sets use the "MENU" to access the channel or program selection. To operate these functions, press and release the  or  button and then adjust using the  and  buttons.
- In all cases to return to channel 1 press together the   buttons.

### what to do if...

- The led doesn't flash when the  button is pressed? Check that 2 new batteries have been inserted in the correct polarity +/-.
- The search  did not succeed? Repeat the procedure checking again that the button used for the search is the one shown in table A. If still unsuccessful repeat the procedure starting from **3** and pressing at point **4** the  button for all TVs in all brands. The procedure can last a few minutes.

If still unsuccessful contact the help desk on: (South Africa) 011.646 1189