

SMD Hot Air Rework Station

User Manual



Part Number: MP740965

Please read these instructions carefully before use and retain for future reference.

IMPORTANT SAFETY INFORMATION

- **When using electrical appliances basic safety precautions should always be followed.**
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Do not operate the appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid injury or a hazard.
- There are no user-serviceable parts in this product. Refer servicing to qualified personnel.
- The nozzle and accessories of this tool become extremely hot during use. Let these parts cool down before touching or changing accessories.
- Do not expose to rain or moisture.
- Do not leave the appliance unattended when it is switched on.
- Do not direct the hot airflow towards yourself or others.
- Do not use in the presence of an explosive atmosphere.
- A fire may result if the appliance is not used with care, therefore be careful when using the appliance in places where there are combustible materials. Be aware that heat may be conducted to combustible materials that are out of sight.
- This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not apply heat to the same place for a long time.
- Ensure there is sufficient space and ventilation around the appliance to allow the escape of heat and/or fumes.
- Never place the product or part of it in water, or operate if your hands are wet.
- Always observe the safety instructions and applicable regulations.
- Always place the tool on its stand when not in use.
- Disconnect from the mains supply when not in use.

WHAT'S INCLUDED

- Hot air rework station with holder and tool
- 4 off various size nozzles
- Mains lead
- Instruction manual.

OPERATION

- Remove the four transit screws on the base of the unit.
- Connect the mains lead to the socket on the rear of the station.

De-Soldering IC's

- Attach the most suitably sized nozzle for the size of the IC to the tool.
- Select the FP pick up wire tool to suit the type of IC you are about to work on.
- Connect the mains plug to a socket and switch the power on.
- Turn on the power switch and the heating element will start to warm up to the set temperature.
- When power is turned on, the display will indicate the current status.


- Switch on the fan and adjust the air flow as required.
- Adjust the temperature to the required setting and wait a few seconds for the actual temperature to be reached.
- Use only one hand to hold the hot air tool and one to hold your pick-up tool.
- Place the pick-up tool under the IC pins.
- Put the nozzle over the IC, do not touch the IC or its pins with the nozzle.
- When the hot air melts the solder tin on the IC pins, lift the pick-up tool to remove the IC.

QFP Soldering

- Apply solder paste and install the SMD on the PCB.
- Pre heat the SMD before heating fully and applying solder.
- Wash any flux off after completion.

TEMPERATURE ADJUSTMENT

- Adjust the temperature by pressing the UP or DOWN buttons below the LCD on the station front panel.
- The lower figure is the required temperature, the upper figure shows the actual tip temperature.

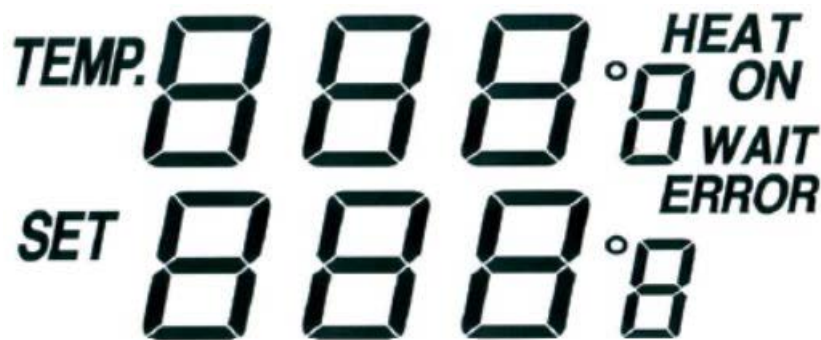

- While the iron is heating up to the required temperature “HEAT ON” displays on the LCD.
- If the difference between the required temperature and that of the iron tip is greater than 10° “WAIT” displays on the LCD.
- To change from °C to °F press “°C / °F” button. The display shows °C or °F after the temperature figure.
- Use the rotary control to set the air volume as required. For smaller nozzles use 1-5 and for higher temperatures over 450°C and larger nozzles use 4-7.

ACCESSORY FITTING

- Removing or fitting nozzles should only be done when the hot air tool is switched off and at room temperature.
- Do not use pliers to remove hot nozzles.
- The nozzles are a firm slip on fit onto the output tube with additional locking screw.
- Do not over tighten the screw.
- Nozzles of different sizes are available, see our website or catalogue for details.

CLEANING

- Cleaning should only be done when the heat gun is switched off and at room temperature.
- The hot air tool may be cleaned with a damp cloth and a small amount of liquid detergent if necessary.
- Do not use any chemicals, abrasives or solvents that could damage the casing.

SPECIFICATION

Voltage	220-240V~50Hz
Power	320W
Sensor type	K Thermocouple
Air pump	Diaphragm type
Air temperature	160°C to 480°C
Air Flow	24l/min (Max)
Weight	3.25kg

Important Notice : This data sheet and its contents (the "Information") belong to the members of the AVNET group of companies (the "Group") or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but the Group assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where the Group was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict the Group's liability for death or personal injury resulting from its negligence. Multicomp Pro is the registered trademark of Premier Farnell Limited 2019.