

## System Power Supply for TV Series

# Built-in 1ch FET Synchronous Rectification Type DC/DC converters

## BD8621EFV

**●Description**

BD8621EFV has realized the high performance and reliability required as a power supply for thin-screen TV.

With built-in FET 1ch current mode control, the DC/DC Converter series has the advantage of high-speed load response and wide phase margin.

Due to the high-speed load response, it is most suitable for TV-purpose processors with increasingly high performance, and due to the wide phase margin it leaves a good margin for board pattern & constant setting and so facilitates its application design.

As a high-reliability design, it has various built-in protection circuits (overcurrent protection, output voltage abnormal protection, thermal protection, and off-latch function at the time of abnormality etc.), therefore as an advantage it does not easily damage in every possible abnormal condition such as all-pin short circuit test etc. and hence most suitable for thin-screen TV which requires the high reliability.

**●Features**

- 1) 3A output current
- 2) Low RDS(ON) internal switches (PchMOS:75mΩ, NchMOS:55mΩ)
- 3) ±1% reference voltage accuracy
- 4) Programmable frequency : 250kHz-1MHz
- 5) (Frequency in programmable by adjusting RT resistance or synchronizing with SYNCLK terminal.)
- 6) Terminal RT OPEN/SHORT detecting function
- 7) Over current protection function
- 8) Output over voltage/low voltage protection function (over : FB > VREF +60mV , low : FB < VREF -60mV)
- 9) Timer off latch function in abnormal circumstances
- 10) Thermal shutdown function
- 11) Under voltage protection
- 12) Soft start/start delay circuit
- 13) Soft start time out function
- 14) Protecting BUS function with terminal PDET
- 15) HTSSOP-B20 package

●Electrical characteristics

(Unless otherwise noted Ta=25°C, VIN=3.3V, GND=0V)

Parameter	Symbol	Specification value			UNIT	Condition
		MIN	TYP	MAX		
VIN supply current (operating)	$I_{Q\_active}$	-	220	350	$\mu A$	$V_{FB} = 0.83V, V_{FC} = 1V$
VIN supply current (standby)	$I_{Q\_stby}$	-	0	1	$\mu A$	$V_{EN} = 0V$
Reference voltage (VREF)	$V_{REF}$	0.792	0.8	0.808	V	
Output rise detection voltage	$V_{OVP}$	30	60	90	mV	Monitoring FB terminal
Output decrease detection voltage	$V_{LVP}$	-90	-60	-30	mV	Monitoring FB terminal
Terminal PDET output current	$I_{PDET}$	0.4	-	-	mA	$V_{PDET} < 0.3V$
Oscillation frequency	$f_{OSC}$	500	550	600	kHz	$R_{RT} = 220k\Omega$
Pch FET ON resistance	$R_{PFET}$	-	75	110	m $\Omega$	$I_{SW} = 1A$
Nch FET ON resistance	$R_{NFET}$	-	55	90	m $\Omega$	$I_{SW} = 1A$
UVLO voltage	$V_{UVLO}$	2.35	2.50	2.65	V	
SW leak current	$I_{LSW}$	-	0	1	$\mu A$	$V_{EN} = 0V, V_{IN} = 5.5V$
EN terminal H threshold voltage	$V_{ENH}$	1.1	-	-	V	
EN terminal L threshold voltage	$V_{ENL}$	-	-	0.4	V	
FC sink current	$I_{FCSI}$	10	20	-	$\mu A$	
FC source current	$I_{FCSSO}$	-	-20	-10	$\mu A$	
SS/DELAY terminal source current	$I_{SSSO}$	2	4	6	$\mu A$	
Terminal PDET pull-up resistor	$R_{PDET}$	100	170	250	k $\Omega$	

$V_{FB}$ :FB terminal voltage,  $V_{EN}$ :EN terminal voltage,  $V_{FC}$ :FC terminal voltage,  $V_{PDET}$ : PDET terminal voltage

Current capability should not exceed Pd.

● Block Diagram

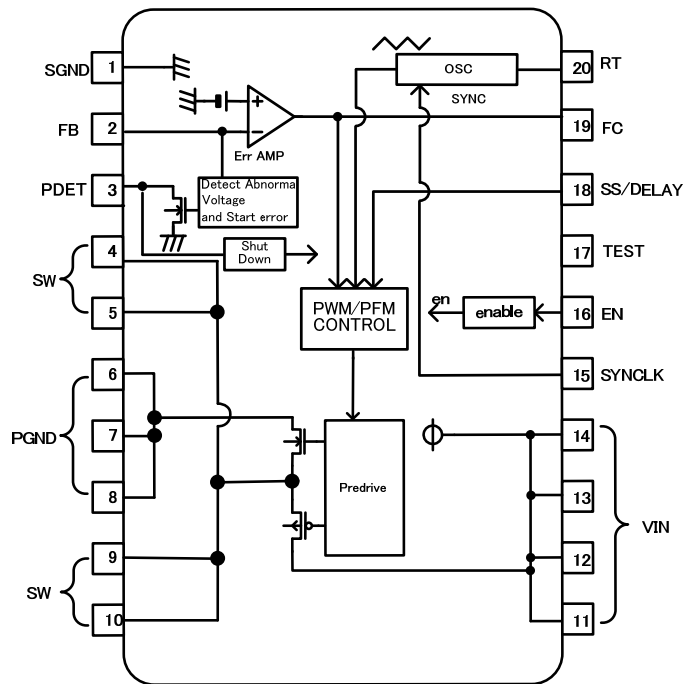





Fig1 Block diagram




● Pin Description

No.	Symbol	Description	Explanation
1	SGND	Signal GND terminal	Small signal system GND
2	FB	Feed back terminal	Output voltage detection
3	PDET	Off latch signal output	Protecting BUS communication terminal
4	SW	Output terminal	Switching output
5	SW		
6	PGND	Power GND terminal	GND for power MOSFET
7	PGND		
8	PGND		
9	SW	Output terminal	Power Mos output
10	SW		
11	VIN	Power supply input terminal	Power supply input. The decoupling is done to PGND
12	VIN		
13	VIN		
14	VIN		
15	REG	Internal Regulator	Synchronizable switching output terminal frequency with external clock
16	EN	Enable input	ON/OFF control for device operation
17	TEST	Terminal for test	SGND short in the set.
18	SS/DELAY	Soft start adjustment capacity connection terminal	The soft start time is adjusted with the connected capacitor
19	FC	Error amplifier output	Error amplifier phase compensation point
20	RT	Frequency adjustment resistance connection terminal	The switching frequency is set by the connected resistance

• Pin equivalence circuit diagram

No.	Symbol	Explanation	Terminal equivalent circuit diagram
1	SGND	GND (connected 0V)	
2	FB	Output voltage detection terminal	
3	PDET	Protecting BUS I/O terminal	
4,5,9,10	SW	Output terminal	
6,7,8	PGND	Power GND (Same voltage as SGND)	
11,12,13,14	VIN	Power supply input terminal	

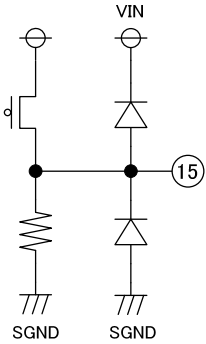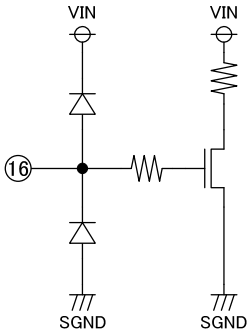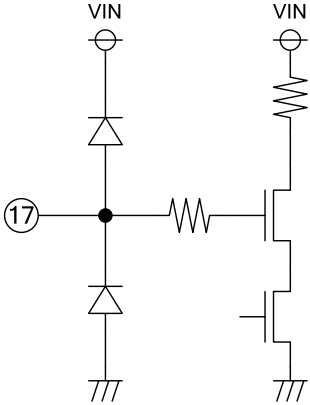No.	Symbol	Explanation	Terminal equivalent circuit diagram
15	REG	Internal Regulator output voltage	
16	EN	Enable terminal	
17	TEST	Using at test mode	

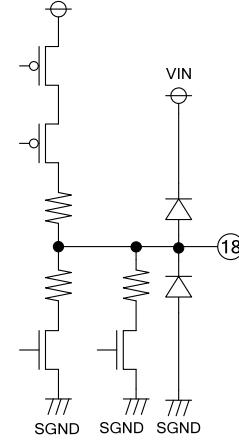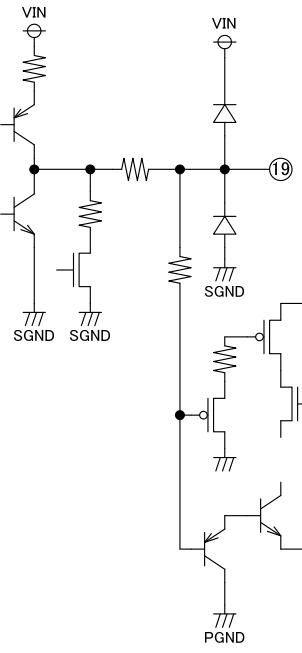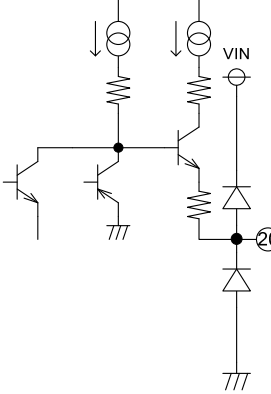No.	Symbol	Explanation	Terminal equivalent circuit diagram
18	SS /DELAY	Soft start time adjustment terminal	
19	FC	Error amplifier compensation terminal	
20	RT	Oscillator frequency adjustment terminal	

●Operation description

**Enable control**

The device can be controlled ON/OFF by EN terminal (16 pin) voltage.  
An internal circuit starts when VEN reaches 1.1V.

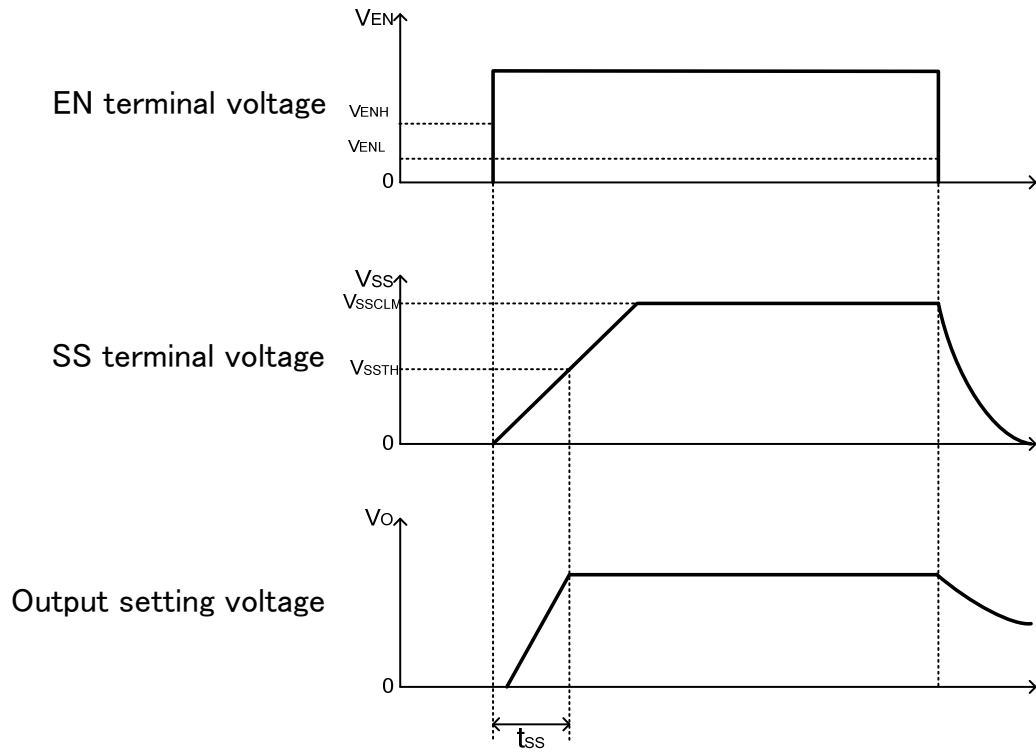


Fig.2 ON/OFF transition wave form in EN controlling

**Soft start time set function**

As for BD8623EFV, output can do soft start without overshoot by charging soft start capacity (CSS) connected between SS and SGND terminal.

Also, soft start time (tss) can be set by setting soft start capacity (CSS) arbitrarily.

**OSC oscillation frequency setting function**

The output oscillation frequency can be set by connecting resistance between terminal RT (20 pins) and SGND (range = 250kHz - 1MHz)

The relation between RT terminal resistance and the oscillation frequency follows Fig.3.

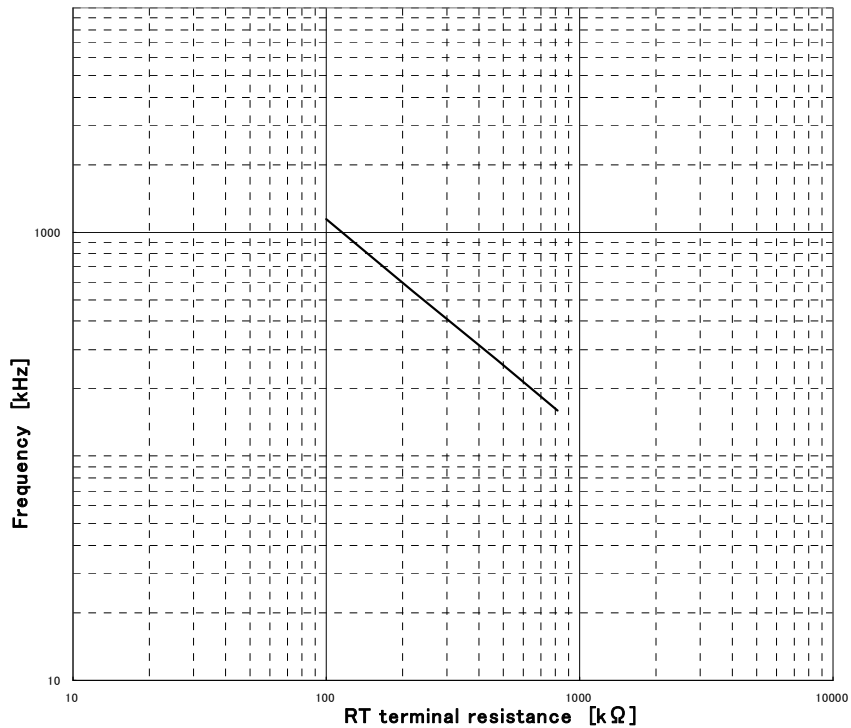


Fig.3 RT resistance-oscillation frequency

**Switching frequency synchronization**

An internal transmitter of BD8623EFV can be synchronized with the external clock signal connected with the terminal SYNCLK (15 pins).

The frequency of external clock can be set within the range of 250kHz-1MHz. In this case, please set the RT resistance that may become about -20% value of the external clock frequency.

※ Be short-circuited SYNCLK terminal to SGND when a frequency synchronous function is not used.



**●Protection function**

Protection circuit is effective for destruction prevention due to accident so that avoid using under continuous protection operation.

**Low voltage protection function (LVP)**

The voltage of the terminal FB (2 pins) is compared with internal reference voltage VREF.

If FB terminal voltage falls below  $V_{LVP}(= VREF -60mV)$  and the state continues for 500us, output changes to low voltage and the state is fixed. In that case , PDET (3pin) output changes to L.

Table 4-1 output low voltage protection function

EN terminal	SS terminal	FB terminal	Low voltage protection function	Low voltage protection operation
$>V_{ENH}$	$>1.4V(\text{typ})$	$<V_{LVP}$	Effective	ON
		$>V_{LVP}$		OFF
	$<1.4V(\text{typ})$	-	Invalidity	OFF
$<V_{ENL}$	-	-	Invalidity	OFF

\* Low voltage protection function is available when SS terminal voltage becomes more than 1.4V (typ) in the transition to ON control (during soft start).

**Over voltage protection function(OVP)**

The voltage of the terminal FB is compared with internal reference voltage VREF.

If FB terminal voltage is over  $V_{ovp}(=VREF +60mV)$  and the state is continues for 500usec, output changes to low voltage and the state is fixed.

Table 4-2 output overvoltage protection function

EN terminal	SS terminal	FB terminal	Over voltage protection function	Over voltage protection operation
$>V_{ENH}$	$>1.4V(\text{typ})$	$>V_{OVP}$	Effective	ON
		$<V_{OVP}$		OFF
	$<1.4V(\text{typ})$	-	Invalidity	OFF
$<V_{ENL}$	-	-	Invalidity	OFF

\* Over voltage protection function is available when SS terminal voltage becomes more than 1.4V (typ) in the transition to ON control (during soft start).

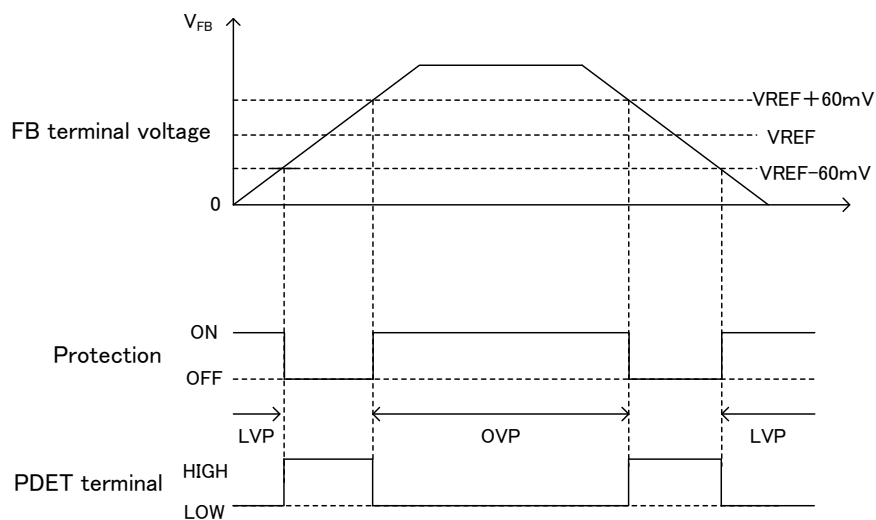


Fig.4 Output voltage error detection range

### **Under voltage lock out protection (UVLO)**

As for BD8623EFV, the power-supply voltage decrease detection protection circuit is built in.

If the input voltage decrease below the UVLO voltage (2.5V typ), the device state changes to the standby mode (Moreover, to prevent the chattering of the output) hysteresis width of 100mV(typ) has been installed in the UVLO cancel voltage.

### **RT terminal open/short protection function (RTO/RTS)**

RT terminal opening/short protection function prevent the clock from abnormal oscillation.

If RT terminal open/short protection function is detected, output voltage changes to low level and is fixed.

Terminal RT opening/short protection function is available if the state continue for 500usec, abnormal detection operates when the state continues about 500 $\mu$ sec(typ).

### **Soft start time-out function**

If VSS doesn't exceed VSSTH within 64msec (typ) since a soft start began, BD8629FS controls an off latch.

Vo is fixed in a low level.

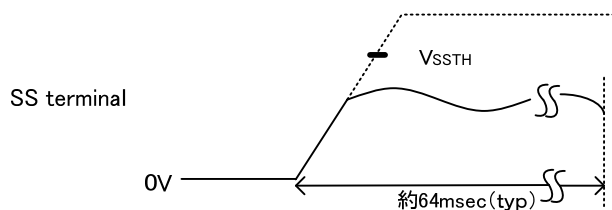


Fig.5 Soft start time-out

### **Thermal shut down function**

Thermal shut down circuit (TSD circuit) is built into BD8623EFV. When the temperature of the chip exceeds  $T_{jmax}=175$ , the DC/DC converter is fixed in a low voltage.

TSD function is aimed to shut down IC from thermal reckless driving under an abnormal state to exceed  $T_{jmax}=175$ . It aims at neither protection nor the guarantee of the set. Therefore, please do not use this function to protect the set.

### **Over current protection function**

The over current protection function has been achieved by limiting the current that flows on high side MOSFET.

The current is controlled in every one cycle of the switching frequency. When an abnormal state continues for about 500 $\mu$ sec(typ), the output is fixed in a low level.

### **Protecting BUS function with terminal PDET**

The terminal PDET (3 pins) monitors whether IC is normal or not. When IC becomes abnormal, the PDET output is reduced at "L" level with the output voltage fixed "L" level at the same time. Moreover, it is possible to make the output fix in a low level by compulsorily reducing the terminal PDET at "L" level from the outside.

When two or more BD8623EFV is used in the application, this function prevents the IC from destroying, because one IC error transmits all other ICs by PDET line in the condition that PDET terminals are connected each other.

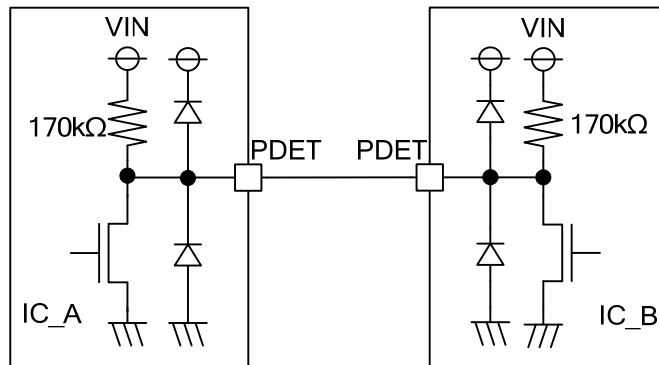


Fig.6 Protecting BUS communication

※Please give the terminal PDET as OPEN when you do not use protecting BUS function.

### **Error detection (off latch) release method**

BD8623EFV enters the state of an off latch when the protection function operates.

To release the off latch state, EN terminal voltage should be changed to low level once time.

● Each characteristic reference data

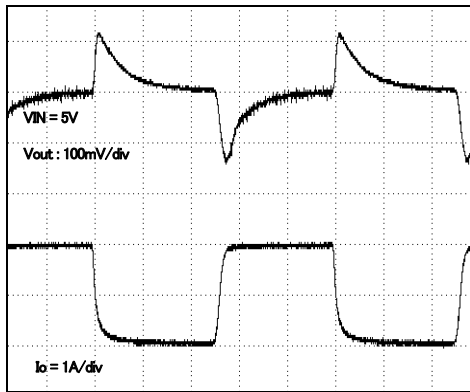


Fig.7 Output load response

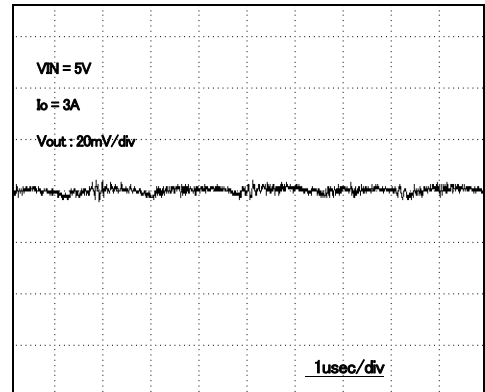


Fig.8 Output ripple

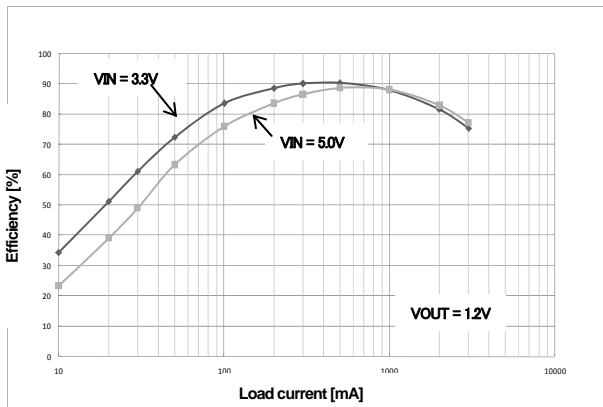


Fig.9 Efficiency

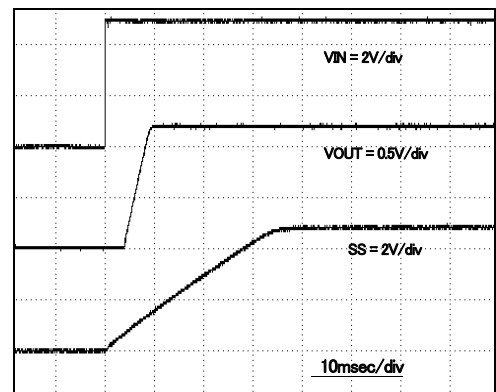


Fig.10 Soft start

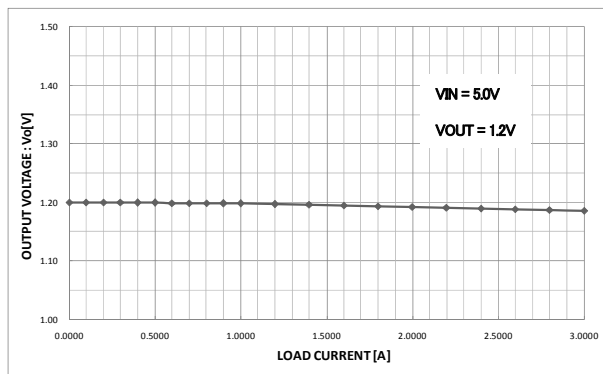


Fig.11 Regulation

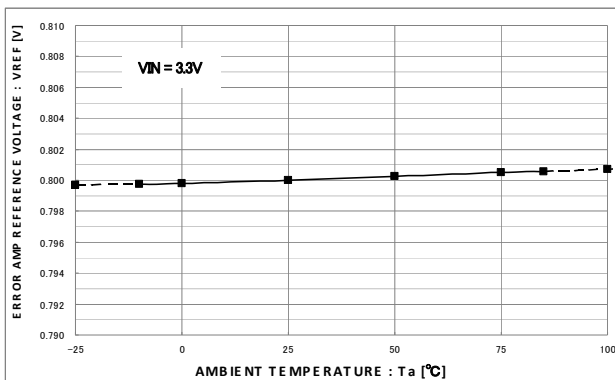


Fig.12 Reference voltage - Temperature characteristic

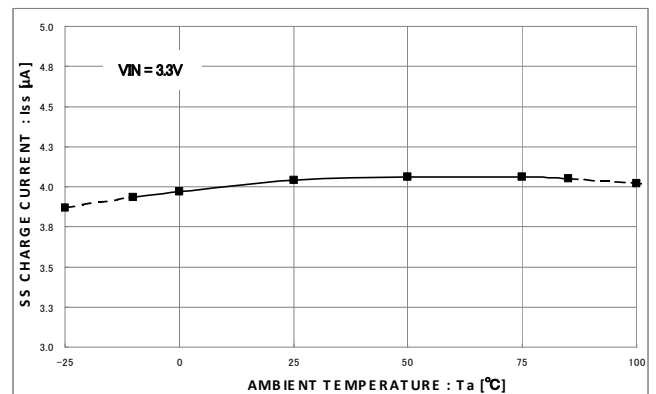


Fig.13 SS Charging current - Temperature characteristic

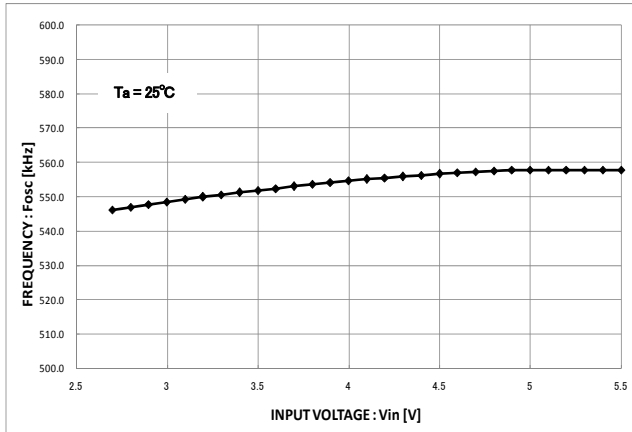


Fig. 14 Switching frequency-power-supply voltage characteristic

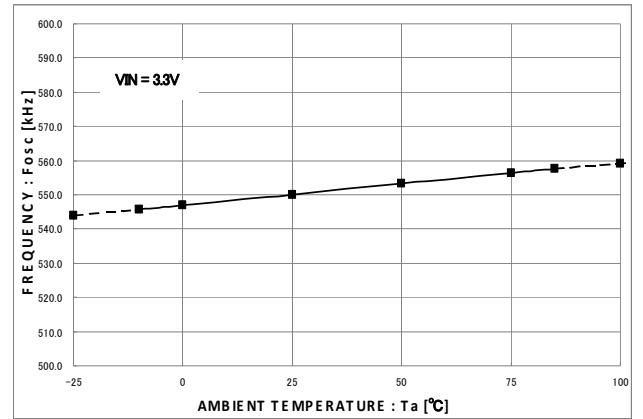


Fig. 15 Switching frequency-temperature characteristic

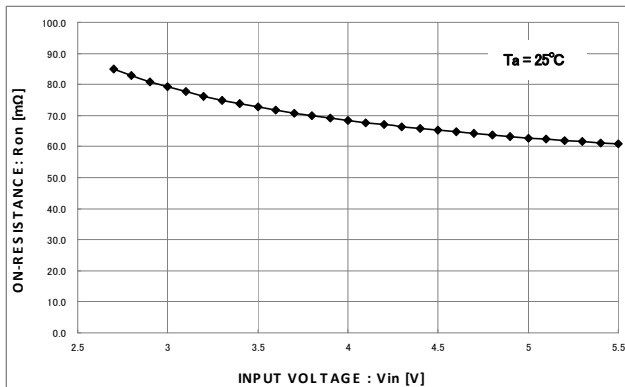


Fig. 16 PMOS on resistance-power-supply voltage

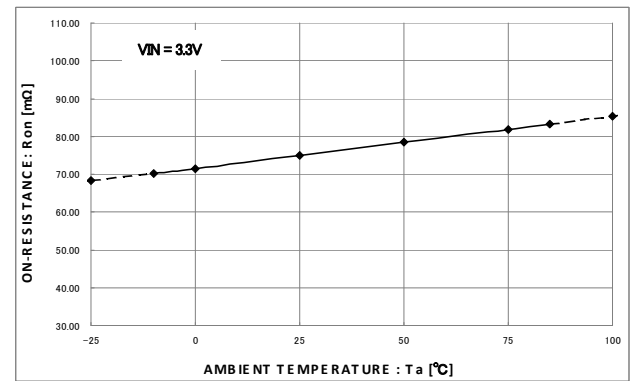


Fig. 17 PMOS on resistance-temperature characteristic

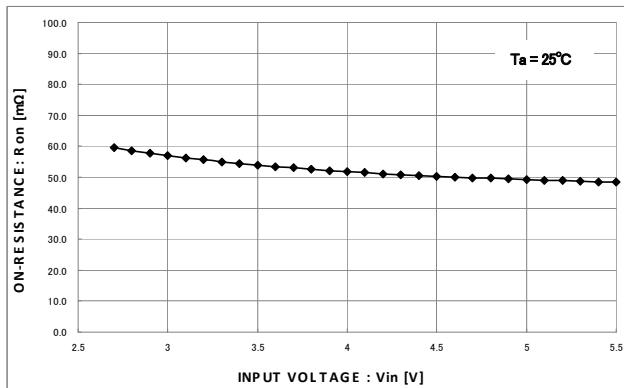


Fig. 18 NMOS on resistance-power-supply voltage

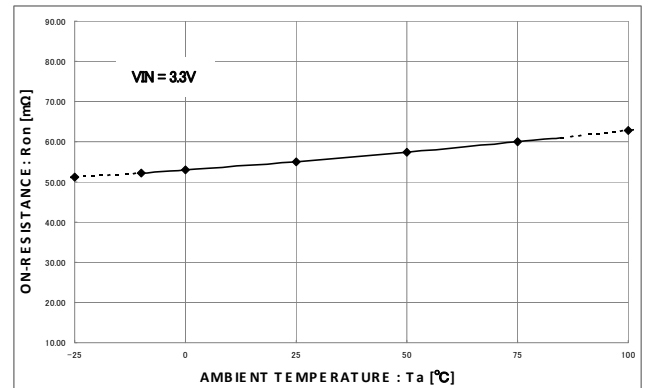


Fig. 19 NMOS on resistance-temperature characteristic

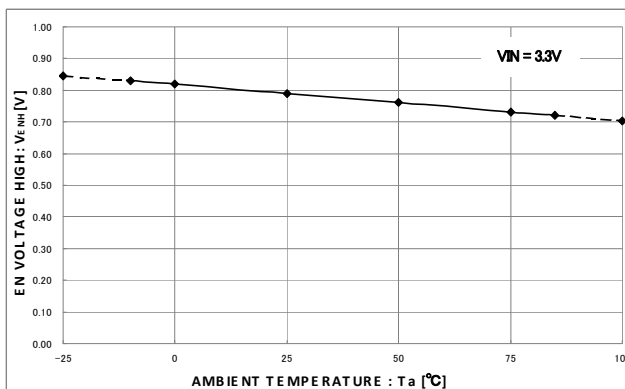


Fig. 20 Terminal EN H voltage-temperature characteristic



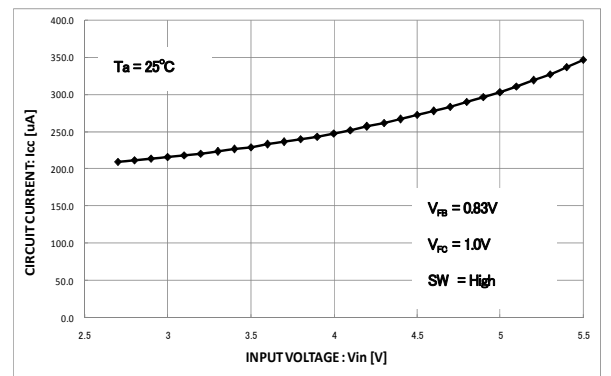


Fig. 21 Circuit current-power-supply voltage characteristic

# HTSSOP-B20

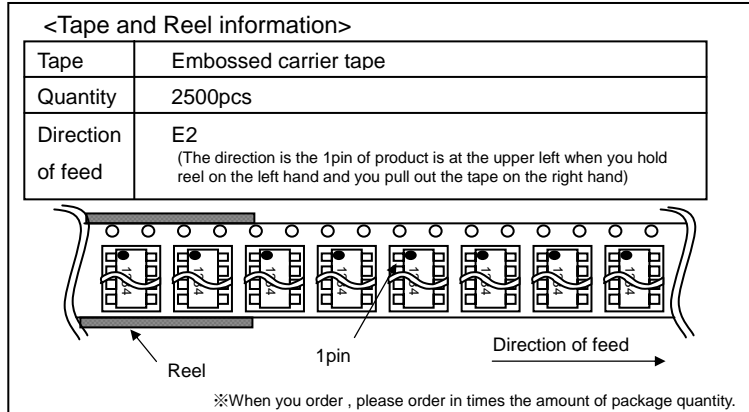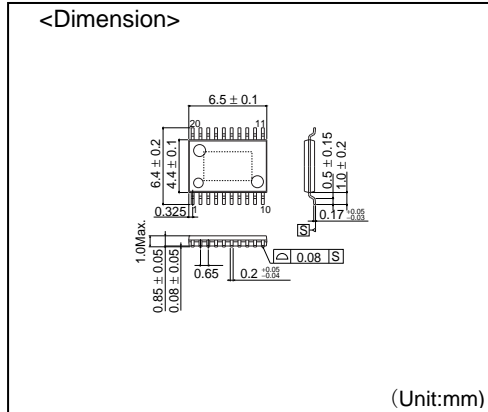

- The contents described herein are correct as of July, 2008
- The contents described herein are subject to change without notice. For updates of the latest information, please contact and confirm with ROHM CO.,LTD.
- Any part of this application note must not be duplicated or copied without our permission.
- Application circuit diagrams and circuit constants contained herein are shown as examples of standard use and operation. Please pay careful attention to the peripheral conditions when designing circuits and deciding upon circuit constants in the set.
- Any data, including, but not limited to application circuit diagrams and information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO.,LTD. disclaims any warranty that any use of such devices shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such devices.
- Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or otherwise dispose of the same, implied right or license to practice or commercially exploit any intellectual property rights or other proprietary rights owned or controlled by ROHM CO., LTD. is granted to any such buyer.
- The products described herein utilize silicon as the main material.
- The products described herein are not designed to be X ray proof.

The products listed in this catalog are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys). Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of which would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

## Contact us for further information about the products.

**San Diego** TEL: +1-858-625-3630  
**Atlanta** TEL: +1-770-754-5972  
**Boston** TEL: +1-978-371-0382  
**Chicago** TEL: +1-847-368-1006  
**Dallas** TEL: +1-469-287-5366  
**Denver** TEL: +1-303-708-0908  
**Detroit** TEL: +1-248-348-9920  
**Nashville** TEL: +1-615-620-6700  
**Mexico** TEL: +52-33-3123-2001  
**Düsseldorf** TEL: +49-2154-9210  
**Munich** TEL: +49-899-216168  
**Stuttgart** TEL: +49-711-72723710  
**France** TEL: +33-1-5697-3060  
**United Kingdom** TEL: +44-1-908-306700  
**Denmark** TEL: +45-3694-4739  
**Espoo** TEL: +358-9725-54491  
**Salo** TEL: +358-8-532234  
**Oulu** TEL: +358-8-7332931  
**Barcelona** TEL: +34-9375-24320  
**Hungary** TEL: +36-1-4719338  
**Poland** TEL: +48-22-5757213  
**Russia** TEL: +7-95-980-6755  
**Seoul** TEL: +82-2-8182-700  
**Masan** TEL: +82-55-240-6234  
**Dalian** TEL: +86-411-8230-8549  
**Beijing** TEL: +86-10-8525-2483

TEL: +1-858-625-3670  
 FAX: +1-770-754-0691  
 FAX: +1-928-438-7164  
 FAX: +1-847-368-1008  
 FAX: +1-469-362-7973  
 FAX: +1-303-708-0858  
 FAX: +1-248-348-9942  
 FAX: +1-615-620-6702  
 FAX: +52-33-3123-2002  
 FAX: +49-2154-921400  
 FAX: +49-899-216176  
 FAX: +49-711-72723720  
 FAX: +33-1-5697-3080  
 FAX: +44-1-908-235788  
 FAX: +45-3694-4789  
 FAX: +358-9-7255-4499  
 FAX: +358-2-7332237  
 FAX: +358-8-5372931  
 FAX: +34-9375-24410  
 FAX: +36-1-4719339  
 FAX: +48-22-5757001  
 FAX: +7-95-937-8290  
 FAX: +82-2-8182-715  
 FAX: +82-55-240-6236  
 FAX: +86-411-8230-8537  
 FAX: +86-10-8525-2489

**Tianjin**  
**Shanghai**  
**Hangzhou**  
**Nanjing**  
**Ningbo**  
**Qingdao**  
**Suzhou**  
**Wuxi**  
**Shenzhen**  
**Dongguan**  
**Fuzhou**  
**Guangzhou**  
**Huizhou**  
**Xiamen**  
**Zhuhai**  
**Hong Kong**  
**Taipei**  
**Kaohsiung**  
**Singapore**  
**Philippines**  
**Thailand**  
**Kuala Lumpur**  
**Penang**  
**Kyoto**  
**Yokohama**

TEL: +86-22-23029181  
 TEL: +86-21-6279-2727  
 TEL: +86-571-87658072  
 TEL: +86-25-8689-0015  
 TEL: +86-574-87654201  
 TEL: +86-532-5779-312  
 TEL: +86-510-82702693  
 TEL: +86-755-8307-3008  
 TEL: +86-769-8393-3320  
 TEL: +86-591-8801-8698  
 TEL: +86-20-3878-8100  
 TEL: +86-752-205-1054  
 TEL: +86-592-238-5705  
 TEL: +86-756-3232-480  
 TEL: +852-2-740-6262  
 TEL: +886-2-2500-6956  
 TEL: +886-7-237-0881  
 TEL: +65-6332-2322  
 TEL: +63-2-807-6872  
 TEL: +66-2-254-4890  
 TEL: +60-3-7958-8355  
 TEL: +60-4-2286453  
 TEL: +81-75-365-1218  
 TEL: +81-45-476-2290  
 FAX: +86-22-23029183  
 FAX: +86-21-6247-2066  
 FAX: +86-571-87658071  
 FAX: +86-25-8689-0393  
 FAX: +86-574-87654208  
 FAX: +86-532-5779-653  
 FAX: +86-510-82702992  
 FAX: +86-755-8307-3003  
 FAX: +86-769-8398-4140  
 FAX: +86-591-8801-8690  
 FAX: +86-20-3825-5965  
 FAX: +86-752-205-1059  
 FAX: +86-592-239-8380  
 FAX: +86-756-3232-460  
 FAX: +852-2-375-8971  
 FAX: +886-2-2503-2869  
 FAX: +886-7-238-7332  
 FAX: +65-6332-5662  
 FAX: +63-2-809-1422  
 FAX: +66-2-256-6334  
 FAX: +60-3-7958-8377  
 FAX: +60-4-2286452  
 FAX: +81-75-365-1228  
 FAX: +81-45-476-2295

Excellence in Electronics

# ROHM

## ROHM CO., LTD.

21 Saiin Mizosaki-cho, Ukyo-ku, Kyoto  
 615-8585, Japan  
 TEL: +81-75-311-2121 FAX: +81-75-315-0172  
 URL: <http://www.rohm.com>

Published by  
 KTC LSI Development Headquarters  
 LSI Business Promotion Group

### Notes

- No technical content pages of this document may be reproduced in any form or transmitted by any means without prior permission of ROHM CO.,LTD.
- The contents described herein are subject to change without notice. The specifications for the product described in this document are for reference only. Upon actual use, therefore, please request that specifications to be separately delivered.
- Application circuit diagrams and circuit constants contained herein are shown as examples of standard use and operation. Please pay careful attention to the peripheral conditions when designing circuits and deciding upon circuit constants in the set.
- Any data, including, but not limited to application circuit diagrams information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO.,LTD. disclaims any warranty that any use of such devices shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such devices.
- Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or otherwise dispose of the same, no express or implied right or license to practice or commercially exploit any intellectual property rights or other proprietary rights owned or controlled by
- ROHM CO., LTD. is granted to any such buyer.
- Products listed in this document are no antiradiation design.

The products listed in this document are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys).

Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of which would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

It is our top priority to supply products with the utmost quality and reliability. However, there is always a chance of failure due to unexpected factors. Therefore, please take into account the derating characteristics and allow for sufficient safety features, such as extra margin, anti-flammability, and fail-safe measures when designing in order to prevent possible accidents that may result in bodily harm or fire caused by component failure. ROHM cannot be held responsible for any damages arising from the use of the products under conditions out of the range of the specifications or due to non-compliance with the NOTES specified in this catalog.

Thank you for your accessing to ROHM product informations.

More detail product informations and catalogs are available, please contact your nearest sales office.

**ROHM** Customer Support System

THE AMERICAS / EUROPE / ASIA / JAPAN

[www.rohm.com](http://www.rohm.com)

Contact us : [webmaster@rohm.co.jp](mailto:webmaster@rohm.co.jp)