SKU:FIT0788

Case and Heat Sink Kit for CM4 IoT Router Mini

ETH0
ETH1
POWER

Assembly Tips

1. Please gently twist to remove the acrylic plate
2. Assemble the acrylic board with the frosted side facing outward
3. Between the CM4 and the router board, use **white washers**
   Between the heatsink and the shell, use **black washers**

Assembly Diagram

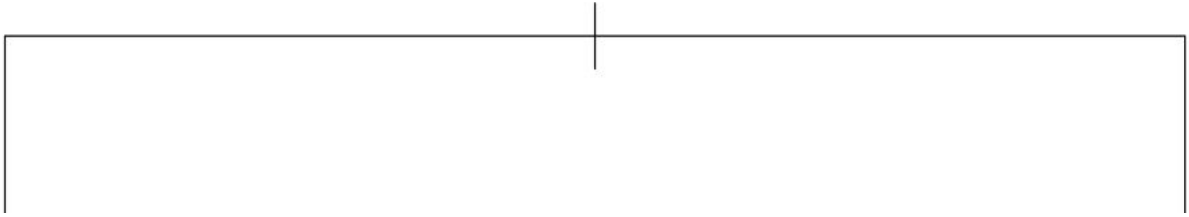

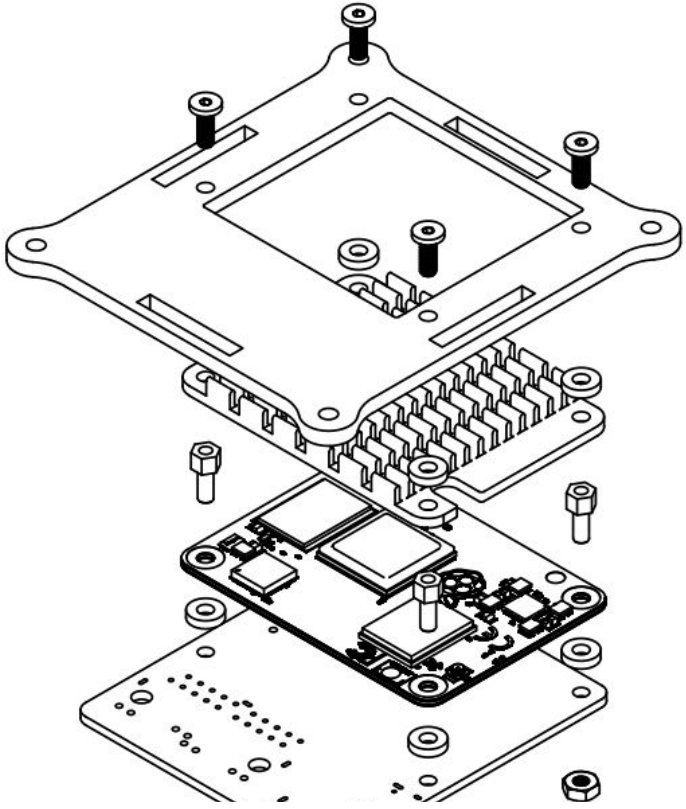

Dept.	Technical reference	Created by	Approved by
		DFRobot 2021/5/27	
		Document type	Document status
		Title FIT0788 Part A	DWG No.
			Rev. / Date of issue / Sheet 1/1

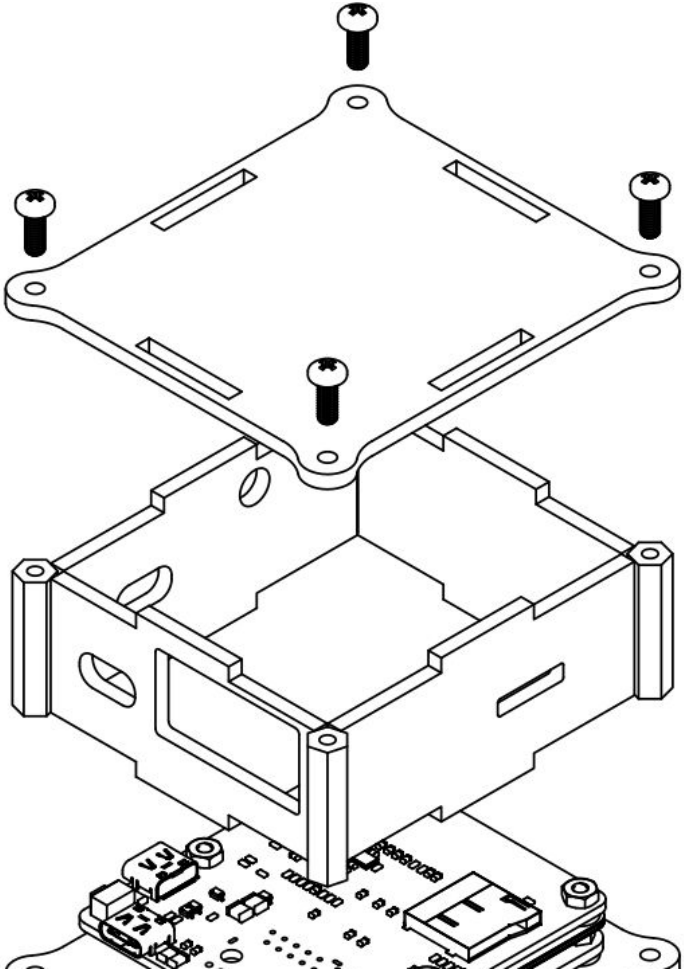

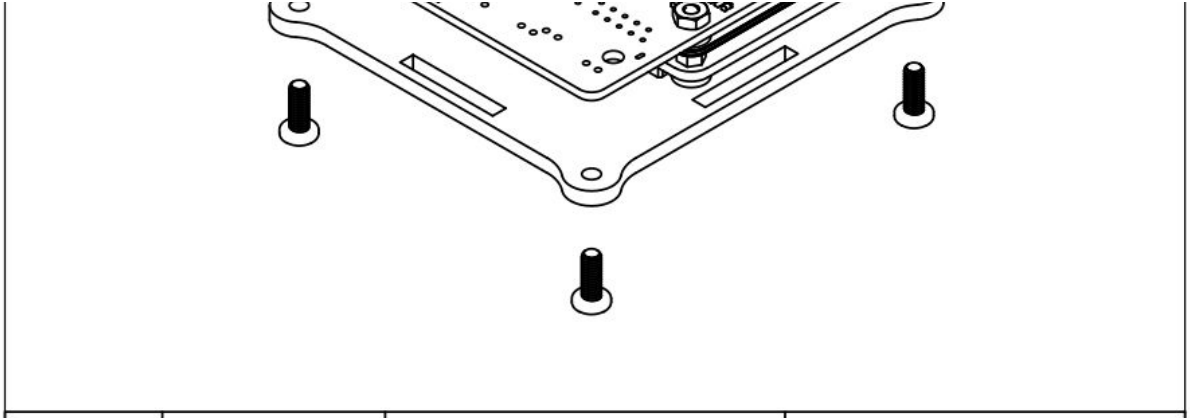

Dept.	Technical reference	Created by DFRobot 2021/6/1	Approved by
		Document type	Document status
		Title FIT0788 Part B	DWG No.
			Rev. / Date of issue / Sheet 1/1

More Documents

- FIT0788 Assembly diagram PDF

- FIT0788 Assembly diagram PDF (https://dfimg.dfrobot.com/nobody/wiki/269596ae67841131ad3d4bd8d4e105a3.zip)
- FIT0788 3D Model STEP (https://dfimg.dfrobot.com/nobody/wiki/9f39b44366adcac630098f17e3aafee2.zip)

🛒DFRobot Store ()