

0231843



BI 9025 up to 15 kW



BL 9025 up to 11 kW

- Softstart and softstop function
- 2-phase control
- For motors up to 15 kW at 3 AC 400 V
- Acceleration and deceleration time resp. starting and switch-off torque are separately adjustable
- Wide input voltage range of the power semiconductors
- Galvanic isolation of control input with wide voltage range up to AC/DC 480 V control input
- 3 auxiliary voltages at the device up to AC 230 V
- Integrated overtemperature monitoring
- LED indication
- According to EN 60 947-4-2
- 90 mm width

Additional information about this topic

For motors up to 5,5 kW we recommend the softstarter BA 9018 or BA 9019.

Approvals and marking



Applications


- Motor with gear, belt or chain drive
- Fans, pumps, conveyor systems, compressors
- Packaging machines, door-drives
- Start current limiting on 3-phase motors

Function


Softstarters are electronic devices designed to enable 1-phase or 3-phase induction motors to start smoothly. The devices slowly ramps up the current on two phases, therefore allowing the motor torque to build up slowly. This reduces the mechanical stress on the machine and prevents damage to conveyed material.

When the motor is up to full speed the semiconductors in the device are bridged to prevent internal power losses and heat build up. In addition the device allows a softstop function prolonging the stop time of the motor, preventing high counter torques from abruptly stopping the motor.

Block diagram

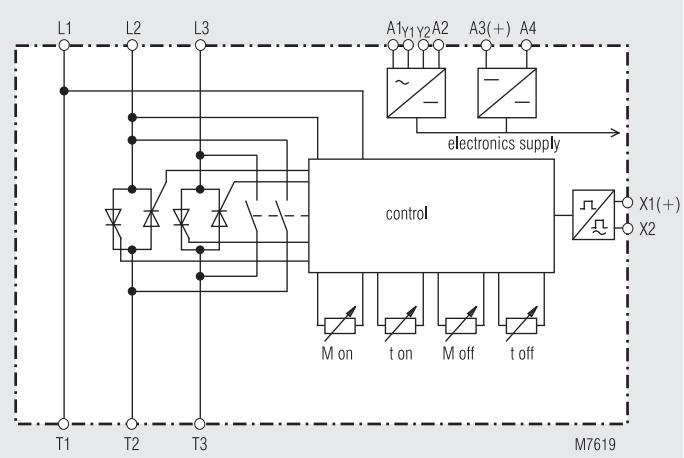

Function diagram

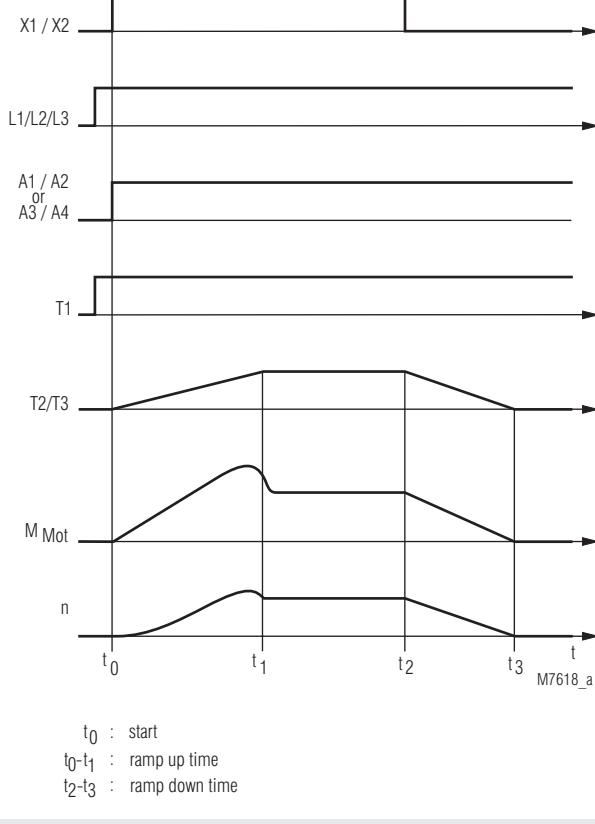

Indication		Technical Data	
green LED:	on, when supply connected	EMC	
yellow LED:	- on, when semiconductors bridged - flashing during ramp up or down	Electrostatic discharge: 8 kV (air)	IEC/EN 61 000-4-2
red LED:	Continuously on: Temperature fault Flashing: Attention: Phase reversal	HF-irradiation: 10 V/m	IEC/EN 61 000-4-3
Notes		Fast transients: 2 kV	IEC/EN 61 000-4-4
Variation of speed is not possible with this device. Without load a softstart cannot be achieved. It is recommended that the softstart is protected by superfast semiconductor fuses rated as per the current rating of the softstart or motor. However, standard line and motor protection is acceptable, but for high starting frequencies motor winding temperature monitoring is recommended.		Surge voltages between wire for power supply: 1 kV	IEC/EN 61 000-4-5
The softstarter must not be operated with capacitive load e.g. power factor compensation on the output.		between wire and ground: 2 kV	IEC/EN 61 000-4-5
Technical data		Degree of protection:	
Nominal voltage:	3 AC 200 V - 15 % ... 480 V + 15 %	Housing: IP 40	IEC/EN 60 529
Nominal frequency:	50 / 60 Hz	Terminals: IP 20	IEC/EN 60 529
		Vibration resistance: Amplitude 0,35 mm	IEC/EN 60 068-1
		frequency: 10 ... 55 Hz	
		0 / 055 / 04	IEC/EN 60 068-1
Technical data		Climate resistance:	
Width:	90 mm	Load terminals: 1 x 10 mm ² solid	
Nominal motor power P_N at 480 V:	18,5 kW	1 x 6 mm ² stranded ferruled	
400 V:	15 kW	1 x 4 mm ² solid or	
200 V:	7,5 kW	1 x 2,5 mm ² stranded ferruled (isolated) or	
Nominal current I_N	32 A	2 x 1,5 mm ² stranded ferruled (isolated)	
Switching frequency at 3 x I_N, 10 s, θ_{HL} = 45°C:	30 / h	DIN 46 228-1/-2/-3/-4 or	
Time between 2 starts	min 110 s	2 x 2,5 mm ² stranded ferruled	
		DIN 46 228-1/-2/-3	
Min. motor power:	approx. 0,1 P _N	Wire fixing	
Start torque:	30 ... 80 %	Load terminals: Plus-minus terminal screws M4	
Ramp time:	1 ... 10 s	box terminals with wire protection	
Deceleration torque:	30 ... 80 %	Control terminals: Plus-minus terminal screws M3,5	
Deceleration time:	1 ... 20 s	box terminals with wire protection	
Recovery time:	200 ms	Mounting: DIN rail mounting	IEC/EN 60 715
Auxiliary voltage:		Weight:	
A1/A2, AC 115 V +10%, -15%: bridge A1 - Y1		BI 9025: 870 g	
bridge A2 - Y2		BL 9025: 835 g	
A1/A2, AC 230 V +10%, -15%: bridge Y1 - Y2		Dimensions	
A3/A4, DC 24 V +10%, -15%: polarity protected		Width x height x depth: 90 x 85 x 121 mm	
Power consumption:	3 W	Standard type	
Residual ripple:	5 %	BL 9025 3 AC 200 ... 480 V 50/60 Hz 11 kW	
Semiconductor fuse:	50 A superfast	Article number: 0050957	
Control input		• Nominal voltage: 3 AC 200 ... 480 V	
Voltage range X1/X2:	AC/DC 24 - 480 V	• Nominal motor power at AC 400 V: 11 kW	
Softstart:	> 20 V	• Width: 90 mm	
Softstop:	< 5 V		
General data		Odering example	
Temperature range:	0 ... +40°C	BI 9025 3 AC 200 ... 480 V 50/60 Hz 15 kW	
It is possible to operate the unit at 40°C ... 60°C, the number of starts per hour must then be reduced by 1,5 % / °C temperature increase.			Nominal motor power at AC 400 V
Storage temperature:	- 25 ... +75°C		Nominal frequency
Usage category:	according to EN 60 947-4-2, AC-53 b		Nominal voltage
Clearance and creepage distances			Type
overvoltage category / contamination level			
Control voltage to auxiliary voltage, motor voltage:	6 kV / 2	Control input	
Auxiliary voltage to motor voltage:	4 kV / 2	If a voltage of more than 20 V is connected to terminals X1/X2, the device begins with softstart. If the voltage falls lower than 5 V the device will softstop.	
		Adjustment facilities	
		Potentiometer	Description
		M _{on}	Starting voltage
		t _{on}	Ramp-up time
		M _{off}	Deceleration torque
		t _{off}	Deceleration time
			fully anti-clockwise
			fully clockwise
			fully clockwise
			fully clockwise

Set up procedure

Set potentiometer "M_{on}" to minimum (fully anti-clockwise).
Set potentiometer "M_{off}" to maximum (fully clockwise).
Set potentiometer "t_{on}" to maximum (fully clockwise).
Set potentiometer "t_{off}" to maximum (fully clockwise).
Start the motor and turn potentiometer "M_{on}" up until the motor starts to turn without excessive humming.
Stop the motor and restart.
Adjust potentiometer "t_{on}" to give the desired ramp time.
Stop and restart the motor.
Adjust potentiometer "M_{off}" until the motor starts to visibly slow down at the initiation of the softstop cycle.
Stop and restart the motor.
Adjust potentiometer "t_{off}" to give the desired deceleration time.
Stop and restart the motor, readjusting the potentiometers until the desired starting/stopping characteristics are achieved.
During softstop the device must be connected to the 3-phase system.

- **Attention:** If the ramp-up time is adjusted to short, the internal bridging contact closes before the motor is on full speed.
 This may damage the bridging contactor or bridging relay.


Temperature monitoring

BH/BL/BI 9025 features overtemperature monitoring of its internal power semiconductors. When the safe running temperature is exceeded the power semiconductors will turn off and a red LED on the front of the unit will illuminate. BI/BL 9025 can be reset after the semiconductors have cooled down by momentarily removing the auxiliary supply voltage. An LED indicates the fault (see fault detection).

Safety instructions

- Never clear a fault when the device is switched on
- **Attention:** This device can be started by potential-free contact, while connected directly to the mains without contactor (see application example). Please note, that even if the motor is at rest, it is not physically separated from the mains.
 Because of this the motor **must** be disconnected from the mains via the corresponding manual motor starter.
- The user must ensure that the device and the necessary components are mounted and connected according to the locally applicable regulations and technical standards.
- Adjustments may only be carried out by qualified specialist staff and the applicable safety rules must be observed.

Connection example

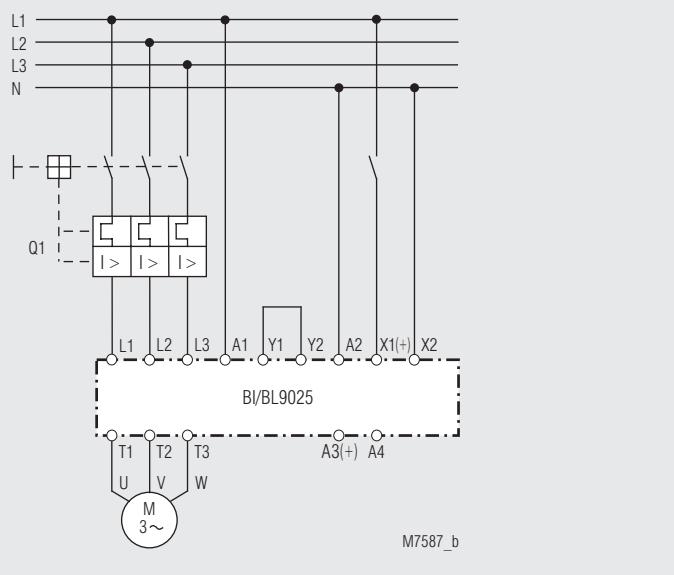

Softstart and softstop
Netz: 3 AC 400 V

E. DOLD & SÖHNE KG • D-78114 Furtwangen • PO Box 1251 • Telephone (+49) 77 23 / 654-0 • Telefax (+49) 77 23 / 654-356

e-mail: dold-relays@dold.com • internet: <http://www.dold.com>