

LTM4676EY Dual 13A or Single 26A μ Module Regulator with Digital Power System Management

DESCRIPTION

Demonstration circuit 1989A-A is a high efficiency, high density, μ Module regulator with 4.5V to 16V input range. The output voltage is adjustable from 0.5V to 4V, and it can supply 50A maximum load current. The demo board has two LTM[®]4676 μ Module regulators, and the LTM4676 is a dual 13A or single 26A step-down regulator with PMBus power system management. Please see LTM4676 data sheet for more detailed information

DC1989A-A powers up to default settings and produces power based on configuration resistors without the need for any serial bus communication. This allows easy evaluation of the DC/DC converter. To fully explore the extensive power system management features of the part, download the GUI software LTpowerPlay[™] onto your PC and use LTC's I²C/SMBus/PMBus dongle DC1613A to connect to

the board. LTpowerPlay allows the user to reconfigure the part on the fly and store the configuration in EEPROM, view telemetry of voltage, current, temperature and fault status

GUI Download

The software can be downloaded from:

<http://www.linear.com/ltpowerplay>

For more details and instructions of LTpowerPlay, please refer to LTpowerPlay GUI for LTM4676 Quick Start Guide.

Design files for this circuit board are available at

<http://www.linear.com/demo/DC1989A-A>

LT, LT, LTC, LTM, Linear Technology, the Linear logo, Burst Mode, Dust Networks and Dust are registered trademarks of Linear Technology Corporation. All other trademarks are the property of their respective owners.

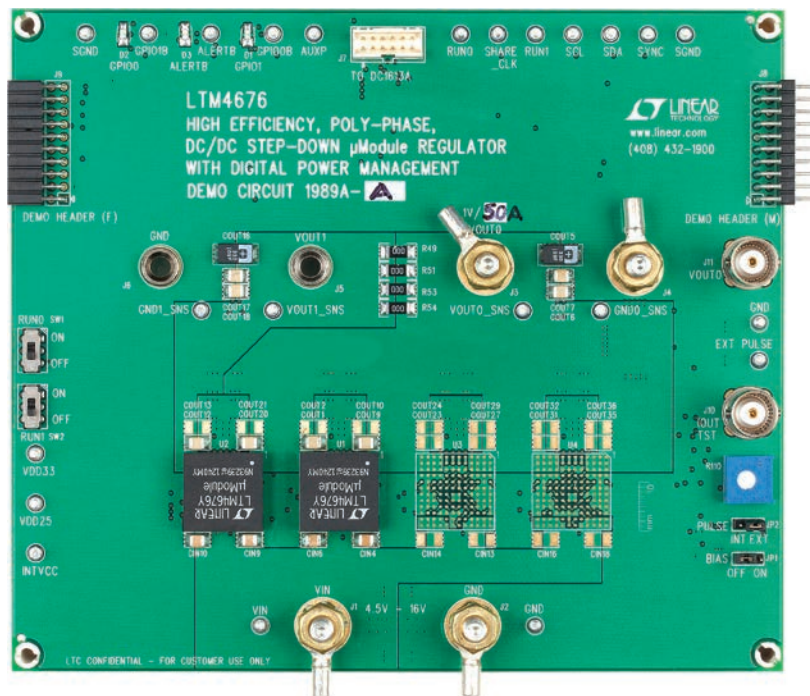


Figure 1. LTM4676/DC1989A-A Demo Circuit

DEMO MANUAL DC1989A-A

PERFORMANCE SUMMARY Specifications are at $T_A = 25^\circ\text{C}$

PARAMETER	CONDITION	VALUE
Input Voltage Range		4.5V to 16V
Output Voltage, V_{OUT0}	$V_{IN} = 4.5$ to 16V, $I_{OUT0} = 0\text{A}$ to 50A	0.5 to 4V, Default: 1V
Maximum Output Current, I_{OUT0}	$V_{IN} = 4.5$ to 16V, $V_{OUT} = 0.5\text{V}$ to 4V	50A
Typical Efficiency	$V_{IN} = 12\text{V}$, $V_{OUT} = 1\text{V}$, $I_{OUT} = 50\text{A}$	80.4%
Default Switching Frequency		350kHz

QUICK START PROCEDURE

Demonstration circuit 1989A-A is easy to set up to evaluate the performance of the LTM4676EY. Refer to Figure 2 for the proper measurement equipment setup and follow the procedure below.

1. With power off, connect the input power supply to V_{IN} (4.5V to 16V) and GND (input return).
2. Connect the output load between V_{OUT0} and GND (Initial load: no load).
3. Connect the DVMs to the input and outputs. Set default switch position: SW1: ON; SW2: ON.
4. Turn on the input power supply and check for the proper output voltages. V_{OUT0} should be $1\text{V} \pm 1\%$.
5. Once the proper output voltages are established, adjust the loads within the operating range and observe the output voltage regulation, ripple voltage and other parameters.

6. Connect the dongle and control the output voltages from the GUI. See “LTpowerPlay GUI for the LTM4676 Quick Start Guide” for details.

Note: When measuring the output or input voltage ripple, do not use the long ground lead on the oscilloscope probe. See Figure 3 for the proper scope probe technique. Short, stiff leads need to be soldered to the (+) and (–) terminals of an output capacitor. The probe’s ground ring needs to touch the (–) lead and the probe tip needs to touch the (+) lead.

Connecting a PC to DC1989A-A

You can use a PC to reconfigure the power management features of the LTM4676 such as: nominal V_{OUT} , margin set points, OV/UV limits, temperature fault limits, sequencing parameters, the fault log, fault responses, GPIOs and other functionality. The DC1613A dongle may be plugged when V_{IN} is present.

Table 1. LTM4676 Demo Cards for Up to 130A Point-of-Load Regulation

MAXIMUM OUTPUT CURRENT	NUMBER OF OUTPUT VOLTAGES	NUMBER OF LTM4676 μ MODULE REGULATORS ON THE BOARD	DEMO BOARD NUMBER
13A, 13A	2	1	DC1811A
26A	1	1	DC2087A
50A	1	2	DC1989A-A
75A	1	3	DC1989A-B
100A	1	4	DC1989A-C
100A	1	1 (+ 3x LTM4620A)	DC2106A-A
130A	1	1 (+ 3x LTM4630)	DC2106A-B

QUICK START PROCEDURE

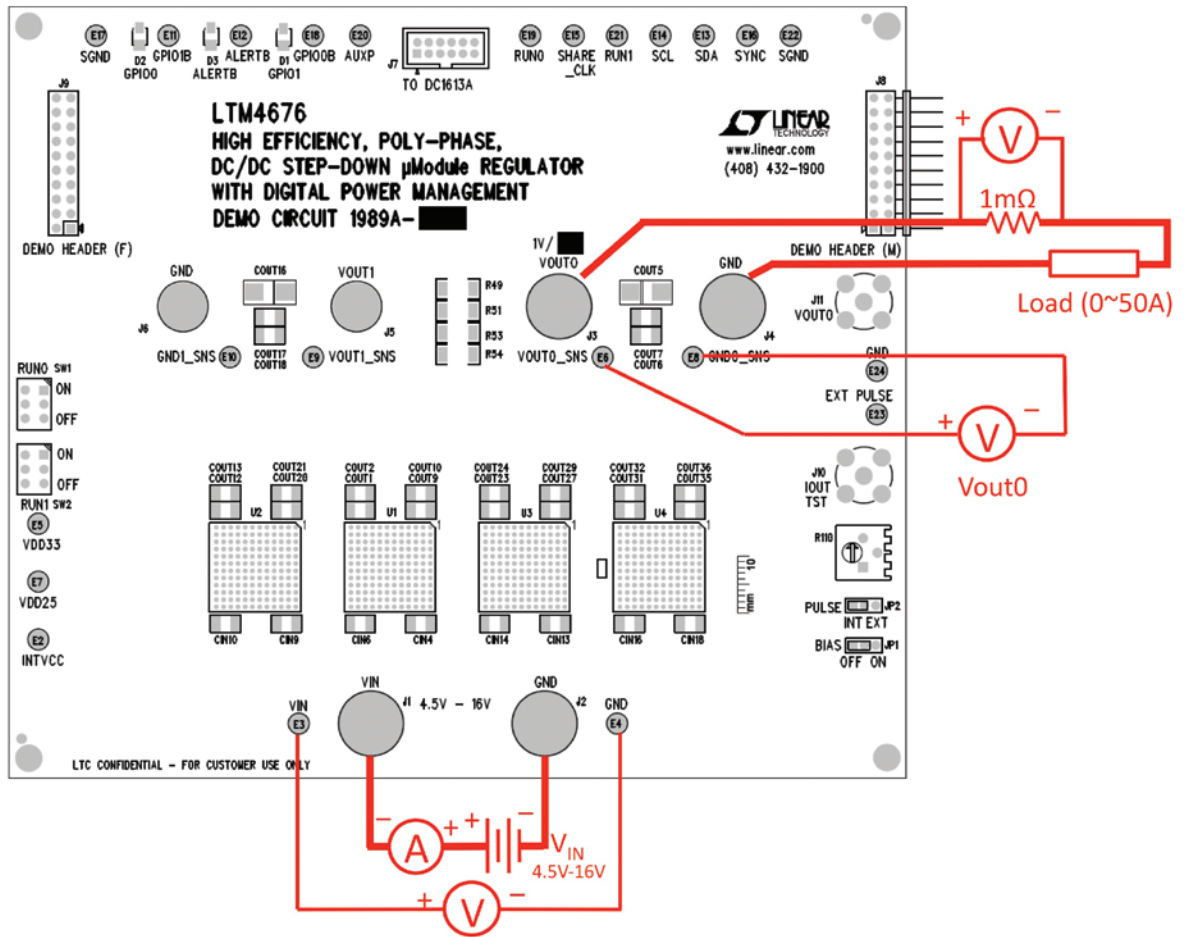


Figure 2. Proper Measurement Equipment Setup

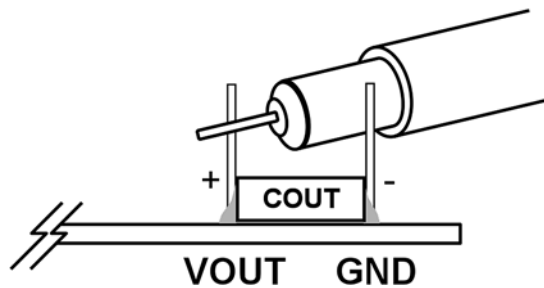


Figure 3. Measuring Output Voltage Ripple

QUICK START PROCEDURE

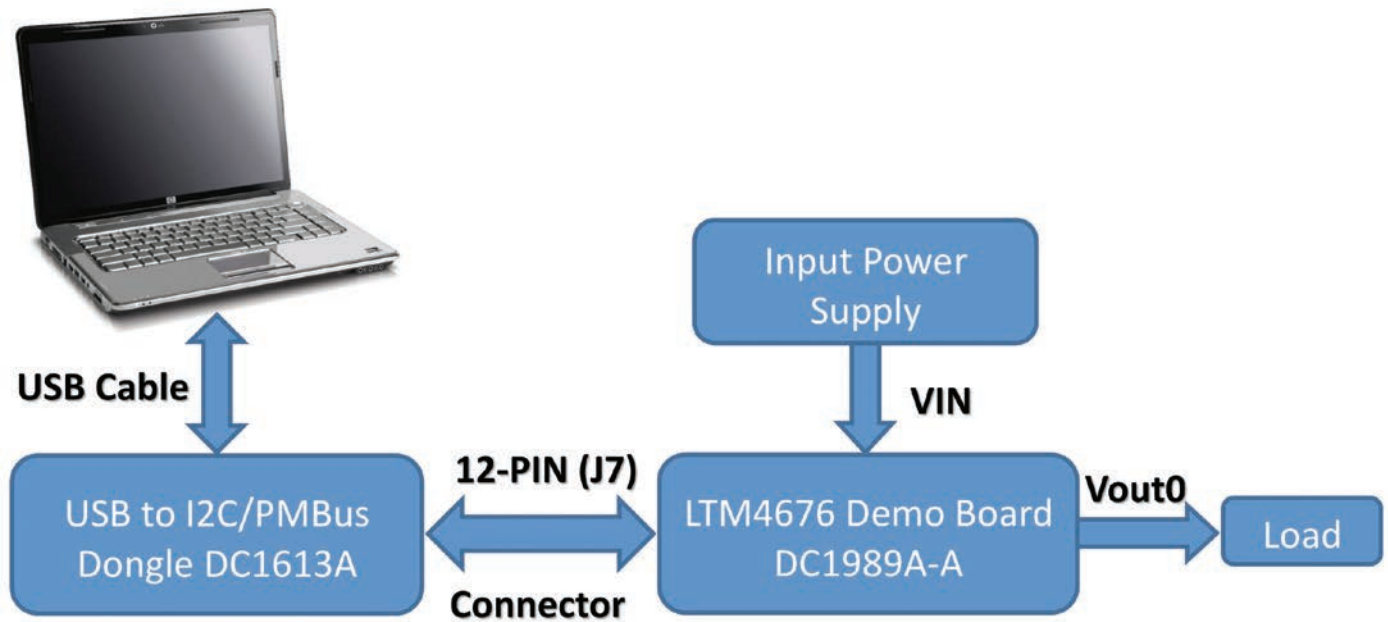


Figure 4. Demo Setup with PC

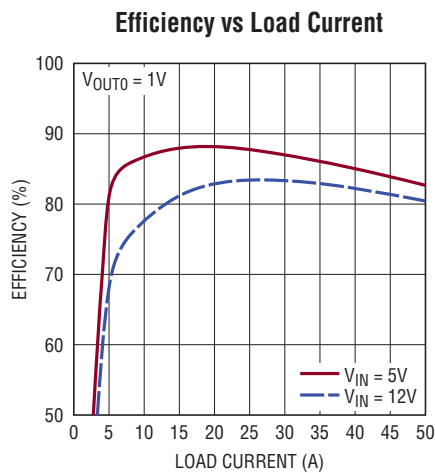


Figure 5. Efficiency vs Load Current at $V_{IN} = 5V$ and $V_{IN} = 12V$

QUICK START PROCEDURE

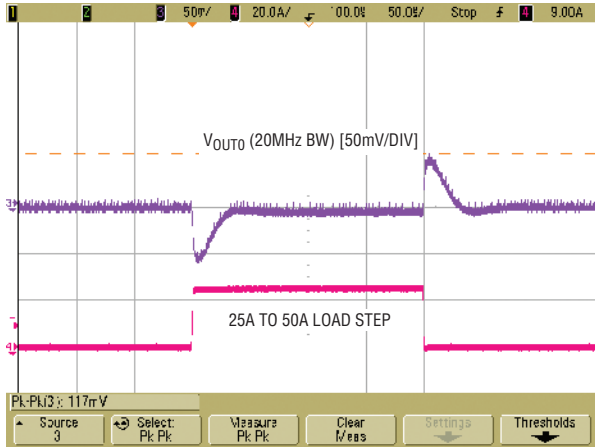


Figure 6. Output Voltage V_{OUTO} vs Load Current (V_{OUTO} RANGE = 0)

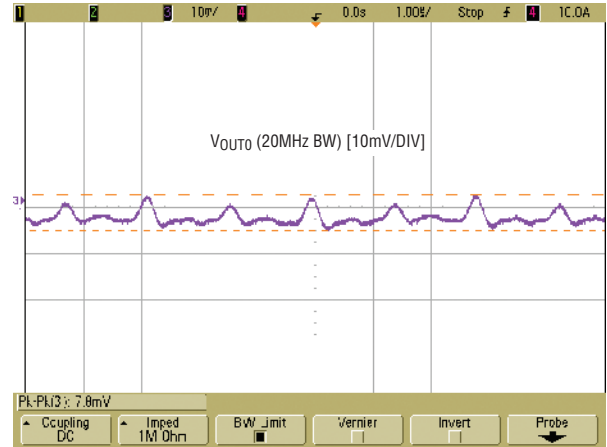


Figure 7. Output Voltage Ripple at $V_{IN} = 12V$, $V_{OUTO} = 1V$, $I_{OUTO} = 50A$

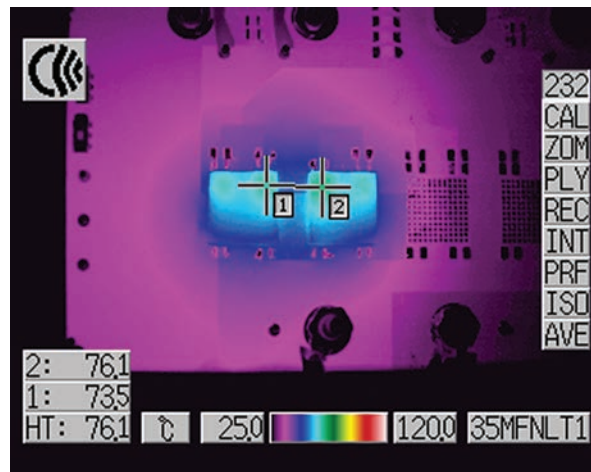


Figure 8. Thermal Performance at $V_{IN} = 12V$, $V_{OUTO} = 1V$, $I_{OUTO} = 50A$, $T_A = 23.8^\circ C$, Air Flow 200LFM

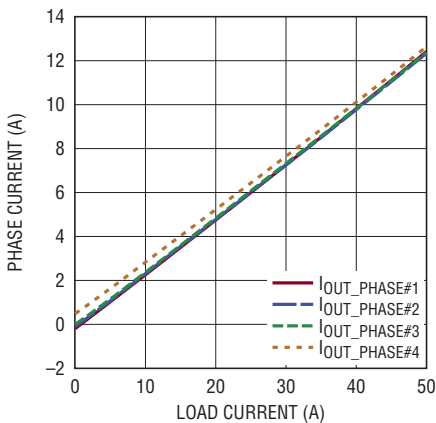


Figure 9. Current Sharing at $V_{IN} = 12V$, $V_{OUTO} = 1V$ (Based on the Current Readback)

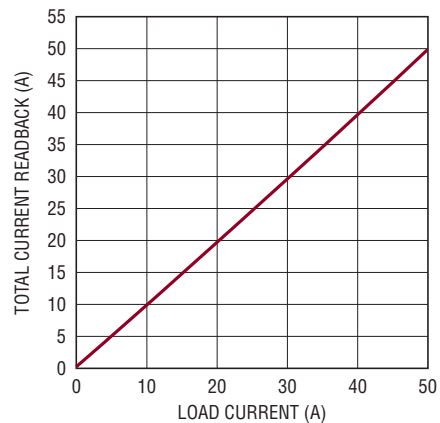


Figure 10. Total Current Readback vs Load Current at $V_{IN} = 12V$, $V_{OUTO} = 1V$

QUICK START PROCEDURE

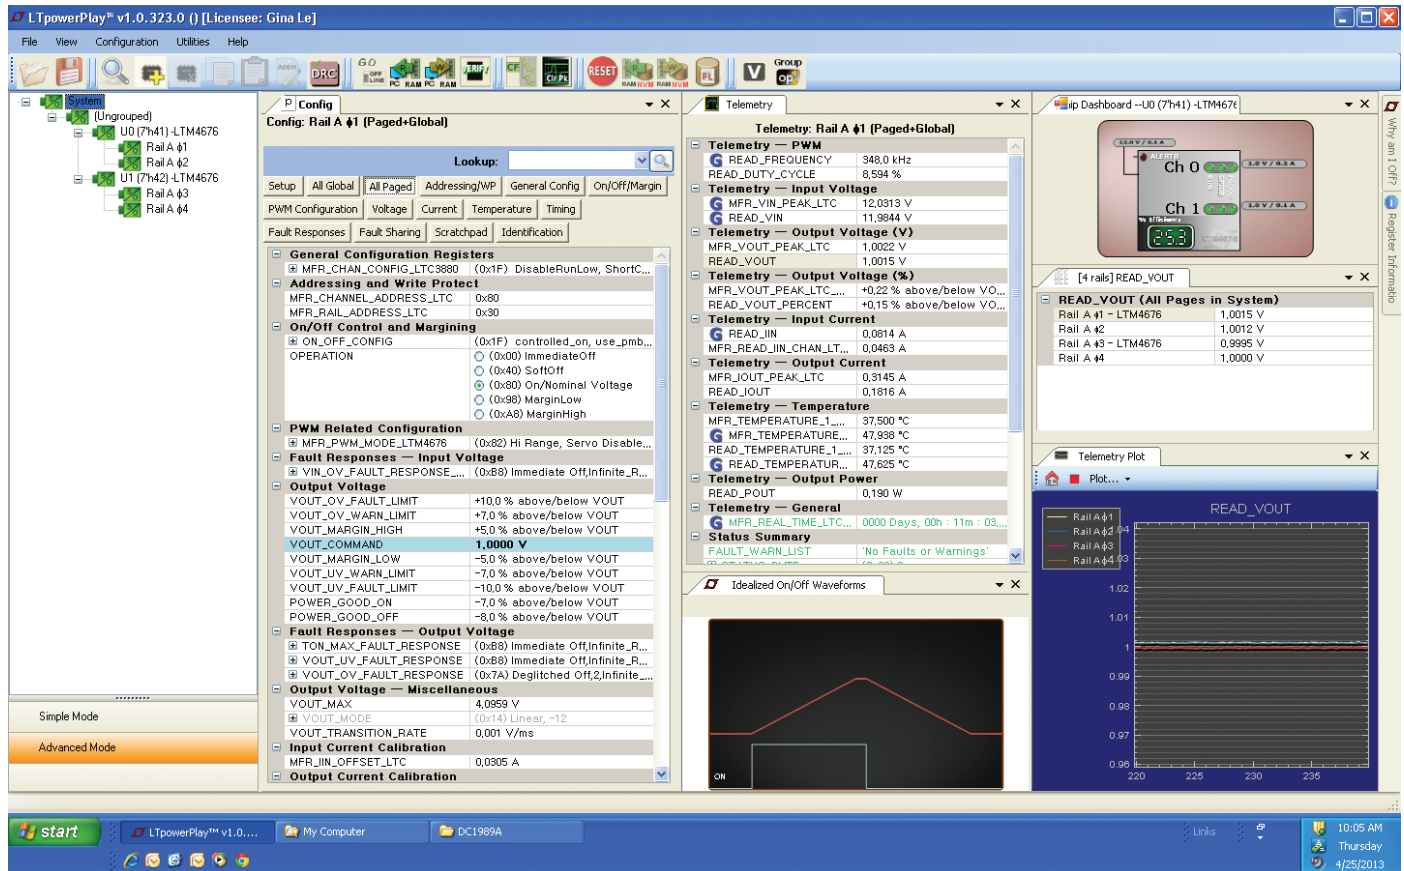


Figure 11. LTpowerPlay Main Interface

LTpowerPlay Software GUI

LTpowerPlay is a powerful Windows based development environment that supports Linear Technology power system management ICs, including the LTM4676, LTC3880, LTC3883, LTC2974 and LTC2978. The software supports a variety of different tasks. You can use LTpowerPlay to evaluate Linear Technology ICs by connecting to a demo board system. LTpowerPlay can also be used in an offline mode (with no hardware present) in order to build a multichip configuration file that can be saved and reloaded at a later time. LTpowerPlay provides unprecedented diagnostic and debug features. It becomes a valuable diagnostic tool during board bring-up to program or tweak the power management scheme in a system, or to diagnose power issues when bringing up rails. LTpowerPlay utilizes the DC1613A USB-to-SMBus controller to communicate with one of many potential targets, including the LTM4676, the

LTC3880 and the LTC3883's demo system, or a customer board. The software also provides an automatic update feature to keep the software current with the latest set of device drivers and documentation. The LTpowerPlay software can be downloaded from:

<http://linear.com/ltpowerplay>

To access technical support documents for LTC Digital Power Products visit Help. View online help on the LTpowerPlay menu.

LTpowerPlay QUICK START PROCEDURE

The following procedure describes how to use LTpowerPlay to monitor and change the settings of LTM4676.


1. Download and install the LTpowerPlay GUI:

<http://linear.com/ltpowerplay>


QUICK START PROCEDURE

2. Launch the LTpowerPlay GUI.

- a. The GUI should automatically identify the DC1989A-A. The system tree on the left hand side should look like this:

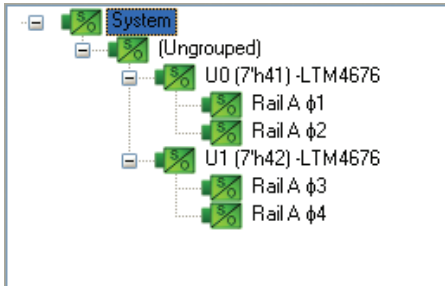


- b. A green message box shows for a few seconds in the lower left hand corner, confirming that LTM4676 is communicating:

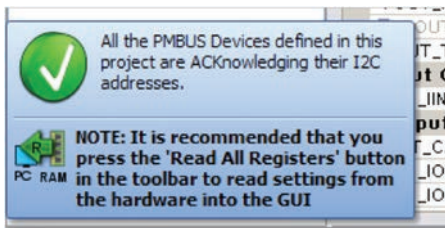

- c. In the Toolbar, click the “R” (RAM to PC) icon to read the RAM from the LTM4676. This reads the configuration from the RAM of LTM4676 and loads it into the GUI.



- d. If you want to change the output voltage to a different value, like 1.5V. In the Config tab, type in 1.5 in the VOUT_COMMAND box, like this:

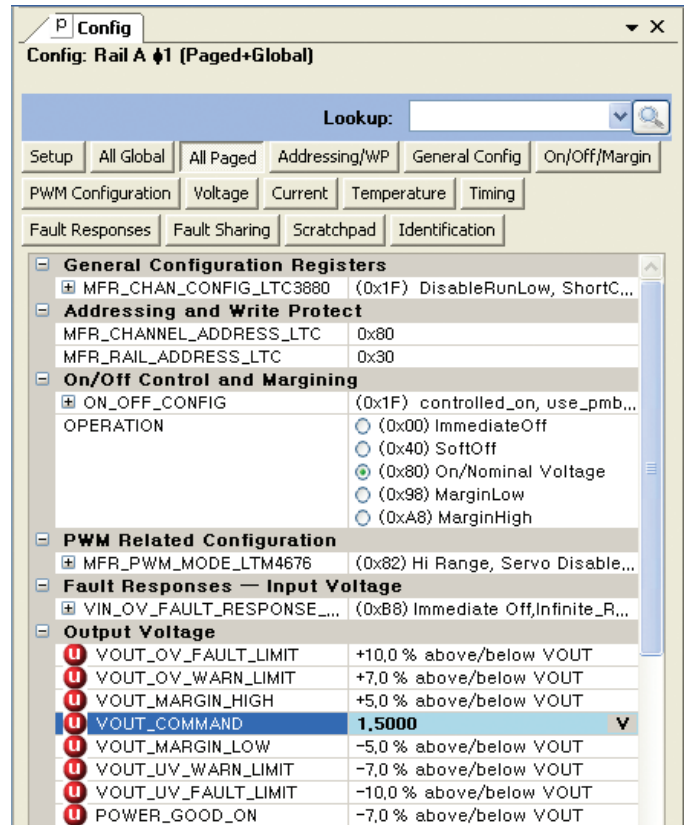

Then, click the “W” (PC to RAM) icon to write these register values to the LTM4676. After finishing this step, you will see the output voltage will change to 1.5V.



If the write is successful, you will see the following message:



- e. You can save the changes into the NVM. In the tool bar, click “RAM to NVM” button, as following



- f. Save the demo board configuration to a (*.proj) file. Click the Save icon and save the file. Name it whatever you want.

DEMO MANUAL DC1989A-A

PARTS LIST

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER
Required Circuit Components				
1	10	CIN1, CIN2, CIN4-CIN11	CAP., X5R, 10µF, 35V, 10%, 1210	AVX, 1210DD106KAT2A
2	1	CIN3	CAP., 150µF, 35V, ALUMINUM ELECTR.,	SUN ELECT., 35CE150AX
3	8	COU1, COU6, COU7, COU9, COU12, COU17, COU18, COU20	CAP., X5R, 100µF, 6.3V, 20% 1210	AVX, 12106D107KAT2A
4	1	C3	CAP., X5R, 220pF, 16V, 10%, 0603	AVX, 0603YD221KAT2A
5	6	COU4, COU5, COU8, COU15, COU16, COU19	CAP., 330µF, 6.3V, POSCAP, D3L	SANYO, 6TPF330M9L
6	1	C7	CAP., X7R, 470pF, 16V, 10%, 0603	AVX, 0603YC471KAT2A
7	1	C4	CAP., X7R, 3.3nF, 16V, 10%, 0603 (3300pF)	AVX, 0603YC332KAT2A
8	2	C5, C12	CAP., X5R, 10nF, 16V, 10%, 0603 (0.01µF)	AVX, 0603YD103KAT2A
9	1	C21	CAP., X5R, 100nF, 16V, 10%, 0603 (0.1µF)	AVX, 0603YD104KAT2A
10	1	C70	CAP., X5R, 1µF, 25V, 10%, 0805	AVX, 08053D105KAT2A
11	2	C65, C68	CAP., X5R, 1µF, 25V, 10%, 1206	AVX, 12063D105KAT2A
12	1	C67	CAP., X7R, 0.1µF, 25V, 10%, 1206	AVX, 12063C104KAT2A
13	1	C64	CAP., X5R, 4.7µF, 25V, 10%, 0603	MURATA, GRM188R61E475KE11D
14	1	C66	CAP., X5R, 0.22µF, 25V, 10%, 0805	AVX, 08053D224KAT2A
15	1	C69	CAP., X7R, 150pF, 25V, 10%, 0603	AVX, 06033C151KAT2A
16	2	D1, D2	LED GREEN S-GW TYPE SMD	PANASONIC LN1371SGTRP
17	1	D3	LED RED S-TYPE GULL WING SMD	PANASONIC LN1271RTR
18	1	J7	CONN HEADER 12POS 2MM STR DL PCB	FCI 98414-G06-12ULF
19	1	J8	PIN HEADER 20 DUAL ROW RA (M)	Mill Max 802-40-020-20-0001
20	1	J9	CONN SOCKET 20 DUAL ROW RA (F)	Mill Max 803-43-020-20-001
21	2	J10, J11	CONN, BNC, 5 PINS	CONNEX, 112404
22	1	Q1	MOSFET P-CH 20V 0.58A SOT-23	VISHAY TP0101K-T1-E3
23	2	Q2, Q3	MOSFET N-CH 60V 115mA SOT-23	FAIRCHILD 2N7002K
24	2	Q11, Q12	N-CHANNEL 30-V MOSFET, TO-252	VISHAY, SUD50N03-09P-E3
25	1	R20	RES., CHIP, 22.6k, 1%, 0603	VISHAY CRCW060322K6FKEA
26	25	R2, R4, R18, R25, R26, R120-R122, R30, R32, R47, R48, R50, R56, R58, R60, R72, R74, R85, R86, R89, R90, R92, R104, R119	RES., CHIP, 0Ω, 1%, 0603	VISHAY CRCW06030000Z0EA
27	4	R49, R51, R53, R54	RES., CHIP, 0Ω, 1%, 2010	VISHAY CRCW20100000Z0EA
28	16	R6, R7, R8, R9, R10, R11, R12, R15, R35, R36, R39, R64, R78, R97, R98, R116	RES., CHIP, 10k, 1%, 0603	VISHAY CRCW060310K0FKEA
29	1	R27	RES., CHIP, 51k, 1%, 0603	VISHAY CRCW060351K0FKEA
30	1	R14	RES., CHIP, 3.4k, 1%, 0603	VISHAY CRCW06033K40FKEA
31	2	R16, R41	RES., CHIP, 10Ω, 1%, 0603	VISHAY CRCW060310R0FKEA
32	1	R112	RES., CHIP, 100Ω, 1%, 0603	VISHAY CRCW0603100RFKEA
33	1	R113	RES., CHIP, 1.4k, 1%, 0603	VISHAY CRCW06031K40FKEA
34	1	R19	RES., CHIP, 787Ω, 1%, 0603	VISHAY CRCW0603787RFKEA
35	1	R40	RES., CHIP, 1.65k, 1%, 0603	VISHAY CRCW06031K65FKEA
36	1	R42	RES., CHIP, 1.65k, 1%, 0603	VISHAY CRCW06031K65FKEA
37	1	R80	RES., CHIP, 2.43k, 1%, 0603	VISHAY CRCW06032K43FKEA
38	2	R95, R96	RES., CHIP, 4.99k, 1%, 0603	VISHAY CRCW06034K99FKEA

PARTS LIST

39	2	R99, R100	RES., CHIP, 200Ω, 1%, 0603	VISHAY CRCW0603200RFKEA
40	1	R101	RES., CHIP, 127Ω, 1%, 0603	VISHAY CRCW0603127RFKEA
41	1	R123	RES., CHIP, 1M, 1%, 0603	VISHAY CRCW06031M00FKEA
42	1	R105	RES., CHIP, 681k, 1%, 0603	VISHAY CRCW0603681KFKEA
43	1	R106	RES., CHIP, 3.3Ω, 1%, 0603	VISHAY CRCW06033R30FKEA
44	1	R107	RES., CHIP, 82.5Ω, 1%, 0603	VISHAY CRCW060382R5FKEA
45	2	R108, R118	RES., CHIP, 0.01Ω, 1%, 2010	VISHAY, WSL2010R0100FEA
46	1	R109	RES., CHIP, 100k, 1%, 0603	VISHAY CRCW0603100KFKEA
47	1	R110	TRIMMING POTENTIOMETER, 5k	BOURNS, 3386P-1-502LF
48	2	R111, R115	RES., CHIP, 20k, 1%, 0603	VISHAY CRCW060320K0FKEA
49	1	R114	RES., CHIP, 154k, 1%, 0603	VISHAY CRCW0603154KFKEA
50	1	R117	RES., CHIP, 2, 1%, 0603	VISHAY CRCW06032R00FKEA
51	2	SW1, SW2	CONNECTOR, SUB MINIATURE SLIDE SWITCHES	C&K., JS202011CQN
52	2	U1, U2	IC, LTM4676EY	LINEAR TECH. LTM4676EY
53	1	U5	IC, 24LC025T-E/OT SOT-23 6-LEAD	MICROCHIP, 24LC025T-E/OT
54	1	U6	IC., LT1129CS8-5, S8	LINEAR TECH. LT1129CS8-5
55	1	U7	IC., LTC6992-1, S6-TSOT	LINEAR TECH. LTC6992CS6-1
56	1	U8	IC., LT1803IS5, S5-TSOT	LINEAR TECH. LT1803IS5

Additional Demo Board Circuit Components


1	0	CIN12-CIN15-CIN19 (OPT)	CAP., OPTIONAL	
2	0	C1, COUT2, C2, COUT3 (OPT) C6, C8, C9, COUT10, C10, COUT11, C11, COUT13, C13, C14, C15, C16, C17, C18, C19, C20, COUT4, COUT14, COUT24, COUT23, COUT26, COUT21, COUT22, COUT25, COUT27, COUT28, COUT29, COUT30, COUT31, COUT32, COUT35, COUT33, COUT36, COUT37, COUT38, COUT34	CAP., OPTIONAL	
3	0	R1, R3, R5, R17, R34, R31, R33, R29, R38, R52, R55, R57, R59, R61, R28, R63, R71, R73, R75, R77, R88, R91, R93, R94, R102, R103, R13, R37, R62, R76, R79, R21, R22, R23, R24, R43, R44, R45, R46, R67, R66, R65, R68, R69, R68, R69, R70, R81, R82, R83, R84, R87	RES., OPTIONAL	
4	0	U3, U4 (OPT)	OPTIONAL	

Hardware: For Demo Board Only


1	23	E2-E24	TESTPOINT, TURRET, 0.062"	MILL-MAX, 2308-2-00-80-00-00-07-0
2	2	JP1, JP2	HEADER, 1X3 PIN 0.079" SINGLE ROW	SULLIN, NRPN031PAEN-RC
3	2	XJP1, XJP2	SHUNT, 0.079" CENTER	SAMTEC, 2SN-KB-G
4	6	J1, J2, J3, J4, J5, J6	STUD, TESTPIN	PEM KFH-032-10
5	12	J1, J2, J3, J4, J5, J6 (x2)	NUT, BRASS 10-32	ANY #10-32M/S
6	6	J1, J2, J3, J4, J5, J6	RING, LUG #10	KEYSTONE #10
7	6	J1, J2, J3, J4, J5, J6	WASHER, TIN PLATED BRASS	10EXT
8	4	(STAND-OFF)	STAND-OFF, NYLON 0.50" TALL	KEYSTONE, 8833(SNAP ON)
9	1		FAB, PRINTED CIRCUIT BOARD	DEMO CIRCUIT 1989A

DEMO MANUAL DC1989A-A


SCHEMATIC DIAGRAM

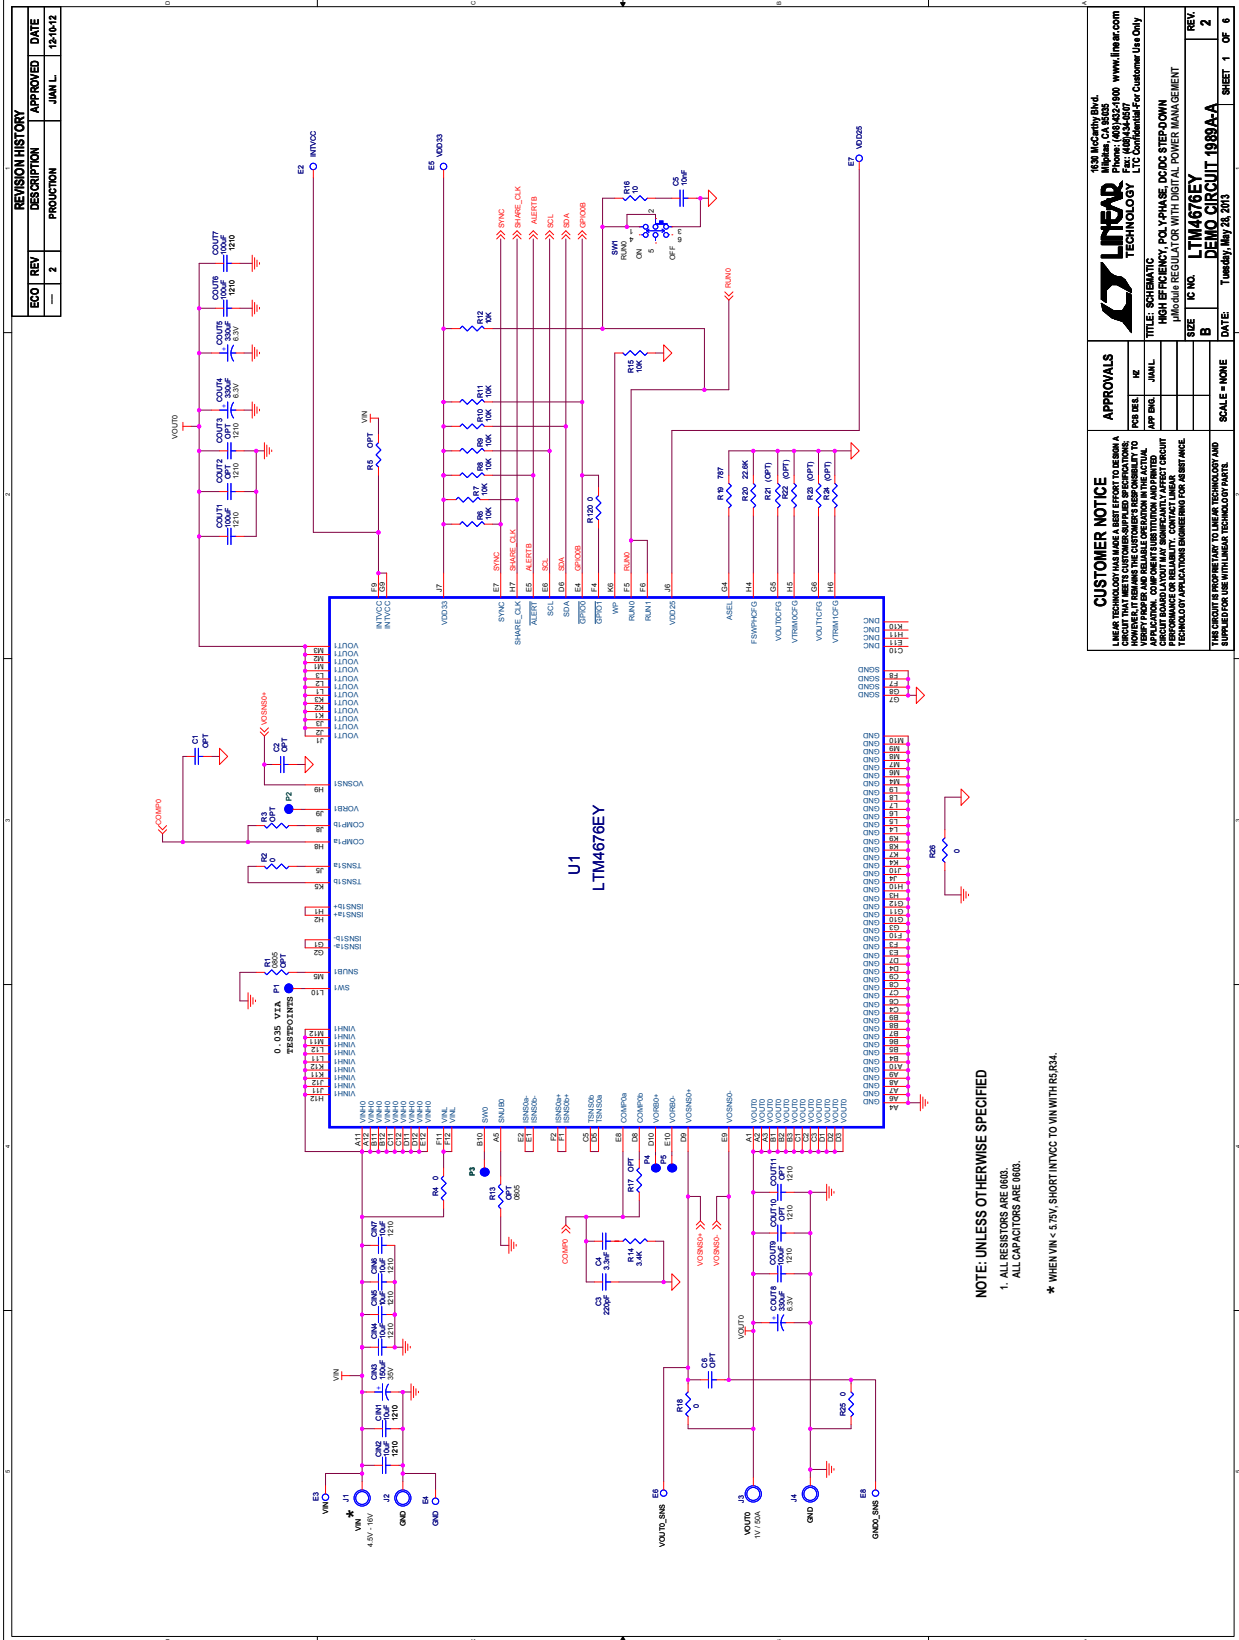

SCHEMATIC DIAGRAM

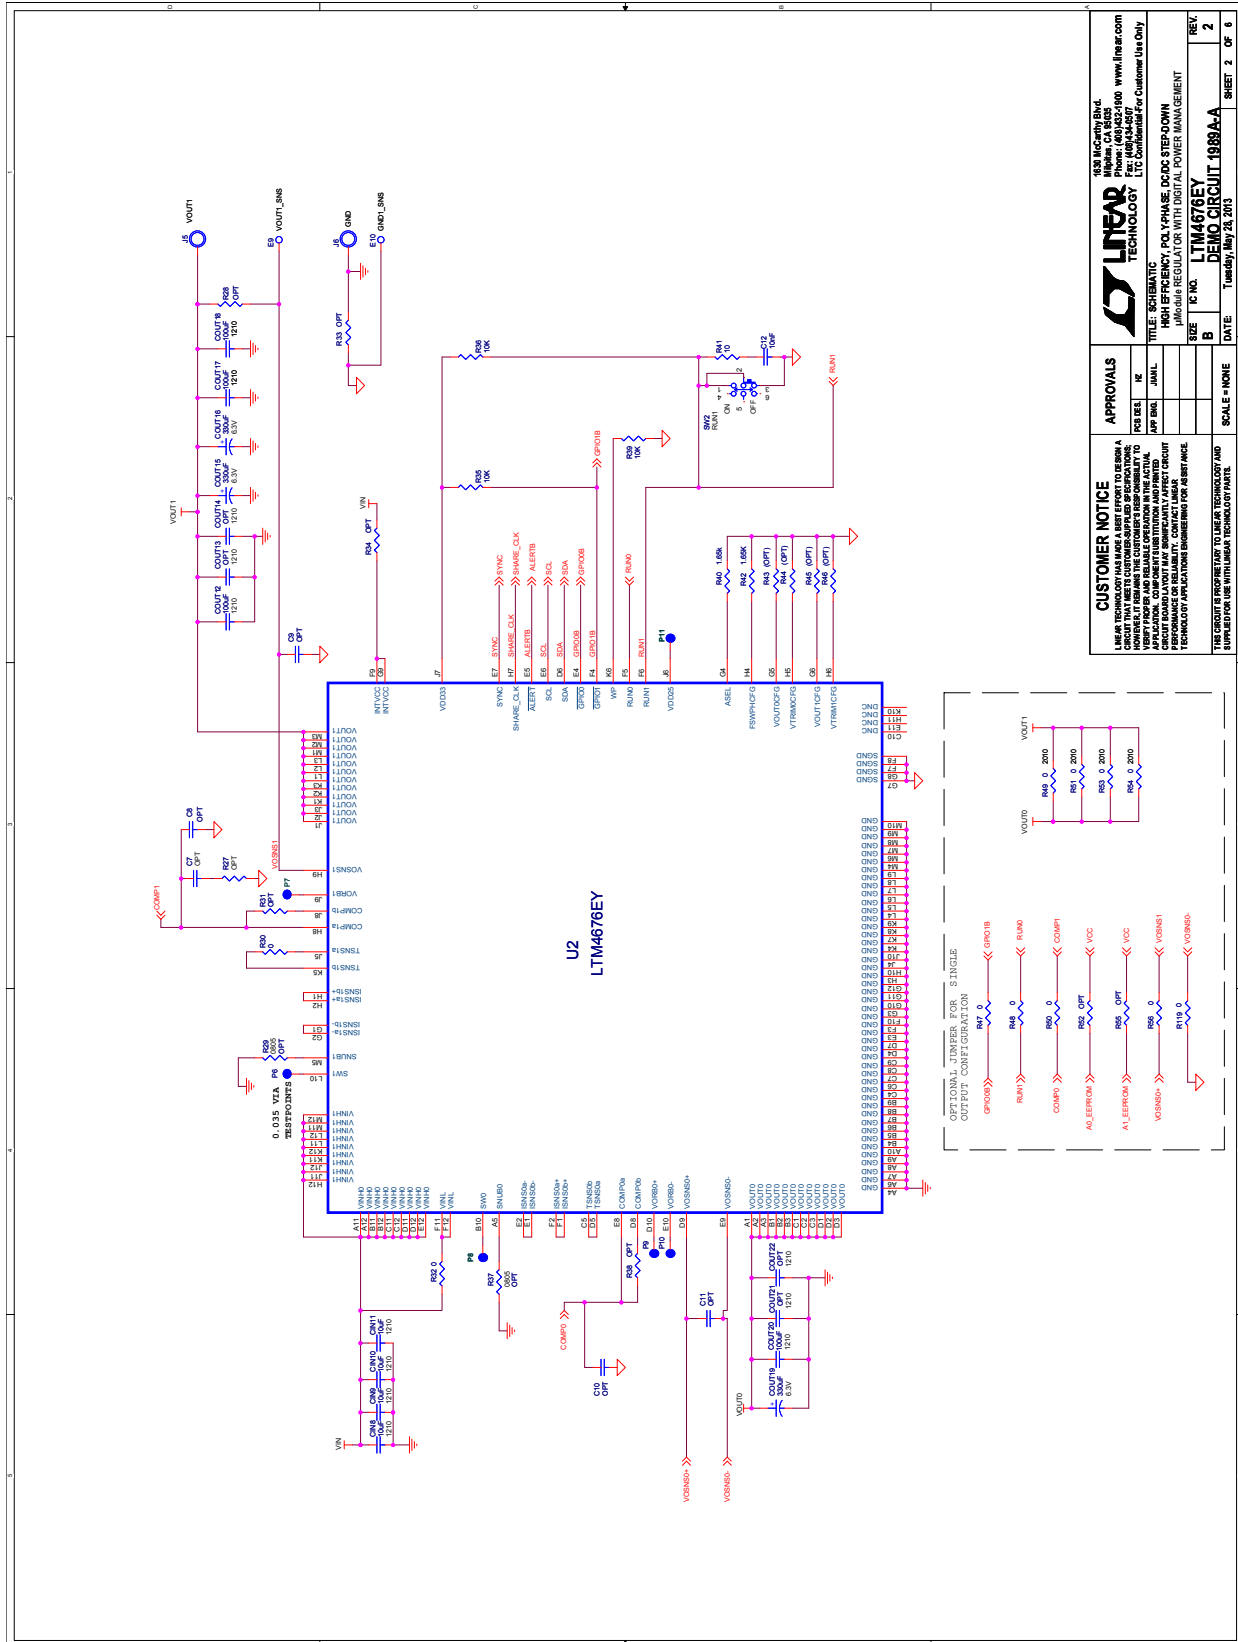

SCHEMATIC DIAGRAM

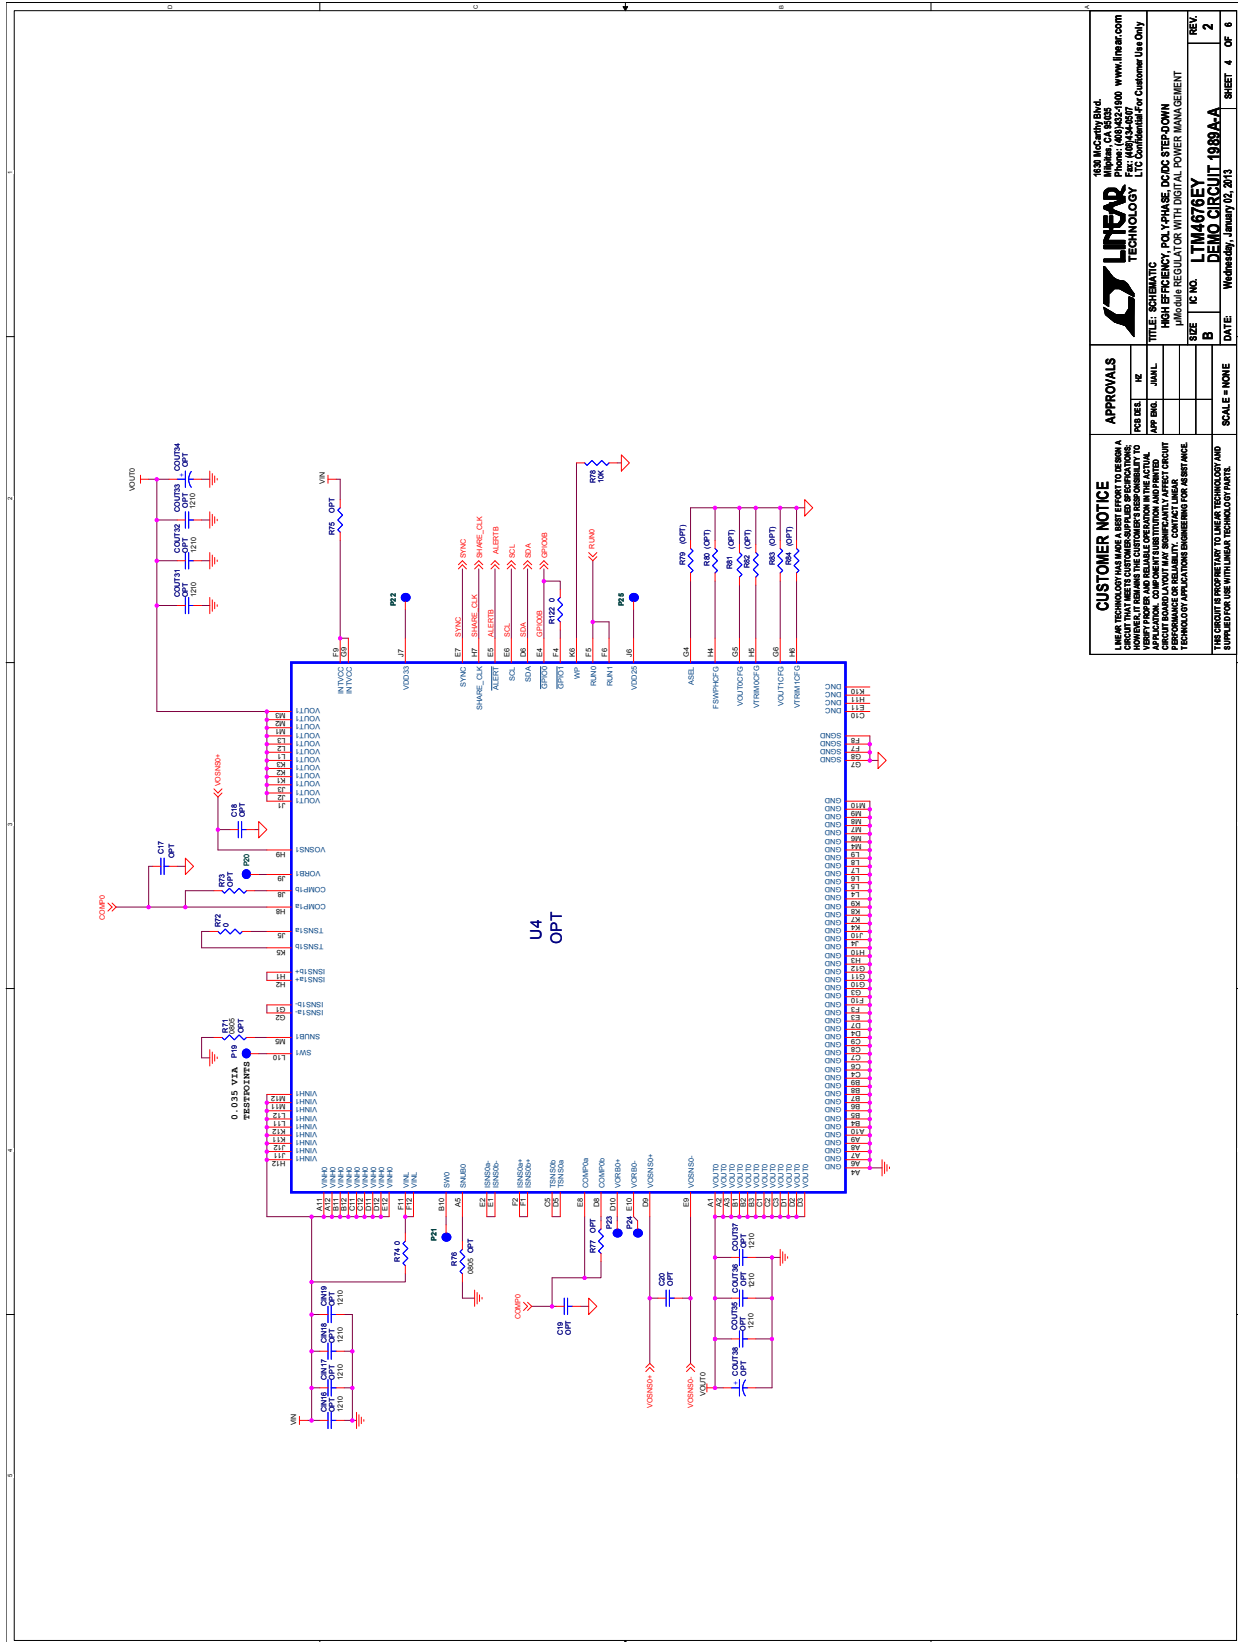

CUSTOMER NOTICE
 LINEAR TECHNOLOGY MAKES A BEST EFFORT TO DESIGN A CIRCUIT THAT MEETS CUSTOMER-SUPPLIED SPECIFICATIONS. CUSTOMER PERFORMANCE IS THE RESPONSIBILITY OF THE CUSTOMER. CUSTOMER PERFORMANCE IS SUBJECT TO CHANGE WITHOUT NOTICE. CUSTOMER PERFORMANCE IS SUBJECT TO CHANGE WITHOUT NOTICE. CUSTOMER PERFORMANCE IS SUBJECT TO CHANGE WITHOUT NOTICE.

APPROVALS

DESIGN	IN
APP. INCL.	JAIL
SCALE	NONE

LINEAR TECHNOLOGY
 1630 McCarty Blvd.
 Fremont, CA 94538-4000 www.linear.com
 Tel: (415) 564-2000 Fax: (415) 564-2007
 LIC: California P-C Customer (JA-01)

TITLE: SCHEMATIC
 HIGH EFFICIENCY, POLY-PHASE, DCM, STEP-DOWN
 μModule REGULATOR WITH DIGITAL POWER MANAGEMENT

SIZE IC NO. **LTM4676EY**

DATE Wednesday, January 02, 2013

DEMO CIRCUIT: 1989A-A

REV. 2

SHEET 4 OF 6

DEMO MANUAL DC1989A-A

DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following **AS IS** conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. **LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.**

LTC currently services a variety of customers for products around the world, and therefore this transaction **is not exclusive**.

Please read the DEMO BOARD manual prior to handling the product. Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged.**

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology
1630 McCarthy Blvd.
Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation