


Ultrasonic Sensor M30 - Straight or 90° angled version

Plastic: **XX•30P2•M12**
 Ni-plated Brass : **XX•30B2•M12**
 Stainless steel ...: **XX•30S2•M12**

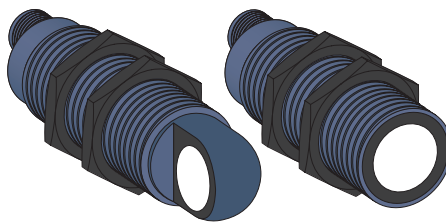



⚠ WARNING

UNINTENDED EQUIPMENT OPERATION


Do not use this product to detect objects within the deadband (blind zone) or outside the sensing window.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

<http://qr.tesensors.com/XX0003>


Dimensions

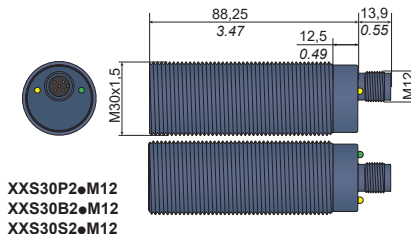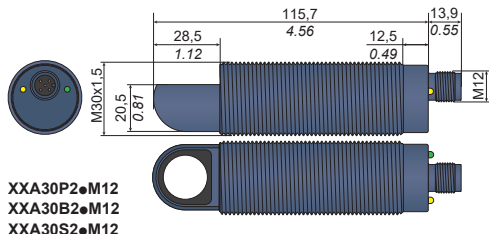


LEDs



Connectors wiring

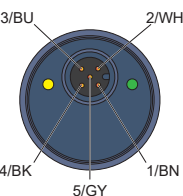


Pin Number	Wire Color	Description
①	BN: Brown	+12...24 Vdc
②	WH: White	Input teach
③	BU: Blue	0 Vdc
④	BK: Black	Output
⑤	GY: Grey	Synchronization

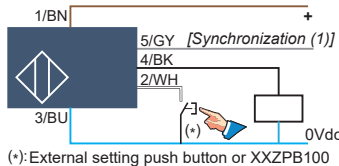



Note :
 (1): See synchronization section

Tightening torque

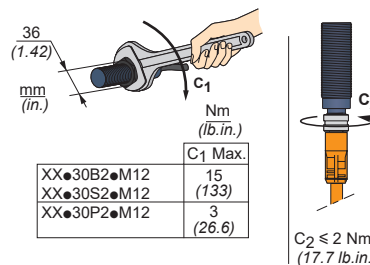

Wiring diagrams

Analog Output

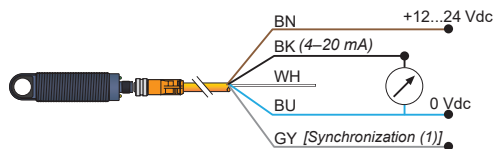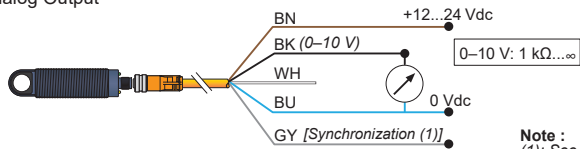


Note :
 (1): See synchronization section

Sensor type	4-20 mA	0-10 V
Rated supply voltage	12...24 Vdc Min = 10 Vdc Max = 30 Vdc	24 Vdc Min = 14 Vdc Max = 30 Vdc
	with reverse polarity protection	

4-20 mA:
 - For 12 Vdc, Load $\leq 250 \Omega$
 - For 24 Vdc, Load $\leq 850 \Omega$


Synchronization (side by side application)

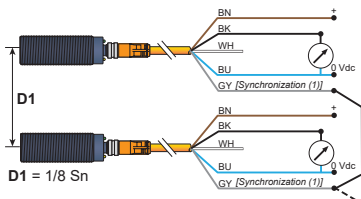

Synchronization operation

Up to 8 sensors can be synchronized to operate side by side by electrically connecting all pin no.5 (grey) wires together. To synchronize more than 8 sensors a PLC output can be used (the pins no.5 must be simultaneously driven by the rising edge of a pulse).
NOTE (1): The pulse must be at a high level of 12 to 24 Vdc and a low level of 0 to 2Vdc. All sensors should be the same model and have the same cycle time setting. The high pulse width should be 1 ms, and the low should be at least as long as the sensor cycle time setting (default cycle times: 2m sn = 30 ms).
NOTE (2): When the pin no.5 is at low level or at high level, object sensing is suspended and the sensor output holds the last valid output state before suspension.


Multiplexing (face to face application)



This function can be used to avoid disturbances when operating sensors face to face. A unique address must be assigned to each sensor (or group of sensors) with the use of the XX Configuration Software (prior to wiring the sensors), and all pin no.5 (grey) wires must be connected together.
 For sequencing with a PLC, please contact your local Telemecanique Sensors Technical Support Group.


Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.
 No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.
 © 2019 Schneider Electric. "All Rights Reserved."

Tilt angle

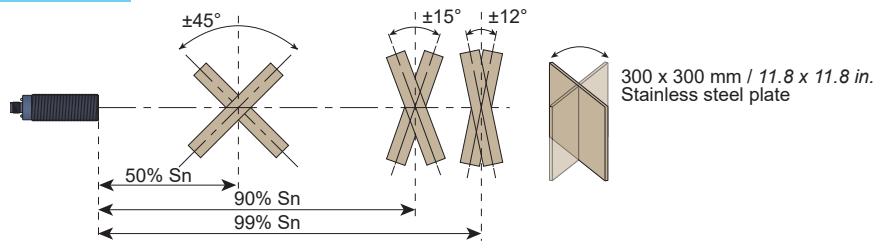


Detection curves for different objects


Detection curve with 100 x 100 mm square target

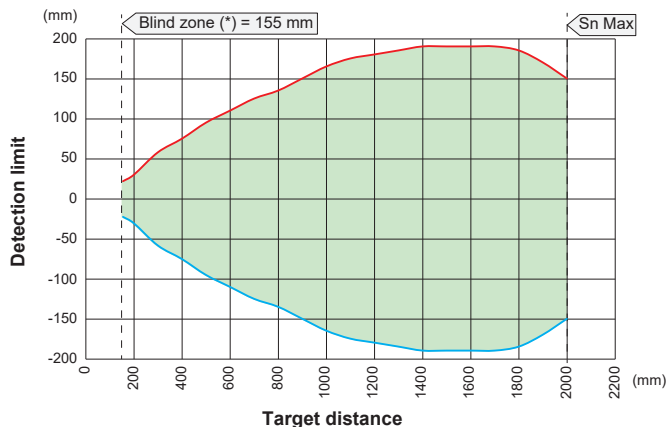

Detection curve with round bar

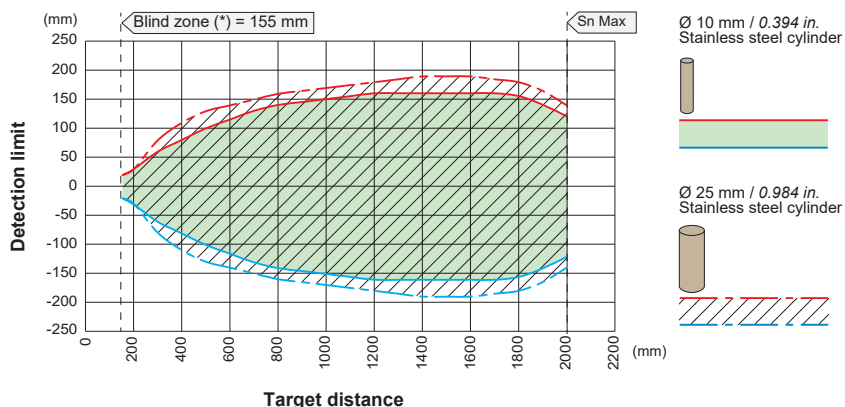


Wiring accessory

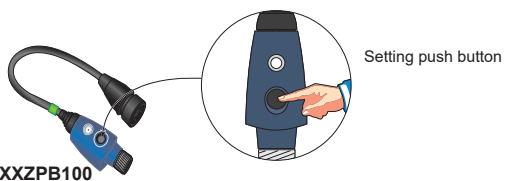


Cables

5-pin, 5-wire
(for synchronization)



XZCPV11V12L2 (2 m / 6.6 ft)
XZCPV11V12L5 (5 m / 16.4 ft)
XZCPV11V12L10 (10 m / 32.8 ft)




XZCPV12V12L2 (2 m / 6.6 ft)
XZCPV12V12L5 (5 m / 16.4 ft)
XZCPV12V12L10 (10 m / 32.8 ft)

5-pin, 4-wire
(no synchronization)

XZCP1141L2 (2 m / 6.6 ft)
XZCP1141L5 (5 m / 16.4 ft)
XZCP1141L10 (10 m / 32.8 ft)

XZCP1241L2 (2 m / 6.6 ft)
XZCP1241L5 (5 m / 16.4 ft)
XZCP1241L10 (10 m / 32.8 ft)

M12 connectors




XZCC12FDM50B




XZCC12FCM50B


Mounting accessory

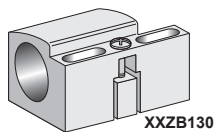

Recommended to use for sensor applications at
operating temperatures -25 ... 0 °C (-13...32 °F)

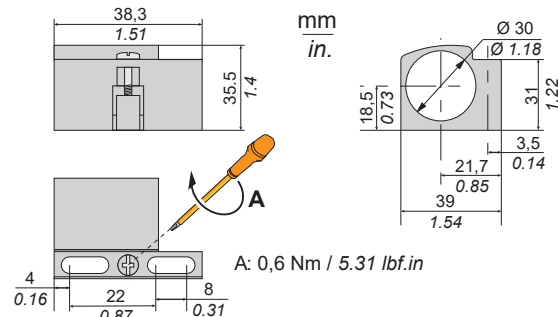


Sensor setting with teach procedure

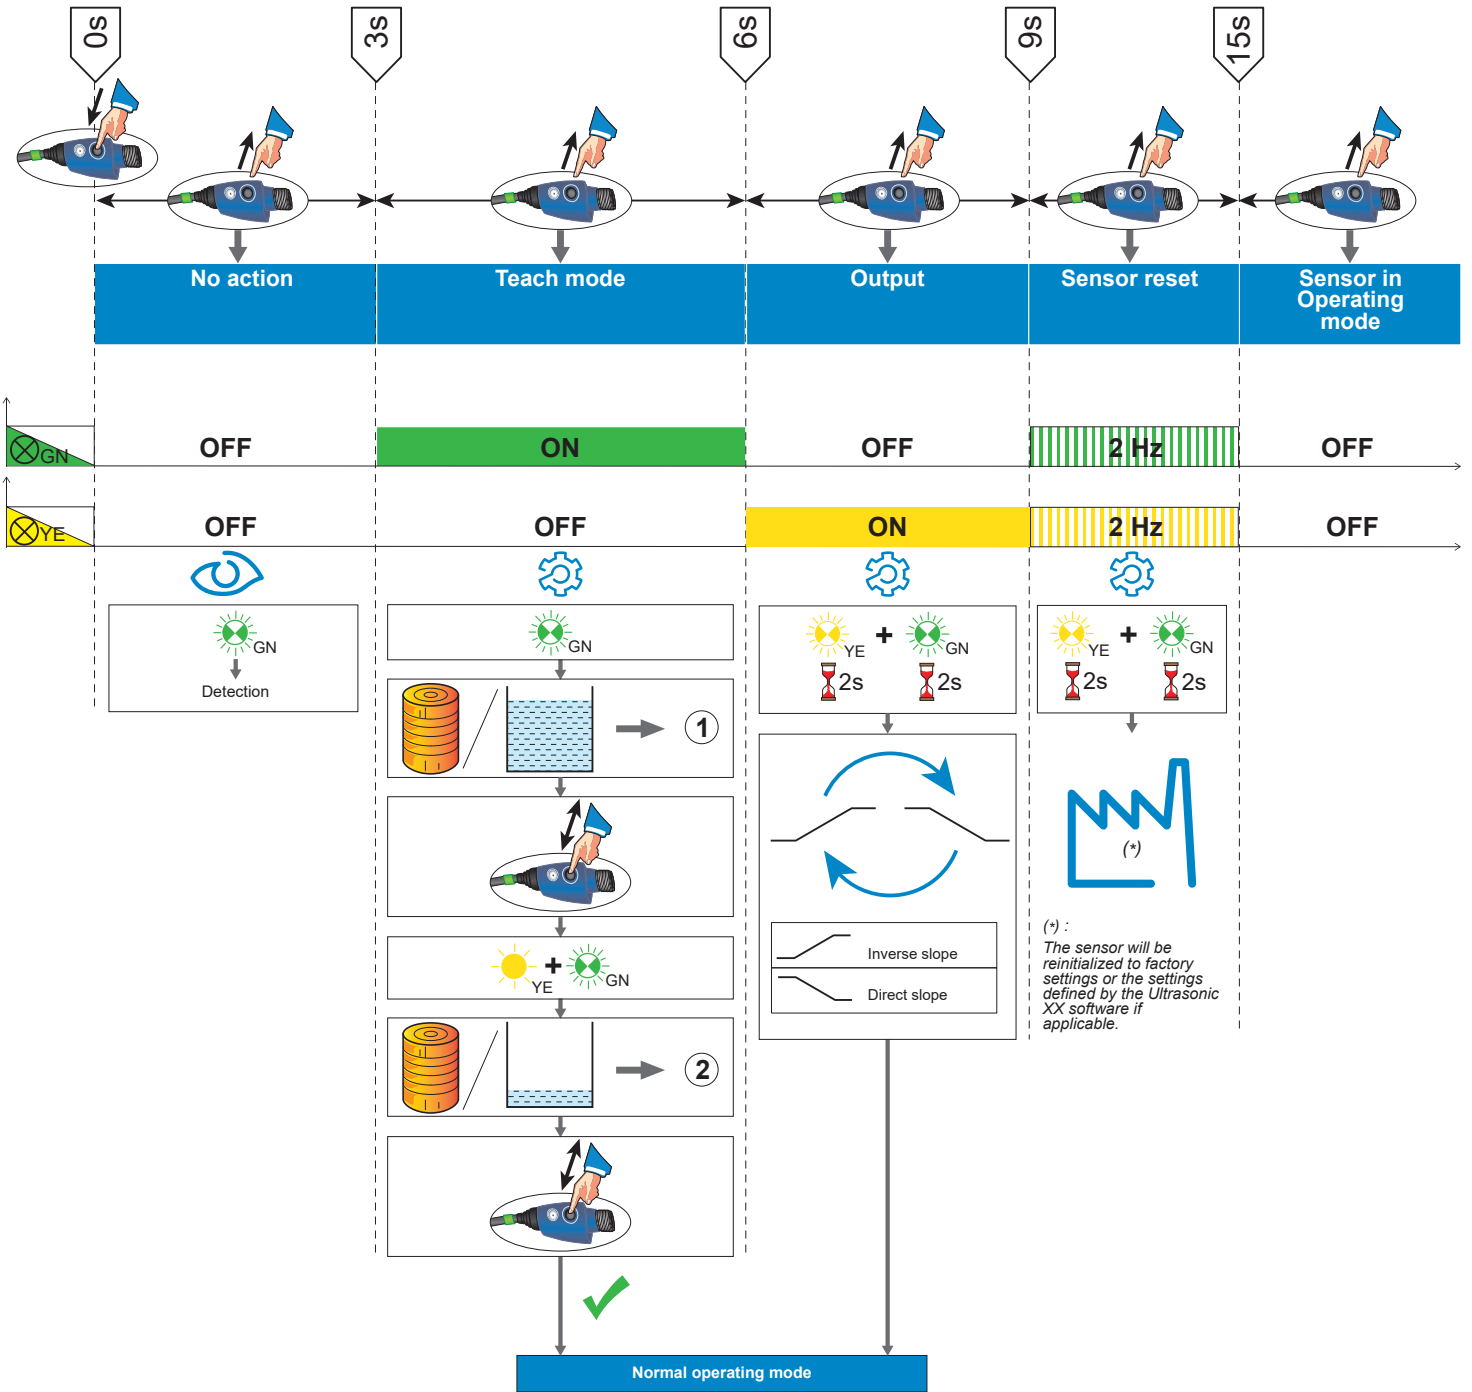

(*) :
The sensor will be reinitialized to factory settings or the settings defined by the Ultrasonic XX software if applicable.

Legend :

	OFF		Press the teach button		Factory setting (*)
	ON		Release the teach button		Object
	Flashing		Press and release briefly		Level
	GN: Green YE: Yellow		Setting		
	Processing				
	Setting error				
	Near limit				
	Far limit				

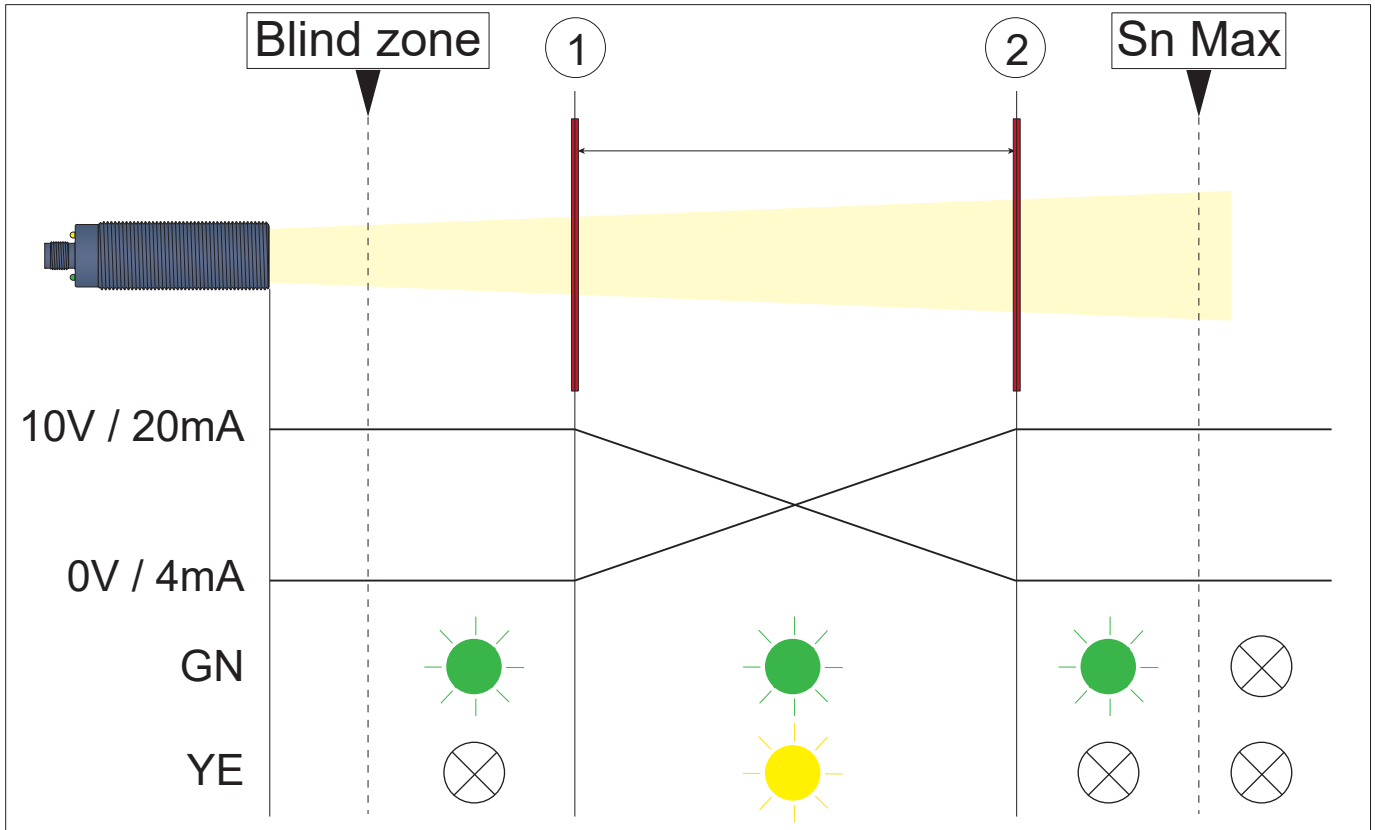

Scan the Qr-code to access this Instruction Sheet in different languages.



Note :
 You can download this Instruction Sheet in different languages from our website at: www.tesensors.com
 We welcome your comments about this document. You can reach us by e-mail at: customer-support@tesensors.com

<http://qr.tesensors.com/XX0003>